



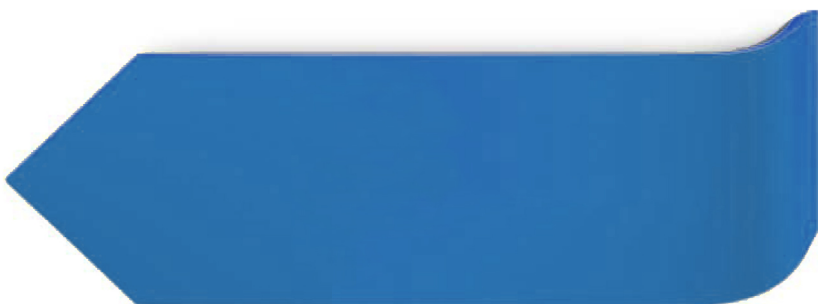

STÖBER

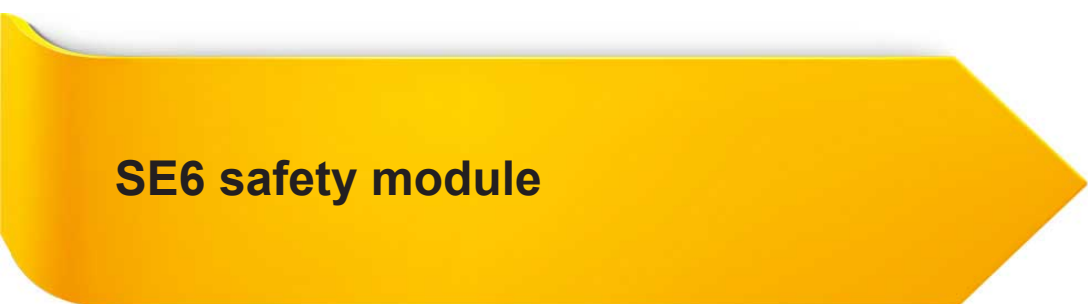

SE6 safety module



PILZ

THE SPIRIT OF SAFETY

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

Section 1	Introduction	6
	1.1 Collaboration with STÖBER ANTRIEBSTECHNIK GmbH + Co. KG	6
	1.2 Validity of documentation	7
	1.3 Retaining the documentation	7
	1.4 Disclaimer	7
	1.5 Further information	8
	1.6 Definition of symbols	9
Section 2	Overview	10
	2.1 Structure	10
	2.2 Safety functions	10
	2.3 Features	11
	2.4 Terminal list SD6, Size 0	12
	2.5 Terminal list SD6, Size 1	13
	2.6 Terminal list SD6, Size 2	14
	2.7 Terminal list SD6, Size 3	15
Section 3	Safety	17
	3.1 Intended use	17
	3.1.1 Permitted motor types	18
	3.1.2 Approved motor encoders	18
	3.1.3 Approved external encoders	19
	3.2 Safety regulations	20
	3.2.1 Safety assessment	20
	3.2.2 Use of qualified personnel	20
	3.2.3 Warranty and liability	20
	3.2.4 Disposal	20
	3.3 Error types, error detection and error reaction	21
	3.4 Data backup and data security	21
Section 4	Function description	23
	4.1 Overview	23
	4.2 General definitions	26
	4.3 Activation of safety functions	27
	4.4 Feedback from the safety functions	29
	4.5 Digital inputs and outputs	32
	4.5.1 Inputs	32
	4.5.2 Outputs	34
	4.5.2.1 Safe 1-pole outputs	34
	4.5.2.2 Non-safe 1-pole outputs	39
	4.5.2.3 2-pole outputs	39
	4.6 Motor encoder fault detection	43
	4.6.1 Options	43
	4.6.2 Distance to fault detection	44
	4.6.3 Maximum achievable safety integrity	44
	4.7 Reaction times	45
	4.8 Safe restart of the machine	49

4.9	Resetting (RESET) the safety module	50
4.10	Application of the SBC and SBT safe brake functions	56
4.10.1	Definition of the "load suspension" safety function	56
4.10.2	Standby current-operated, mechanical brakes	57
4.10.2.1	Safety components	57
4.10.2.2	Standard components	58
4.10.2.3	Motor brakes	58
4.10.3	Options of "Load suspension" implementation	58
4.10.3.1	Performance trigger of standby current-activated mechanical brakes by the safety module	58
4.10.3.2	Triggering an external safe system	59
4.10.4	Examples	60
4.10.4.1	"Load suspension" with an external brake (standard component)	61
4.10.4.2	"Load suspension" with a motor brake (standard component)	63
4.10.4.3	"Load suspension" with an external safety brake (safety component)	65
4.10.4.4	"Load suspension" by triggering an external system	67
4.10.4.5	"Load suspension" with two brakes	69
4.10.4.6	"Load suspension" with a motor brake and an external system	71
4.10.5	Procedure when determining the safety integrity	72
4.11	Safety functions	73
4.11.1	Permanent monitoring (optional)	75
4.11.2	Safe torque off, STO	77
4.11.3	Safe stop 1 (SS1)	80
4.11.4	Safe Stop 2 (SS2)	89
4.11.5	Safe Direction (SDI) and Safely Monitored Direction (SDI-M)	95
4.11.6	Safely Limited Increment (SLI) and Safely Monitored Increment (SLI-M)	99
4.11.7	Safely Limited Speed (SLS) and Safely Monitored Speed (SLS-M)	103
4.11.8	Safe Operating Stop (SOS) and Safely Monitored Operating Stop (SOS-M)	108
4.11.9	Safe Speed Range (SSR) and Safely Monitored Speed Range (SSR-M)	112
4.11.10	Safely Limited Position (SLP) and Safely Monitored Position (SLP-M)	117
4.11.11	Safe Brake Control (SBC)	122
4.11.11.1	Combination options for SBC 1-pole and SBC 2-pole	126
4.11.11.2	SBC with 1-pole output for controlling an external safe device	127
4.11.11.3	SBC with 2-pole output for direct power control of a brake	127
4.11.12	Safe Brake Test (SBT)	128
4.11.13	Safe Restart Lock (SRL)	137
4.11.14	Safe Status Output (SSO)	140
4.11.15	Hysteresis for monitoring functions	143
4.12	Configuration	147
Section 5	Wiring	149
5.1	General wiring guidelines	149
5.2	Connector pin assignment	151
5.3	Digital inputs	152
5.4	Digital outputs	153
5.4.1	Supply voltage	153
5.4.2	Single-pole outputs	155
5.4.3	Dual-pole outputs	155

5.5	External encoder	156
5.5.1	Supply voltage	156
5.5.2	Incremental encoder with TTL signal	157
5.5.3	Absolute encoder with SSI interface	158
Section 6	Commissioning	159
6.1	Safety guidelines	159
6.2	Initial commissioning	160
6.3	Restarting after device replacement	163
6.4	Safety checks	166
Section 7	Safety module operation	168
7.1	Operating states	169
7.2	RUNUP (booting)	172
7.3	RESTART	172
7.4	Display elements	173
7.5	Messages	175
7.6	Diagnostic tests	175
Section 8	Change, maintenance, decommissioning	176
8.1	Change	176
8.2	Maintenance	177
8.3	Decommissioning	177
Section 9	Field bus communication	178
Section 10	Technical details	179
10.1	Safety characteristic data	181
10.2	Classification according to ZVEI, CB24I	185
Section 11	EC declaration of conformity	187
Section	Glossary	188

1 Introduction

1.1 Collaboration with STÖBER ANTRIEBSTECHNIK GmbH + Co. KG

The SE6 safety module and its documentation were developed in collaboration with STÖBER ANTRIEBSTECHNIK GmbH + Co. KG.

The manuals will be referred to as operating manual hereafter.

Consulting, service, address

STOBER would be happy to help you!

STOBER offer a wealth of information and services to go with our products on our website:
<http://www.stoeber.en/en/service>

For additional or personalized information, contact the STOBER consultation and support services:
<http://www.stoeber.en/en/support>

Do you need the STOBER first-level support?

Tel +49 7231 582-3060
applications@stoeber.de

Call the STOBER 24-hour service hotline:

Tel +49 7231 582-3000

STÖBER ANTRIEBSTECHNIK GmbH + Co. KG
Kieselbronner Straße 12
75177 Pforzheim, Germany

1.2 Validity of documentation

This documentation is valid for the safety module SE6 . It is valid until new documentation is published.

STÖBER provides you with the latest document versions for downloading from its website: <http://www.stoeber.en/en/download>

1.3 Retaining the documentation

This documentation is intended for instruction and should be retained for future reference.

Please hand over this documentation when selling or passing on the product to a third party.

1.4 Disclaimer

This document was compiled in accordance with current standards, regulations and technical developments.

Pilz and STÖBER cannot be held liable for any damage resulting from non-adherence to the documentation or inappropriate use of the product. This particularly applies to damage caused by individual technical modifications to the project or its use and operation by non-qualified staff.

1.5 Further information

This operating manual explains the function and operation of the safety module SE6 and provides guidelines on how to connect the product.

You should also consider the following:

- ▶ The configuration of the SE6 safety module is also described in the online help for the PASmotion.
- ▶ The "SE6 safety module - diagnosis" document

The documentation listed in the following table provides additional relevant information about the SD6 drive controller. You will find current document versions at:

<http://www.stoeber.en/en/download>

Device	Documentation	Contents	ID
SD6 drive controller	Commissioning instructions	System structure, technical data, storage, installation, connection, commissioning	442537
SD6 drive controller	Manual	System structure, technical data, storage, installation, connection, commissioning, operation, service, diagnosis	442426

You will need to be conversant with the information in these documents in order to fully understand this operating manual.

1.6 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Overview

The safety module SE6 expands the Drive controller SE6 by adding drive-integrated safety functions in accordance with EN 61800-5-2.

The SE6 safety module can be combined with STÖBER drive controllers of the SD6 series in sizes 0 – 3.

The following safety-related functions form part of the safety module SE6 :

- ▶ Stop functions
- ▶ Safe motion functions
- ▶ Safe monitoring functions
- ▶ Safe brake functions

In addition to the safety module itself, the following components are involved in the safety functions of Drive controller:

- ▶ Non-safe external encoders
- ▶ Non-safe motor encoders
- ▶ Non-safe mechanical brakes

2.1 Structure

The safety module has a two-channel structure with internal diagnostic tests, thus no external safety system is required. The non-safe properties and functions of the Drive controller do not affect the functional safety of the safety module.

2.2 Safety functions

The following safety functions form part of the safety module SE6 :

Safe stop function in accordance with EN 61800-5-2

- ▶ Safe Torque Off (STO)
- ▶ Safe stop 1 (SS1)
- ▶ Safe stop 2 (SS2)

Safe movement function in accordance with EN 61800-5-2

- ▶ Safe Direction (SDI)
- ▶ Safely limited increment (SLI)
- ▶ Safely Limited Speed (SLS)
- ▶ Safe Operating Stop (SOS)
- ▶ Safe Speed Range (SSR)
- ▶ Safely Limited Position (SLP)

Safe monitoring functions

- ▶ Safely Monitored Direction (SDI-M)
- ▶ Safely monitored increment (SLI-M)
- ▶ Safely Monitored Speed (SLS-M)
- ▶ Safely monitored operation stop (SOS-M)
- ▶ Safely Monitored Speed Range (SSR-M)
- ▶ Safely Monitored Position (SLP-M)

Safe brake functions

- ▶ Safe brake control (SBC)
- ▶ Safe brake test (SBT)

Other functions

- ▶ Safe Restart Lock (SRL)
- ▶ Safe Status Output (SSO)


Reaction functions

When a limit value violation or an internal error is detected, the safety module SE6 triggers a reaction function. This switches off the motor and safely interrupts torque/force generation.

- ▶ Safe stop 1 (SS1)
- ▶ Safe Torque Off (STO)

2.3

Features

- ▶ 8 safe, 1-pole digital inputs, which can be freely assigned for the activation of safety functions.
- ▶ 5 safe, 1-pole digital outputs, which can be freely assigned the status of safety functions.
- ▶ 1 encoder interface for connection of an additional external TTL or SSI encoder. The encoder can be connected using a mini-IO.
- ▶ 1 safe 2-pole output to control a standby current-activated, mechanical brake.
- ▶ 1 2-pole brake output for functional and safety-related use ([Application of the SBC and SBT safe brake functions](#) [ 56]).

The safety functions are allocated to the safe inputs and outputs in the configuration tool of the safety module.

2.4 Terminal list SD6, Size 0

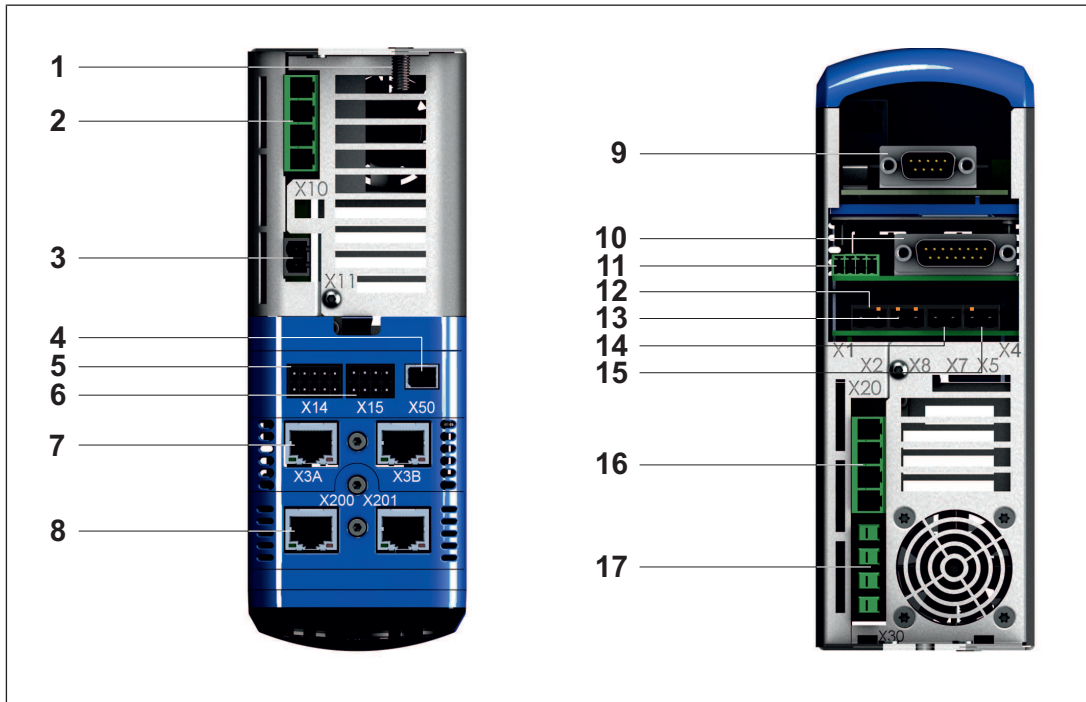


Fig.: Terminal list SD6, Size 0

Legend

- 1 Housing grounding
- 2 X10: Supply 230 V_{AC} / 400 V_{AC}
- 3 X11: Supply 24 V_{DC}
- 4 X50: SE6 safety technology (encoder)
- 5 X14: SE6 safety technology (safe inputs)
- 6 X15: SE6 safety technology (safe outputs and supply for X50)
- 7 X3A, X3B: PC, IGB
- 8 X200, X201: EC6 communication module (EtherCAT) and PN6 (PROFINET) or X200: CA6 (CANopen)
- 9 X120: Encoder connection at XI6 terminal module (alternatively X120 and X140: encoder connections at RI6 terminal module)
- 10 X4: Encoder
- 11 X1: Release and relays
- 12 X2: Motor temperature sensor
- 13 X8: Brake 2 (SBC+/-)
- 14 X7: Brake supply
- 15 X5: Brake 1 (BD1/BD2)
- 16 X20: Motor
- 17 X30: Intermediate circuit connection, brake resistor

2.5 Terminal list SD6, Size 1

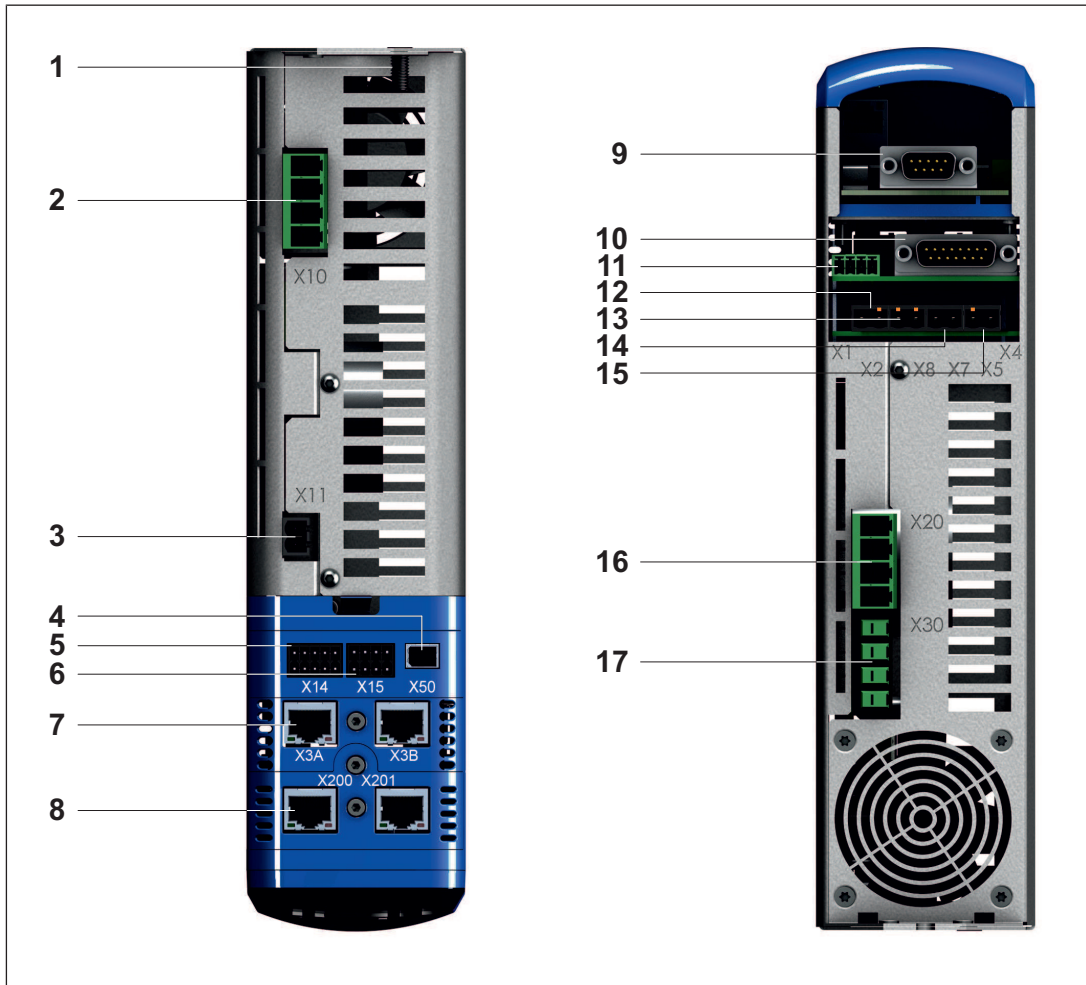


Fig.: Terminal list SD6, Size 1

Legend

- 1 Housing grounding
- 2 X10: Supply 400 V_{AC}
- 3 X11: Supply 24 V_{DC}
- 4 X50: SE6 safety technology (encoder)
- 5 X14: SE6 safety technology (safe inputs)
- 6 X15 SE6 safety technology (safe outputs and supply for X50)
- 7 X3A, X3B: PC, IGB
- 8 X200, X201: EC6 communication module (EtherCAT) and PN6 (PROFINET) or X200: CA6 (CANopen)
- 9 X120: Encoder connection at XI6 terminal module (alternatively X120 and X140: encoder connections at RI6 terminal module)
- 10 X4: Encoder
- 11 X1: Release and relays
- 12 X2: Motor temperature sensor
- 13 X8: Brake 2 (SBC+/-)

- 14 X7: Brake supply
- 15 X5: Brake 1 (BD1/BD2)
- 15 X20: Motor
- 17 X30: Intermediate circuit connection, brake resistor

2.6 Terminal list SD6, Size 2

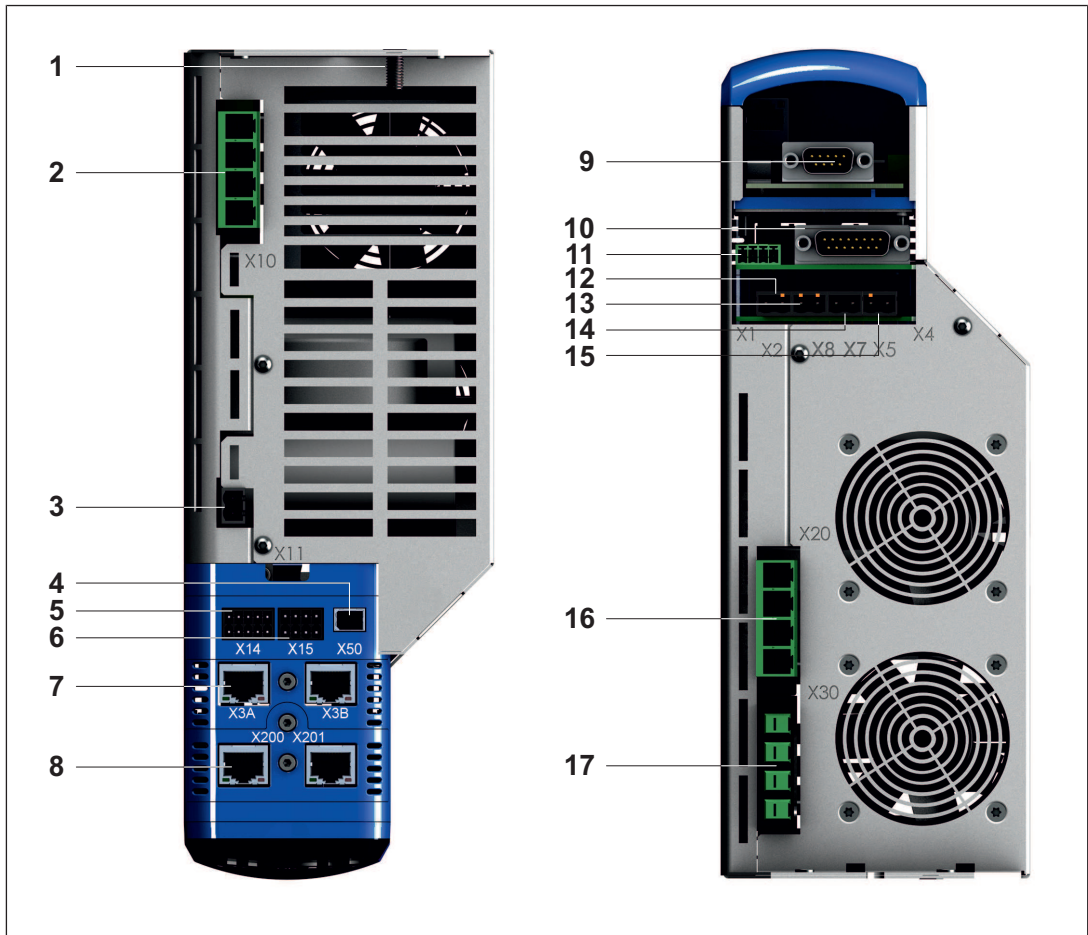


Fig.: Terminal list SD6, Size 2

Legend

- 1 Housing grounding
- 2 X10: Supply 400 V_{AC}
- 3 X11: Supply 24 V_{DC}
- 4 X50: SE6 safety technology (encoder)
- 5 X14: SE6 safety technology (safe inputs)
- 6 X15: SE6 safety technology (safe outputs and supply for X50)
- 7 X3A, X3B: PC, IGB
- 8 X200, X201: EC6 communication module (EtherCAT) and PN6 (PROFINET) or X200: CA6 (CANopen)
- 9 X120: Encoder connection at XI6 terminal module (alternatively X120 and X140: encoder connections at RI6 terminal module)

- 10 X4: Encoder
- 11 X1: Release and relays
- 12 X2: Motor temperature sensor
- 13 X8: Brake 2 (SBC+/-)
- 14 X7: Brake supply
- 15 X5: Brake 1 (BD1/BD2)
- 16 X20: Motor
- 17 X30: Intermediate circuit connection, brake resistor

2.7 Terminal list SD6, Size 3

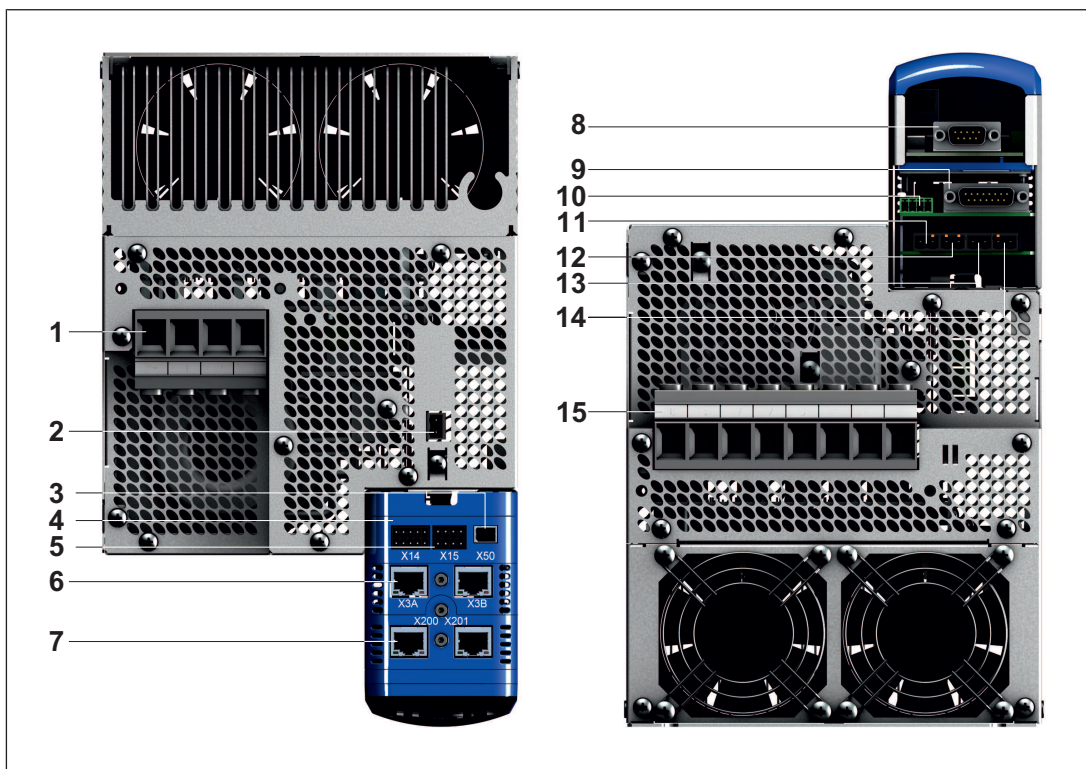


Fig.: Terminal list SD6, Size 3

Legend

- 1 X10: Supply 400 V_{AC}
- 2 X11: Supply 24 V_{DC}
- 3 X50: SE6 safety technology (safe inputs)
- 4 X14: SE6 safety technology (safe inputs)
- 5 X15: SE6 safety technology (safe outputs and supply for X50)
- 6 X3A, X3B: PC, IGB
- 7 X200, X201: EC6 communication module (EtherCAT) and PN6 (PROFINET) or X200: CA6 (CANopen)
- 8 X120: Encoder connection at XI6 terminal module (alternatively X120 and X140: encoder connections at RI6 terminal module)
- 9 X4: Encoder

- 10 X1: Release and relays
- 11 X2: Motor temperature sensor
- 12 X8: Brake 2 (SBC+/-)
- 13 X7: Brake supply
- 14 X5: Brake 1 (BD1/BD2)
- 15 X20: Motor, intermediate circuit connection, brake resistor

3 Safety

3.1 Intended use

The Drive controller SD6 with installed safety module SE6 is a safety component in accordance with Machinery Directive 2006/42/EC Appendix IV and intended for use in safety-related applications.

The following conditions have been met:

- ▶ the EN 61800-5-2 requirements for drive-integrated safety functions
- ▶ the requirements of EN 62061 to SIL CL3
- ▶ the requirements of EN ISO 13849-1 to PL e (Category 4)

Intended use includes compliance with the

- ▶ operating manual Drive controller SD6.
- ▶ the online help function for the PASmotion configuration tool.
- ▶ EMC-compliant assembly and wiring.

The following is deemed improper use

- ▶ any structural, technical or electrical modification of Drive controller.
- ▶ use of Drive controller for applications other than those described in this operating manual.
- ▶ use of Drive controller in deviation from the documented technical data (see [Technical details \[📖 179\]](#)) Drive controller

The safety module SE6 may only be used in combination with the following drive controllers:

Drive controller size	Drive controller
Size 0	SD6A02
	SD6A04
	SD6A06
Size 1	SD6A14
	SD6A16
Size 2	SD6A24
	SD6A26
Size 3	SD6A34
	SD6A36
	SD6A38

3.1.1 Permitted motor types

The following motor types are approved for use with the safety module:

- ▶ Rotary synchronous motors
- ▶ Linear synchronous motors
- ▶ Asynchronous motors



INFORMATION

The operation of synchronous motors without a motor encoder (sensorless operation) is not permitted.

3.1.2 Approved motor encoders

The motor encoder is connected to an input on the drive controller. The following motor encoders are approved for use with the safety module:

Approved motor encoders
Resolver
Encoder EnDat 2.1/2.2 digital
Encoder EnDat 2.1 Sin/Cos
Linear encoder EnDat 2.2 digital
SSI encoder
SSI linear encoder
Sin/Cos linear encoder
HTL, TTL incremental encoder
HTL, TTL Hall encoder

The motor encoders listed can be connected to the various interfaces of the drive controller and its optional modules, as required.

3.1.3 Approved external encoders

**NOTICE**


To ensure diversity, the external encoder may not be of the same type as the motor encoder.


Approved external encoders

SSI

TTL

Connection to the safety module SE6 is via X50.

For further information about wiring, see [External encoder](#) [ 156].

For further information about the use of external encoders, see [Motor encoder fault detection](#) [ 43].

3.2 Safety regulations

3.2.1 Safety assessment

Before using a device it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

The user is responsible for the safety of the project created in the PASmotion configuration tool. Pay special attention when configuring the project and observe local standards and regulations.

A faulty configuration can jeopardize the safety of the entire process!

3.2.2 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

3.2.3 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.2.4 Disposal


- ▶ In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

3.3 Error types, error detection and error reaction

The safety module SE6 has various functions for error detection, with a detected error always resulting in a defined error reaction.

The error types are described in Chapter [Operating states](#)  169].

Error detection and error reaction are described in the sub-chapters of Chapter [Function description](#)  23].

3.4 Data backup and data security

Various data security mechanisms are used for the safety module SE6. A distinction is made between technical measures and organisational measures.

Technical measures

Technical measures contribute towards data security with regard to errors and faults. They automatically come into effect as soon as data is exposed to external influences (e.g. errors due to electromagnetic interference). Technical measures include, for example

- ▶ Redundancy when recording and processing safe signals
- ▶ Backup procedure when downloading a project
- ▶ Noise immunity

Organisational measures

Organisational measures contribute towards data security with regard to accidental or intentional data manipulation. The user is primarily responsible for applying appropriate organisational measures.

Organisational measures can mainly be covered with the term "Security". We recommend that you develop a comprehensive strategy with regard to security measures. All criteria that concern the integrity, availability, confidentiality, liability, operational safety and authenticity of data fall under the term "security" (see also the ISO 2700x series of standards).

Security measures include, for example:

- ▶ Authentication
- ▶ Password management
- ▶ Logical and functional division of the office and automation environment on Ethernet-based networks, through firewalls for example
- ▶ Mechanical interlock on unused Ethernet interfaces on the control systems

Data security measures for the configurable safety module SE6

The safety module SE6 has the following technical and organisational data security measures:

- ▶ Assignment of various access permissions for a configuration in the PASmotion configuration tool
Each project must be assigned 2 passwords. The passwords are used to define access permissions to a different function range (see online help for PASmotion).
- ▶ Detection of different configuration
A check sum (= "check sum safe") is included when a configuration is downloaded. Different configurations can be detected based on this information.
- ▶ Detection of a deviating check sum by the paramodule and in the flash memory when restarting a safety module
- ▶ Detection of an invalid configuration when restarting a safety module
- ▶ Detection of faulty or incompatible configurations when restarting the safety module

4 Function description

4.1 Overview

The safety module SE6 is installed in the Drive controller SD6. Assembly and inspection take place before delivery by STÖBER. It is not possible for the customer to retrofit the safety module. The combination of <variable linkid="2589895436" name="1003">Drive A</variable> with an integrated safety module is referred to as a safe Drive controller hereafter.

A **safe drive system** consists of:

- ▶ a safe Drive controller.
- ▶ a motor with motor encoder.
- ▶ an external encoder (optional).
- ▶ standby current-activated mechanical brakes (standard or safety components, optional).
- ▶ a programmable safety system.
- ▶ a configuration tool (PASmotion).



INFORMATION

The safety configurator PASmotion forms part of the STÖBER DriveControl-Suite from Version V6.3-B.

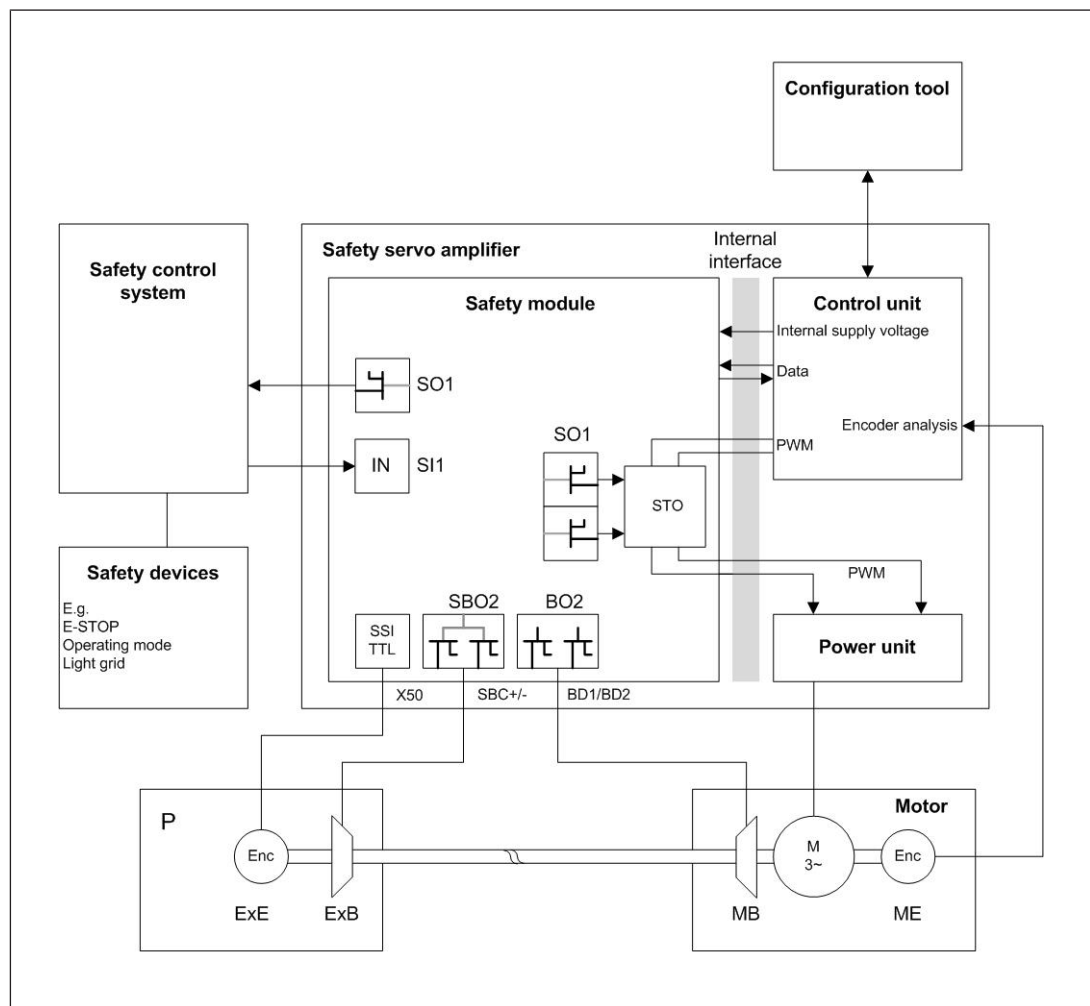


Fig.: Safe drive system

Legend

- SO1 Safe 2-pole STO controls
- STO Safe pulse block 1 and safe pulse block 2
- SI1 Safe 1-pole input (X14)
- BO2 2-pole brake output for functional and safety-related use (X5)
- SBO2 Safe 2-pole brake output (X8)
- MB Motor brake
- P Driven installation
- ME Motor encoder
- ExE External encoder
- PWM Pulse width modulation
- ExB External brake

The safety module SE6 (depending on the configuration)

- ▶ performs a plausibility check on the connected motor-encoder and uses that to generate safe speed and position values.
- ▶ compares the current speed or the current position with the limit values and triggers a response function when a limit value was violated.

- ▶ signals the status of safety functions to the programmable safety system.
- ▶ activates controlled shut-down by the Drive controller (optional) for the SS1 and SS2 safety functions.
- ▶ activates the integrated safe pulse lock on request or in the event of an error.
- ▶ has an option for safe triggering of up to two standby current-activated, mechanical brakes.
- ▶ detects faults in the mechanical brakes by means of a brake test.
- ▶ has a connection for an optional, external encoder.
- ▶ detects faults (cross-wire fault, short circuits) in the wiring of the output signals and initiates an error reaction.

The safe drive controller

- ▶ interrupts the torque/power generation by the motor when the pulse lock is activated.
- ▶ brings the motor to a standstill when the SS1 or SS2 safety function is activated.
- ▶ transfers the configuration data from the configuration tool to the safety module.
- ▶ saves the device configuration on the drive controller's paramodule.
- ▶ reads the error memory of the safety module and provides detailed status information.


The programmable safety system

- ▶ evaluates signals from safety devices, such as:
 - E-STOP pushbutton
 - Safety gates
 - Light beam devices
 - Two-hand buttons
- ▶ activates the safety functions via inputs on the safety module (optional).
- ▶ processes safe feedback outputs of the safety module (optional).
- ▶ detects faults (cross-wire fault, short circuits) in the wiring to the safety module and initiates an error reaction (optional).

The PASmotion configuration tool

- ▶ configures and parametrises the safety module.
- ▶ ensures safe uploading and downloading of the configuration file.
- ▶ displays the status of the inputs/outputs in the online display.
- ▶ displays the error stack.

4.2 General definitions

- ▶ The internal resolution of the safety module is always 4096 increments per revolution, irrespective of the specific application and resolution of the motor encoder (optional, user-defined planned units are converted accordingly).
- ▶ Determination of the rotation/movement direction of the motor (relative to the motor shaft when looking towards the motor flange)
 - left, negative, counterclockwise (CCW)
 - right, positive, clockwise (CW)
- ▶ Definition of internal error
An internal error is an error that occurred in the system and could not be removed by the user.
- ▶ Fault definition: STOP, FAULT, FATAL and "movement monitoring safety function" see [Operating states](#) [ 169]



WARNING!

Potential loss of safety function due to use of user-defined units!

The use of user-defined units for position values can lead to a loss of accuracy due to conversion and rounding errors.

4.3 Activation of safety functions

The safety functions of the safety module SE6 are activated or deactivated by evaluating the signal levels on the safe, digital inputs. These inputs operate in accordance with the standby current principle (on switching off). The programmable safety system activates the safety functions via a 0-signal.

The safe digital inputs of the safety module detect NO faults in the wiring.

One of the following measures must be applied to ensure safe coupling between the programmable safety system and the safety module:

- ▶ Error detection by tested control signals and shutdown in the event of an error by a second shutdown route.
- ▶ Error elimination for short circuit between any of two conductors according to EN ISO 13849-2, Table D.4.
- ▶ Error detection through feedback of status signals of the safety module and shutdown in the event of an error by a second shutdown route.

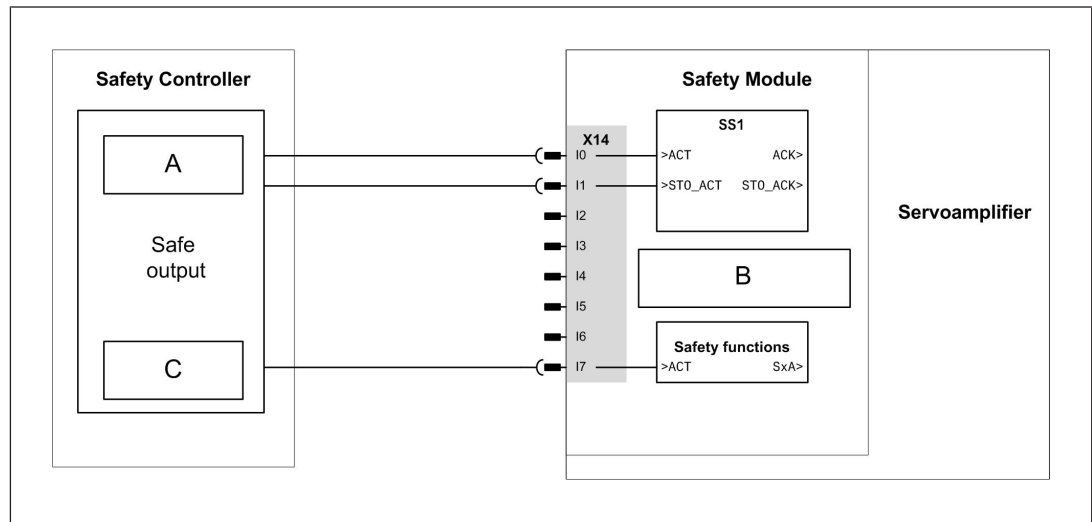


Fig.: Activation of a safety function with fault detection by testing

Legend

- A Error detection by tested control signal and shutdown by a second, STO_ACT shutdown route in the event of an error.
- B The safe inputs of the safety module detect NO errors in the wiring.
- C Error detection with tested control signals and shutdown by the SS1 function in the event of an error.

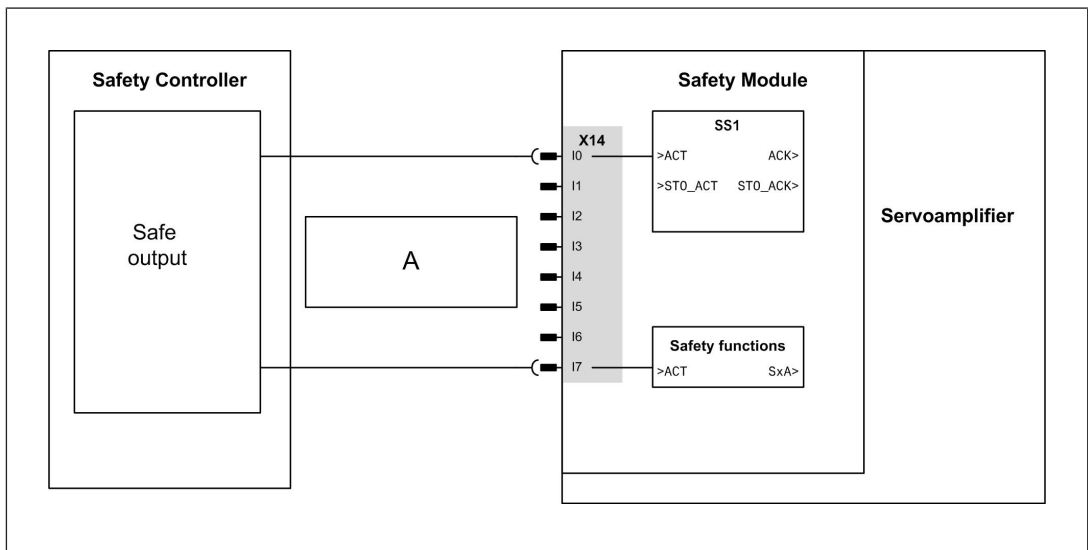


Fig.: Activation of a safety function with fault exclusion

Legend

- A Error elimination for short circuit between any of two conductors according to EN ISO 13849-2, Table D.4.

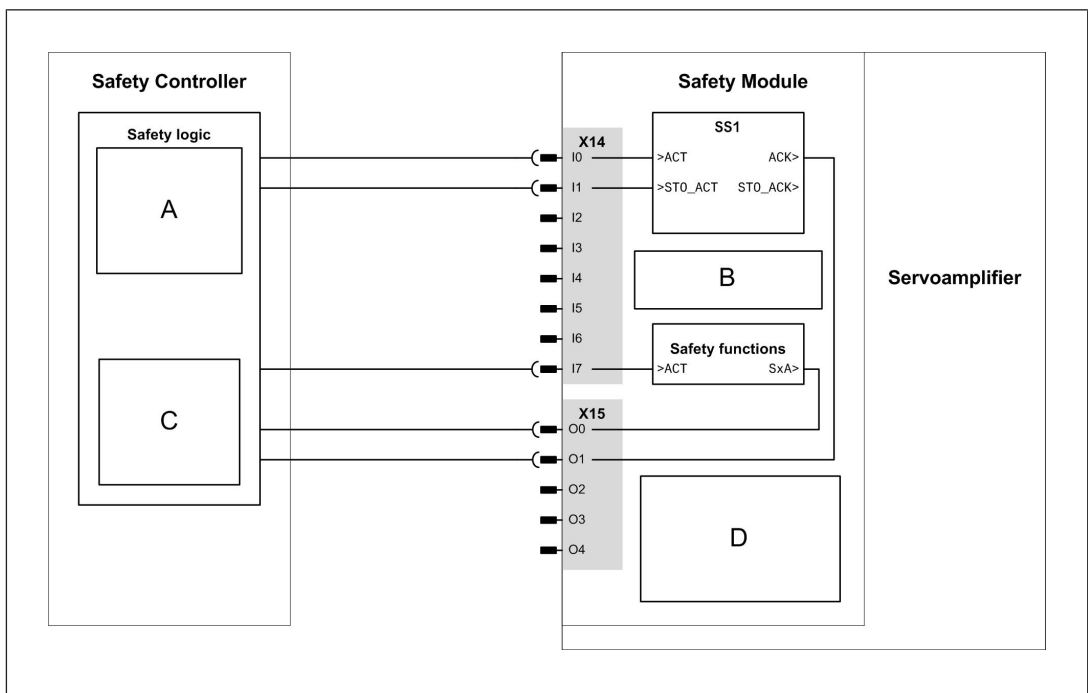


Fig.: Activation of a safety function with fault detection by feedback

Legend

- A Error detection (short circuit and short across contacts) by evaluating the SS1_ACK signal in the higher-level controller and shutdown by a second, STO_ACT shutdown route in the event of an error.
- B The safe inputs of the safety module detect NO errors in the wiring.
- C Error detection by evaluating the SxA signal of the activated safety function in the higher-level controller. Shutdown by the SS1 function in the event of an error.

- D The safe outputs of the safety module detect errors in the wiring. The SS1 safety function is activated and the motor is shut down when an error is detected.

4.4 Feedback from the safety functions

The states/status of the safety functions of the safety module SE6 can be reported via safe, digital outputs to the programmable safety system.

- ▶ 1-signal at the exit of the safety function means:
 - the safety module reports a safe state (depending on the respective safety function).
- ▶ 0-signal at the exit of the safety function means:
 - the safety function is not active, or
 - the allocated safety function has detected a dangerous state or
 - the output has not been assigned to a safety function.

Fault detection in wiring

Detecting the safe digital outputs of the safety module:

- ▶ Short circuits following 24 V_{DC}
- ▶ Short circuits following 0 V
- ▶ Shorts across contacts

The motor is safely shut down by the SS1 safety function when an error is detected.

- a 1-signal is issued at the SS1_ACK output.
- A 1-signal is put on the STO_ACK output when the motor has been safely switched to a torque-/power-free state, see [Safe stop 1 \(SS1\)](#) [80].

Fault prevention and fault detection during overvoltage



CAUTION!

Loss of safety

Overvoltage > 40 V in the coupling between safety module and programmable safety system can lead to loss of safety. Feeding overvoltage in the programmable safety system to the 1-pole digital outputs of the safety module may cause switched-off outputs to provide a 1-signal.

Use a power supply with overvoltage protection for the output voltage for the programmable safety system. The output voltage must be limited to max. 40 V.

Measures for fault detection and triggering of fault reactions:

- ▶ The safety module detects overvoltage and triggers the SS1 safety function as an error reaction. The safety module changes to the STO operating status.

- ▶ The defective programmable safety system must recognise the error and switch to a safe condition.

Additionally required error detection when coupling a safety module with several programmable safety systems:

When the safe outputs of the safety module are distributed over several, independent programmable safety systems,

- ▶ the STO-ACK output must be evaluated for each programmable safety system.
- ▶ a plausibility check of the STO-ACK signal with the respective feedback signals must be performed for each programmable safety system.

An error due to overvoltage is given when the Acknowledge output (SxA) and the STO-ACK output provide a 1-signal at the same time.

One of the following measures must be applied to ensure safe coupling between the programmable safety system and the safety module:

- ▶ Error elimination for short circuit between any of two conductors according to EN ISO 13849-2, Table D.4.
- ▶ Evaluation of a second, additional feedback signal (STO-ACK) by the programmable safety system.

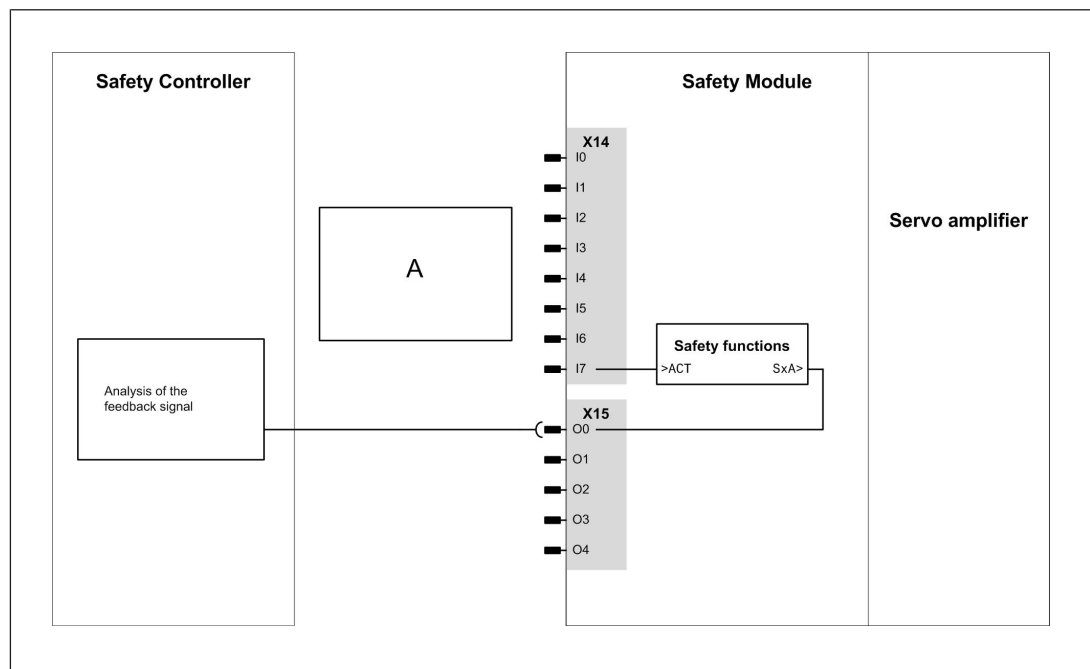


Fig.: Feedback on safety functions with fault exclusion

Legend

- A Error elimination for short circuit between any of two conductors according to EN ISO 13849-2, Table D.4

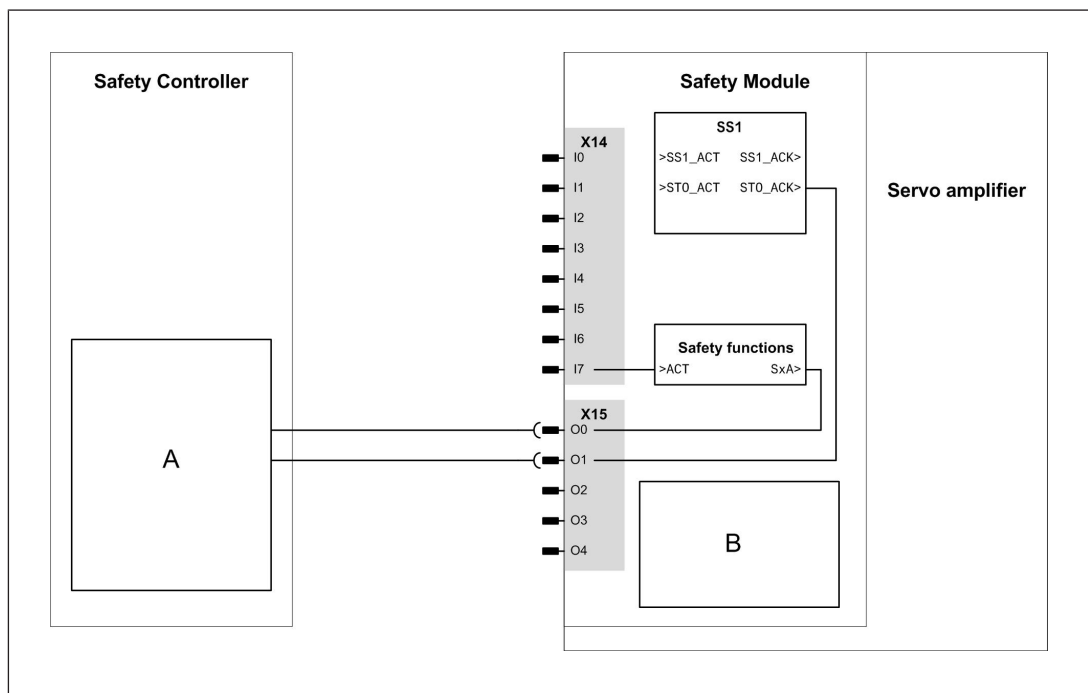


Fig.: Feedback from safety functions with evaluation of a second, additional feedback signal

Legend

- A Evaluation of the ACK feedback signal of the safety function.
Error detection at the safe outputs of the safety module shuts down the motor by activating the SS1 function and activates the STO. This is detected by the safety controller by evaluation of the STO_ACK signal.
- B The safe outputs of the safety module detect errors in the wiring.
The SS1 safety function is activated and the motor is shut down when an error is detected.

4.5 Digital inputs and outputs

The safety module has

- ▶ safe digital hardware inputs that can be assigned to the activation inputs of the safety functions.
- ▶ safe digital hardware outputs that can be assigned to the feedback outputs of the safety functions.

Hardware inputs and outputs are assigned to the safety functions in the configuration tool.

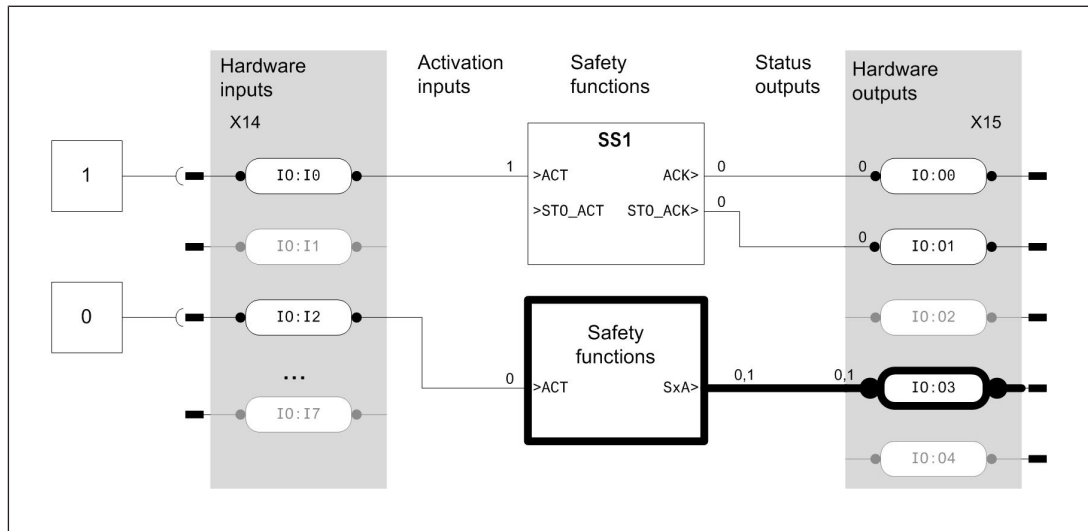


Fig.: Assignment of inputs/outputs

Legend

Line width light	Deactivated safety function
Line width bold	Activated safety function

4.5.1 Inputs

Assignment of the inputs

If a hardware input is assigned to an activation input of a safety function, this is read in and evaluated cyclically during operation.

Signals at the input

0 signal at the input: Safety function is activated


1 signal at the input: Safety function is deactivated


Properties of the safe digital inputs

The inputs of the safety module can be controlled from the following outputs of a higher-level controller:

- ▶ Semiconductor outputs
- ▶ Contact-based outputs

The inputs of the safety module correspond

- ▶ to the interface type C of the ZVEI position paper "Classification of Binary 24 V Interfaces - Functional Safety aspects covered by dynamic testing" (see [Technical details](#) [ 179]).
- ▶ to an input of type 1 in accordance with IEC 61131-2.

With the input active (1 signal), the correct function of the internal input circuitry is checked during every cycle (T_{CYCLE} , see [Reaction times](#) [ 45]). This is done by test pulsing.

Signal detection at the inputs

- ▶ A signal (0 signal or 1 signal) is always ignored if it is present for less than the minimum processing time (see [Technical details](#)).
- ▶ A signal is always detected and transmitted to the process image (PI) if it is present for longer than the maximum processing time (see diagram and [Technical details](#)).

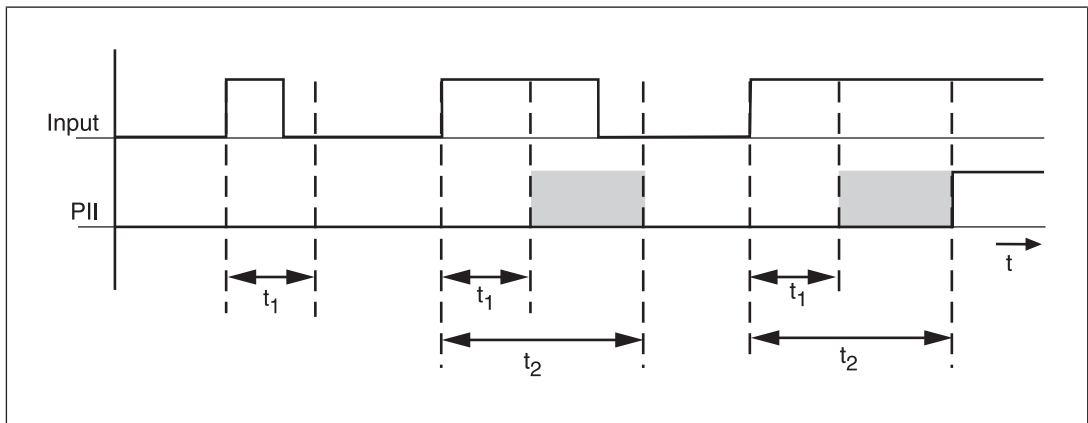




Fig.: Timing diagram for signal detection

Legend

Input	Signal at the input
t_1	Minimum processing time = filter time (configurable) (see Technical details [ 179])
t_2	Maximum processing time = filter time (configurable) + 1 cycle (see Technical details [ 179])
PII	Status of the process image of inputs (PII) (PII – Process Image Input)
Grey shaded area	Status of process image (PII) undefined

Input filter (pulse suppression)

The inputs can be fitted with software input filters. The characteristic of the input filter corresponds to a 1st-order low pass.

Switch-off pulses, greater than the selected filter time, are identified reliably.

Configuration of the input filter time in the configuration tool:

Physical address	Filter time	Filter time	Unit	Description
IO: I0 ... IO: Ix	Activate/deactivate	1 ... 10	[ms]	The filter time can be activated/deactivated and the time specified for each input. (default: activated, 1 ms)

4.5.2 Outputs**4.5.2.1 Safe 1-pole outputs****Assignment of the 1-pole outputs**

If a hardware output is assigned to a feedback output of a safety function, this is updated cyclically during operation.

0 signal (0 V) at output:

- ▶ Output is high impedance.
- ▶ No current to the load.
- ▶ Activated safety function reports a limit value violation or a hazardous status.
- ▶ Safety function is not active.

1 signal (+24 V_{DC}) at output:

- ▶ Output is low impedance.
- ▶ Current is supplied to the load.
- ▶ Activated safety function reports the safe status.

A deactivated safety function always supplies a 0 signal to at the assigned output.

**NOTICE****STO operating status**

In the STO operating status, a 0 signal is output at all feedback outputs of the configured safety functions.


Exceptions:

Feedback output STO-ACK of the safety function SS1 reports the active status STO with a 1 signal.

Feedback output SBT_SBA of the safety function SBT remains set throughout the inspection period.

Shared output

When assigning hardware outputs there is the option of assigning multiple feedback outputs of safety functions to one hardware output. As soon as a feedback output of an activated safety function issues a 0 value as the status, the hardware output is set to 0.



NOTICE

Deactivated safety functions are disregarded by the shared output.

Despite a 0 value of a deactivated safety function, the shared output can issue a 1 signal.

Only activated safety functions contribute to the result.

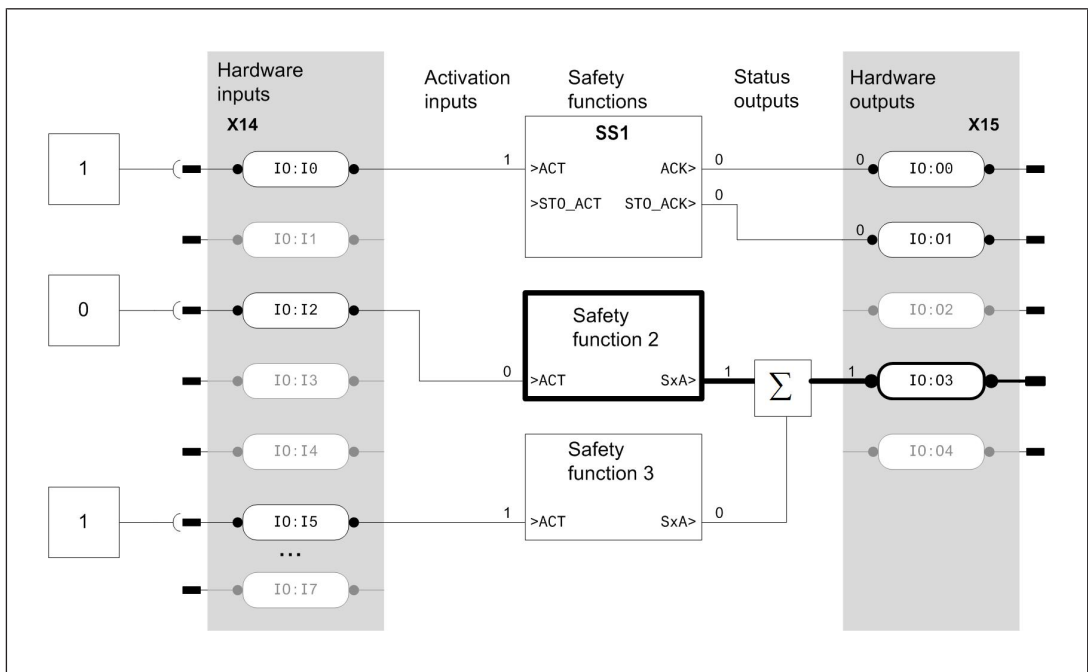


Fig.: Example for shared output 01

Legend

- Safety function 2 Safety function 2 **activated**
- Safety function 3 Safety function 3 **not activated**

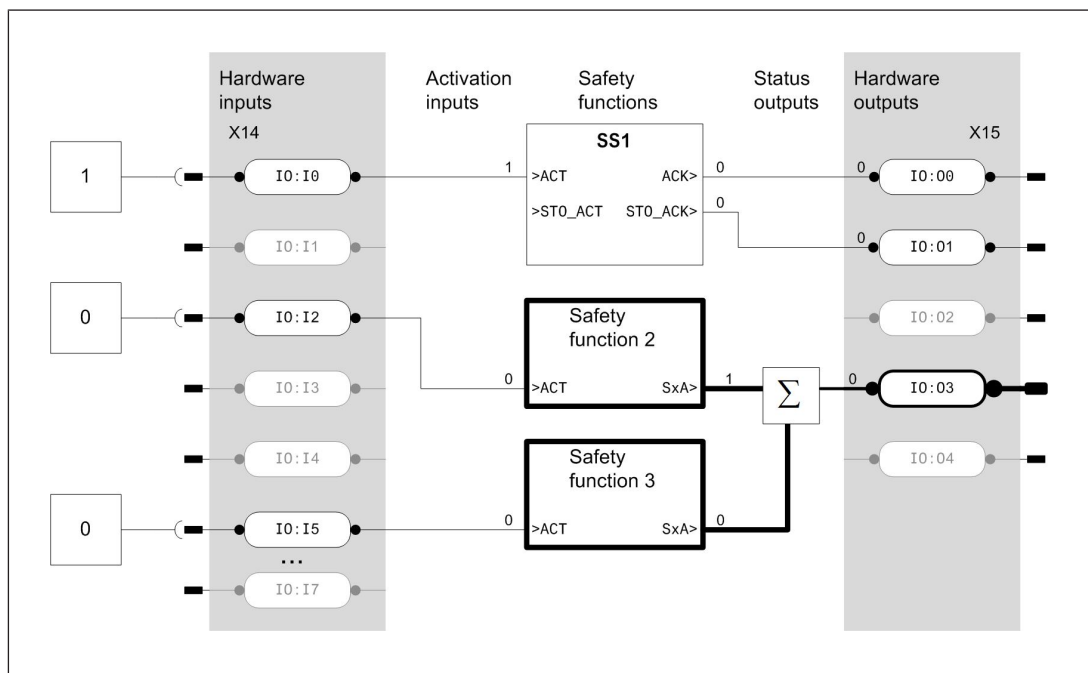


Fig.: Example for shared output 02

Legend

Safety function 2	Safety function 2 activated
Safety function 3	Safety function 3 activated

Supply voltage

- ▶ The 1-pole outputs are supplied via the 24 V_{DC} feed +24 V_Vouts (X15).

General

- ▶ The maximum capacity at an output is dependent on the load (see characteristic: output capacitance C dependent on load current I). Connecting a higher capacity may lead to an error.
- ▶ Operation with electronic contactors has not been tested and may lead to errors. Observe without fail the specification of the outputs of the safety module SE6 .

Output test

- ▶ Outputs that are switched on are checked via regular off tests.
 - Test pulses for outputs that are switched on: See [Technical details \[179\]](#)
 - Outputs that are switched on are switched off for the duration of the test pulse.
 - The load must not switch off because of the test.
- ▶ Outputs that are switched off are checked via regular on tests.
 - Test pulses for outputs that are switched off: See [Technical details \[179\]](#)
 - Outputs that are switched off are switched on for the duration of the test pulse.
 - The load must not switch on because of the test.

**WARNING!****Risk of injury**

When wiring an output with capacitance it is essential to note the pulse duration and repetition time of the on test. Otherwise the load may switch on unintentionally.

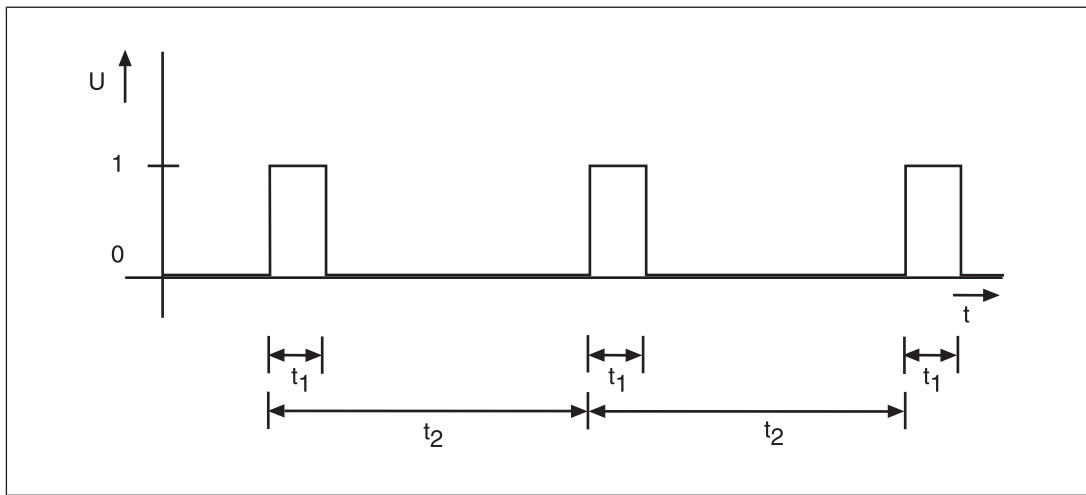


Fig.: Timing diagram

Legend

- 1 1 signal (high)
- t_1 Pulse duration of the on/off test (see [Technical details \[179\]](#))
- t_2 Repetition time, normal time between two on/off tests (see [Technical details \[179\]](#))
- 0 0 signal (low)

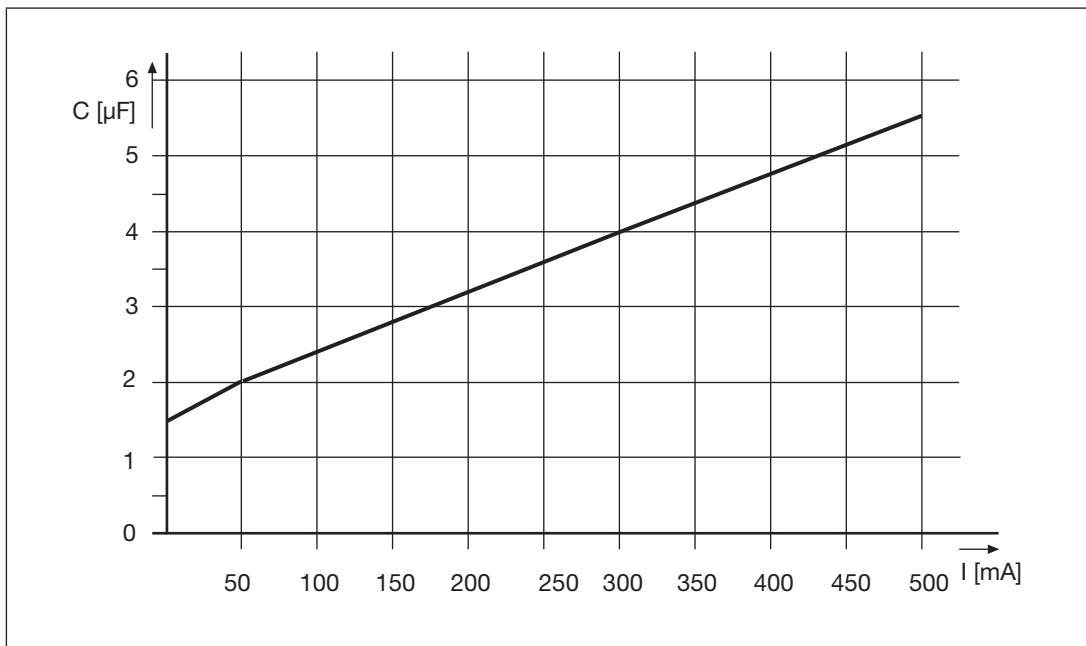


Fig.: Characteristic: Output capacitance C dependent on load current I

Configuring on and off tests



NOTICE

For applications in accordance with PL e (Category 4) and SIL 3, the on and off tests must be switched on (activated).

If a plant is particularly sensitive to test pulses, they may be switched off for individual outputs.

The test must be replaced by other measures, depending on the safety requirement:

- ▶ When on test pulses are switched off
 - The correct switch state is always checked. It is no longer checked whether a switched-off output can still be switched on.
 - The output's ability to switch will not be detected until the next time the output is switched on.
 - There are no longer any switch-on pulses in the output signal.
- ▶ When off test pulses are switched off:
 - The correct switch state is always checked. It is no longer checked whether a switched-on output can be switched off.
 - The output's ability to switch will not be detected until the next time the output is switched off.
 - The supply voltage test for the outputs cannot be switched off. Switch-off pulses are therefore still present in the output signal.

Configuration of the off tests in the configuration tool:

Physical address	On test	Off test	Description
IO: 00 ... IO: 0x	Activated/deactivated (default: activated)	Activated/deactivated (default: activated)	It is determined via the selection field whether the on/off test is switched on or off.

Testing for shorts

A test is regularly carried out to check for shorts between the outputs.

For applications in accordance with PL e (category 4) and SIL 3, detection of shorts across contacts must be

- ▶ assured by the on/off test.

4.5.2.2 Non-safe 1-pole outputs**Non-safe 1-pole brake output BD1/BD2**

The 1-pole BD1/BD2 (X5) brake output is used as follows:

- ▶ Non-safe addressing of Brake 1 by the drive controller
- ▶ Safe addressing of Brake 1 by the SS1 (safe stop) function with STO (safe torque off) in combination with the SBC (safe brake control, second redundant braking device) and SBT (safe brake test) safety functions

See ["Load suspension" with two brakes](#) [📖 69] and [Safe stop 1 \(SS1\)](#) [📖 80]

0-signal (0 V) at the output (BD1/BD2):

- ▶ Output is high impedance.
- ▶ No current to the load.
- ▶ A connected closed-current brake is applied, causing the braking torque/mechanical braking force to be applied to the axis.

1-signal (+24 V) at the output (BD1/BD2):

- ▶ Output is low impedance.
- ▶ Current is supplied to the load.
- ▶ A connected closed-current brake is vented, causing the braking torque/mechanical braking force to be removed from the axis.

4.5.2.3 2-pole outputs**Safe 2-pole brake output (SBC+/SBC-)**

The safety module has a safe 2-pole output (X8) to control a closed-current, mechanical brake. The output is assigned to the safety function SBC (dual-pole).

0 signal (0 V) at the output (SBC+/SBC-)

- ▶ Output is high impedance.
- ▶ No current to the load.
- ▶ A connected closed-current brake is applied, causing the braking torque/mechanical braking force to be applied to the axis.

1 signal (+24 V) at the output (SBC+/SBC-)

- ▶ Output is low impedance.
- ▶ Current is supplied to the load.
- ▶ A connected closed-current brake is vented, causing the braking torque/mechanical braking force to be removed from the axis.

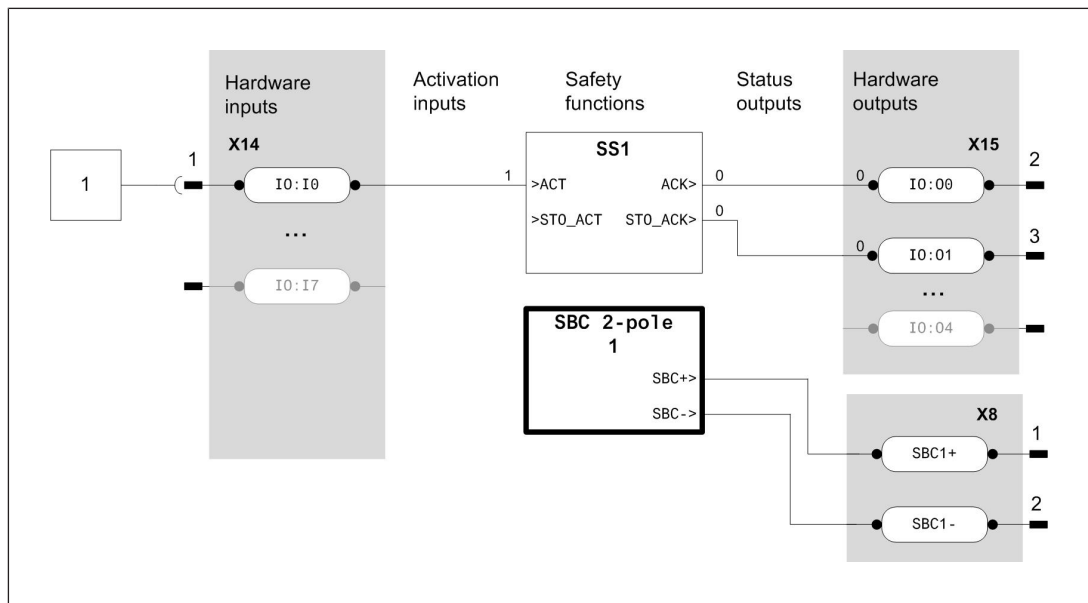


Fig.: Assignment IO SBC

Legend

SBC 2-pole Safe 2-pole output to control a closed-current, mechanical brake

Supply voltage

- ▶ The 2-pole output is supplied via the 24 V_{DC} feed at plug X7.

General

- ▶ The maximum capacity at an output depends on the load (see characteristic). Connecting a higher capacity may lead to an error.
- ▶ Operation with electronic contactors has not been tested and may lead to errors. Observe without fail the specification of the outputs of the safety module SE6 .
- ▶ Testing the 2-pole output can detect an open circuit.
- ▶ The output cannot be used as a 1-pole output.

Output test

- ▶ Outputs that are switched on are checked via regular off tests.
 - Test pulses for outputs that are switched on: see Technical details
 - Outputs that are switched on are switched off for the duration of the test pulse.
 - The load must not switch off because of the test.
- ▶ Outputs that are switched off are checked via regular on tests.
 - Test pulses for outputs that are switched off: see Technical details
 - Outputs that are switched off are switched on for the duration of the test pulse.
 - The load must not switch on because of the test.

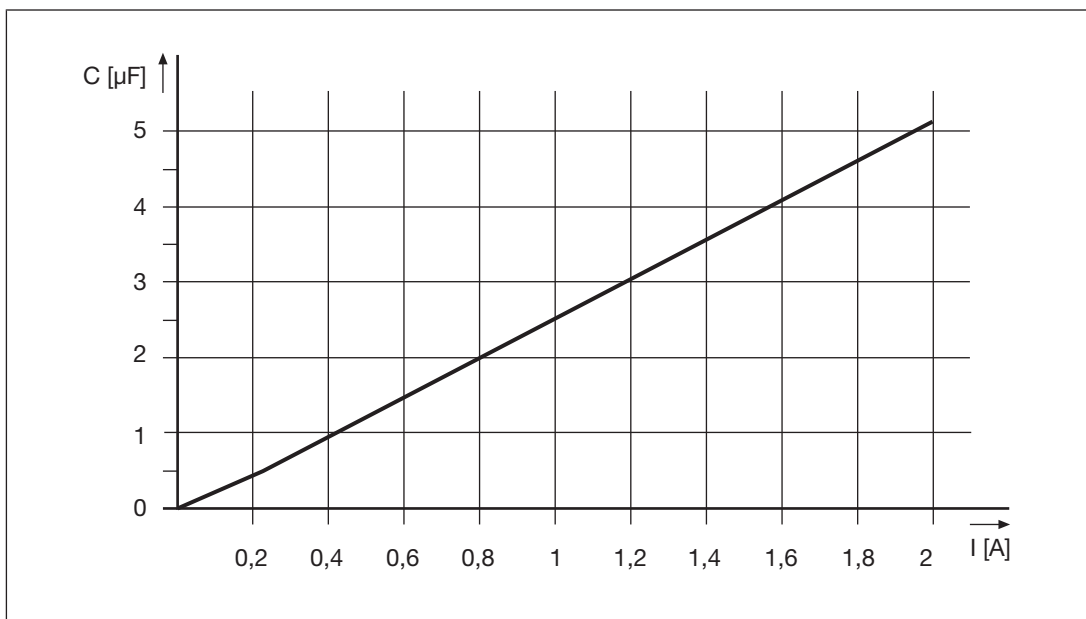


Fig.: Output capacitance C dependent on load current I

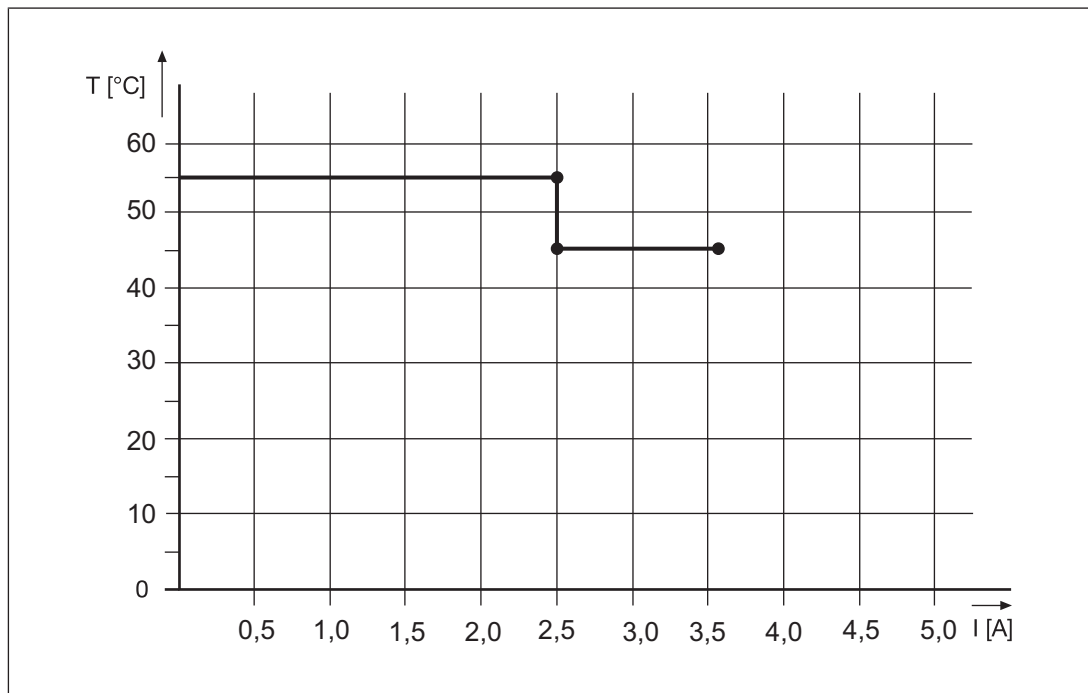


Fig.: Derating diagram: Permitted ambient temperature T dependent on load current I

Open circuit detection

- ▶ The module will detect an open circuit between outputs SBC+ and SBC-.
- ▶ The result of open circuit detection is signalled by an error reaction.
- ▶ Loads over 3 kOhm may mistakenly be detected as an open circuit.

4.6 Motor encoder fault detection

The different aspects of motor encoder error detection are shown here.

4.6.1 Options

Errors in the connected encoders must be safely detected in order to generate safe speed and position values. The safety module offers different options for performing plausibility tests for the connected motor encoder.

An additional, external encoder is used in some applications. The second encoder can be used to detect additional errors in the mechanical transmission path between the motor and the driven device.

Sensor technology	Supported motor type			Supported safety functions		
	Rotary synchronous motor	Linear synchronous motor	Asynchronous motor	SS1, SS2	SOS, SLS, SSR, SDI, SLI, SBC, SBT	SLP
Motor encoder and internal system variables	X	X	--	X	X	--
Motor encoder and external incremental encoder (TTL)	X	X	X	X	X	--
Motor encoder and external absolute encoder (SSI)	X	X	X	X	X	X



INFORMATION

Two different encoders are required for the plausibility check when asynchronous motors are used.

Forced dynamisation of encoder

The axis must be moved within 8 hours as described below when the safety function is active in order to detect errors in the connected encoders even after prolonged standstill of the drive axis:

- ▶ At least one turn of the motor for rotary synchronous motors/asynchronous motors
- ▶ At least a distance of (number of poles/2) * pole pair width for linear synchronous motors

4.6.2 Distance to fault detection

Errors in a connected motor encoder can only be detected by a plausibility test using internal system parameters once a minimum distance has been covered. This must be considered in the safety evaluation, for example the determination of the overrun distances. A maximum permitted deviation of the position values of the two encoders can be parametrised in the configuration tool when two encoders are used.

Sensor technology	Fault detection per motor type		
	Rotary synchronous motor	Linear synchronous motor	Asynchronous motor
Motor encoder and internal system variables	At the latest after one mechanical motor turn	At the latest after a movement distance of (number of poles/2) * pole pair width	--
Motor encoder and external incremental encoder (TTL)	The maximum deviation between the two encoder positions can be parametrised, at the latest after one mechanical motor turn	The maximum deviation between the two encoder positions can be parametrised, at the latest after a movement distance of (number of poles/2) * pole pair width	The maximum deviation between the two encoder positions can be parametrised, at the latest after one mechanical motor turn
Motor encoder and external absolute encoder (SSI)			

4.6.3 Maximum achievable safety integrity

The different options for error detection can achieve the following maximum values for safety integrity for all safety functions:

Sensor technology	Maximum achievable safety integrity		
	Rotary synchronous motor	Linear synchronous motor	Asynchronous motor
Motor encoder and internal system variables	SIL CL 3 according to EN 62061 PL e (Category 4) according to EN ISO 13849-1		
Motor encoder and external incremental encoder (TTL)			
Motor encoder and external absolute encoder (SSI)			

The safety engineering characteristics of the safe drive system depend on the failure rates of the encoders used.

The chapter on [Safety characteristic data](#) [ 181] considers various encoders and their failure rates.

4.7 Reaction times

Type-C standards for machines specify minimum distances between a protective device and the hazardous area either directly or by referring to the ISO 13855 international standard.

The overrun of the dangerous movement by the total system must be determined to specify the minimum distances.

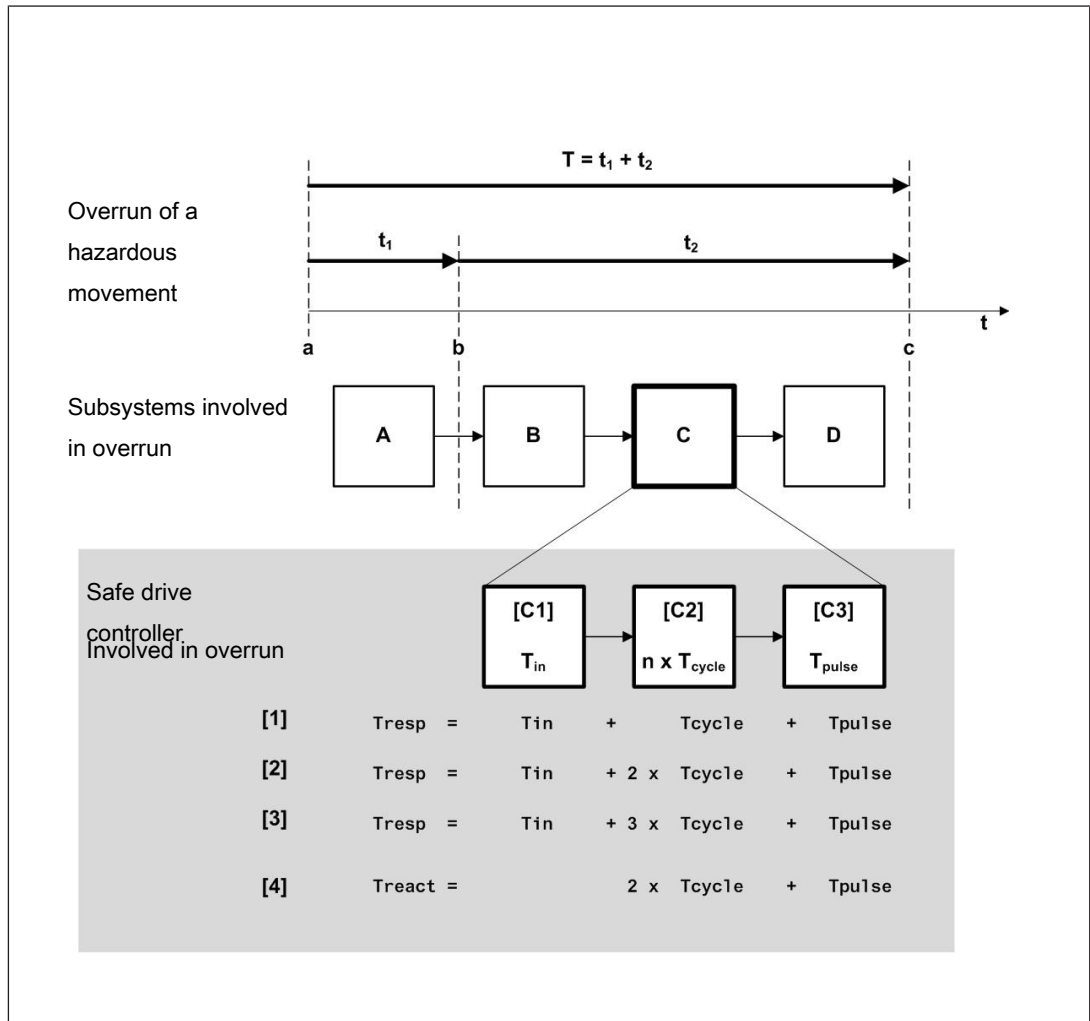


Fig.: Determining overrun

Legend

- T Overall system stopping performance
- t_1 Response time of a protective device
- t_2 Stopping time
- a Triggering the protective equipment
- b OFF-signal is generated
- c Safe state of machine
- A Sensor / protective device
- B Higher-level programmable safety system

- C Safe drive controller
- D Mechanics
- [C1] Input with adjustable input filter
- [C2] Processor system of the safety module
- [C3] Delay time for safe pulse lock
- [1] Response time for stop function (Stop Category 0) via the STO_ACT input
- [2] Response time for stop function (Stop Category 0) via the SS1_ACT input
- [3] Response time from the activation of movement monitoring to the error reaction of SS1 (Delay Time 0)
- [4] Reaction time from movement monitoring (already active) to the error reaction of SS1 (Delay Time 0)

The overrun of the dangerous movement of a machine includes several times.

This documentation specifies the following times for Subsystem C – Safe Drive controller:

Time	Description	Section
T _{in}	Maximum processing time of the digital input	Inputs
T _{cycle}	Cycle time of the safety module processor system	Technical details
T _{pulse}	Delay time for safe pulse lock	Technical details
T _{react}	Maximum error reaction time	Reaction times
T _{resp}	Maximum response time	Reaction times

T_{react} maximum error reaction time

This time includes

- ▶ the cycle time of the safety module processor system.
- ▶ the delay time for safe pulse lock.

The error reaction function includes the STO safety function (SS1 with delay time 0).

T_{resp} maximum response time

This time includes

- ▶ the maximum processing time of the digital input (dependent on the parametrisable filter time).
- ▶ when triggering a stop function (Stop Category 0) via the STO-ACT input:
 - the cycle time of the safety module processor system.
- ▶ when triggering a stop function (Stop Category 0) via the SS1_ACT input:
 - twice the cycle time of the safety module processor system.
- ▶ when triggering a safe movement function through the ACT input to the STO error reaction (SS1 with Delay Time 0), movement is already dangerous during activation:
 - three times the cycle time of the safety module processor system

- ▶ the delay time for safe pulse lock.

Tcycle cycle time of the processor system

This time includes

- ▶ reading the inputs and the position values.
- ▶ executing the safety functions.
- ▶ detection of limit value violations.
- ▶ setting the outputs.
- ▶ triggering the STO safety function in the event of an error.
- ▶ triggering the SS1 safety function in the event of an error.

detecting the violation of a limit value

A limit value violation is only reliably detected if the drive remains in the prohibited area for longer than the cycle time of the Tcycle processor system.




WARNING!

A violation of the blocked area is not detected for special applications

If a configured hazardous area is only very briefly violated or a narrow blocked area is traversed at high speed (e.g. while the SLP or SLP-M safety functions are active), such a violation may not be detected by the safety module, due to the specified cycle time of the processor.

It is therefore also essential to test due performance of the safety function if such conditions are really relevant (brief violation of hazardous area, rapidly passing through the blocked area).

Please also refer to the Chapter [Safety checks](#)  166].



NOTICE

For the mechanical system (subsystem D), the time until the machine has reached a safe condition must be determined.

The times for the stop functions (SS1, SS2) are application-specific and do not form part of the specified times.

**INFORMATION****Input filter time**

The input filter times for inputs I0 ... I7 can be adjusted in the configurator, in the safety function menu, under "IO assignment". A value range between 1 ms and 10 ms is available for the filter time. A filter time of 1 ms is the standard setting.

4.8 Safe restart of the machine

A safe standstill during human intervention in hazardous areas is one of the most important requirements for the operation of machinery according to the Machinery Directive.

The EN ISO 14118 standard provides an overview of various measures to avoid unexpected start-up.

If the machine


- ▶ is standing still, resetting the stop command may not trigger a restart, but merely enable it.
- ▶ is standing still following a power failure, the spontaneous restart of a machine when the power supply is reinstated must be prevented if such a restart could pose a risk.
- ▶ is standing still, the effect on machine sensors may not trigger any hazardous movements.

To prevent unexpected start-up, the safety module provides the following safety functions:

- ▶ Safe Torque Off (STO)
- ▶ Safe Operating Stop (SOS)
- ▶ Safe Restart Lock (SRL)



NOTICE

The start-up behaviour of the safety module following a fault or a stop is described in the following chapter [Resetting \(RESET\) the safety module](#)  50] and must be taken into account when designing the safe restart of the machine.

4.9 Resetting (RESET) the safety module

In operating status STO (see [Operating states](#) [169])

- ▶ the safety function is activated. (The motor is switched to torque-free/force-free, power stage enabling by the drive controller is not possible.)
- ▶ there is a 1 signal at the feedback output STO_ACK.

To exit the STO operating status (see chapter [Operating states](#) [169]), the safety module needs to be reset (RESET).

The safety module can be RESET in a variety of ways:


- ▶ **Safety-related**, by a higher-level safety control system
 - via the inputs SS1_ACT or STO_ACT of safety function SS1
 - via the ACT input of the safety function SRL (Safe Restart Lock)
- ▶ **Non-safety-related**, by the drive controller
 - via the "ACK" command

The transition in operating statuses from STO → STARTUP → RUN/FSRUN for the safety module is described as RESTART (see [Operating states](#) [169]). When switching from STARTUP to RUN/FSRUN, the safety function STO is deactivated (power stage enabling by the drive controller is possible) and the motor can execute a movement.

The RESET behaviour of the safety module SE6 can be set to reflect the requirements of the application by configuring:

RESET trigger	RESET behaviour	Description
Inputs SS1_ACT/STO_ACT	0: NOP	No action No RESTART occurs.
	1: RESTART	Acknowledge error The RESTART is triggered.
ACK command from drive controller	0: NOP	No action No RESTART occurs.
	1: ACK ERR	Acknowledge error No RESTART occurs.
	2: RESTART	Acknowledge error A RESTART is triggered.

RESET trigger	RESET behaviour	Description
Safety function SRL	0: NOP	No action No RESTART occurs.
	1: ACK ERR	Acknowledge error No RESTART occurs.
	2: RESTART	Acknowledge error A RESTART is triggered.



NOTICE
A RESTART of the safety module can only occur if there is a 1 signal at inputs SS1_ACT and STO_ACT (optional).

Safety-related RESET by the inputs SS1_ACT or STO_ACT

Resetting of the safety module SE6 is triggered by switching from 0 signal to 1 signal at one of the two inputs.

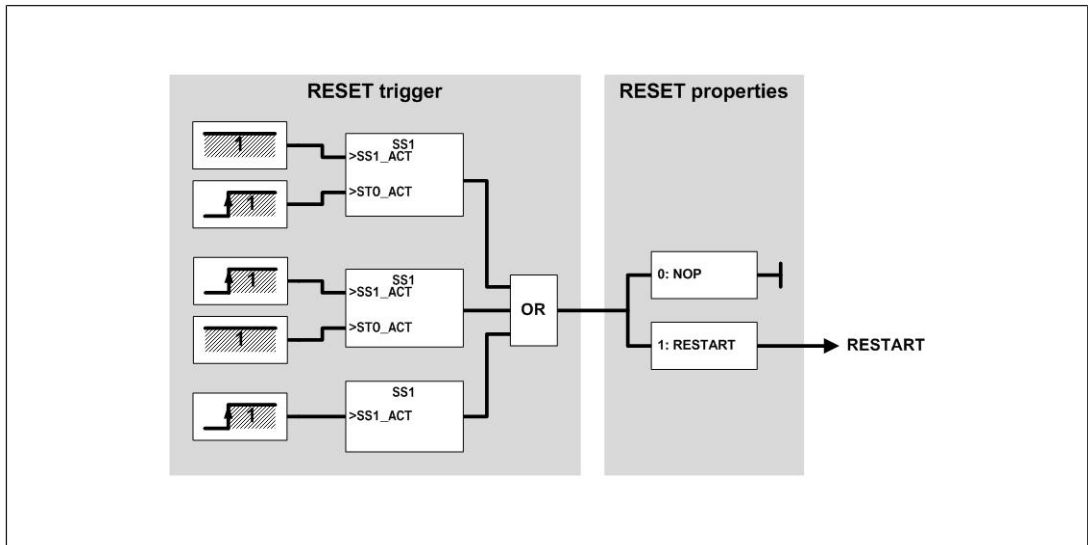


Fig.: RESET by the inputs SS1_ACT or STO_ACT

Legend

- NOP No operation
- RESTART A RESTART is triggered

Configuration of the RESET behaviour in the configuration tool

Field: RESET trigger: Inputs SS1_ACT/STO_ACT			
Input field	Valid entry	Unit	Description
RESET behaviour	0: NOP	--	No action No RESTART occurs.
	1: RESTART	--	A RESTART is triggered.

**INFORMATION**

A combination with the safety function SRL (Safe Restart Lock) is possible (see above). The RESTART then only occurs if there is a 1 signal at the input of the safety function SRL (a RESTART is enabled).

**NOTICE**

If the safety module is in the operating status STO without a stop function having been activated (e.g. because of an internal error), there is a 1 signal at the inputs. To trigger resetting of the safety module, the higher-level control system needs to perform the following steps:

- Evaluate the STO_ACK signal to identify the operating status STO
- Bring the machine/system into a safe condition
- Create a positive flank at one of the inputs of safety function SS1

Non-safety-related RESET by the drive controller's ACK command

The drive controller's ACK command can be used as follows:

- ▶ It performs no action in the safety module (0: NOP).
- ▶ It acknowledges the error stack of the safety module (1: ACK ERR).
- ▶ It acknowledges the error stack and triggers a RESTART of the safety module (2: RESTART).

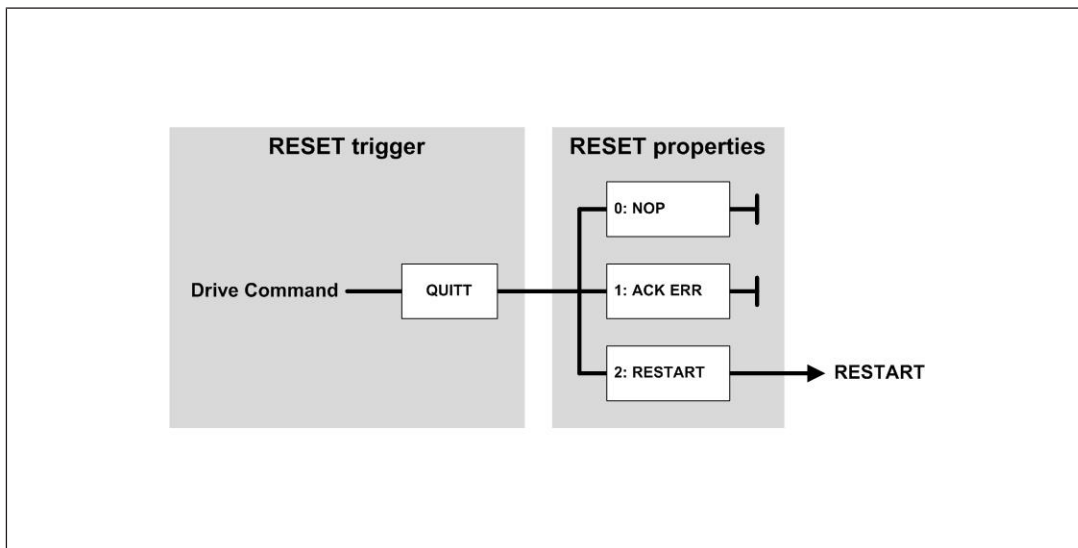


Fig.: RESET by the drive controller's ACK command

Legend

- NOP No operation
- ACK ERR Acknowledge errors
- RESTART A RESTART is triggered

Configuration of the RESET behaviour in the configuration tool

Field: RESET trigger: ACK command from drive controller			
Input field	Valid entry	Unit	Description
RESET behaviour	0: NOP	--	No action No RESTART occurs.
	1: ACK ERR	--	Acknowledge error No RESTART occurs.
	2: RESTART	--	Acknowledge error A RESTART is triggered.



DANGER!

Potentially fatal injuries as a result of unexpected start-up of the motor

If exclusively the non-safety-related ACK command of the drive controller is used to RESTART the safety module, this could lead to unintended enabling of the drive controller and therefore to unexpected start-up of the motor.

Use the ACK command of the drive controller in combination with the safety function safe restart interlock (SRL) or use the inputs SS1_ACT/STO_ACT of safety function SS1. Both combinations enable a safety-related RESET of the safety module.

**INFORMATION**

The ACK command can be triggered by the drive controller as follows:

- By pressing the ESC button on the drive controller operating panel.
 - By setting the control bit A180, bit 1 (source binary signals device control: A61 must be set to "Parameter").
 - By setting the control bit A180, bit 1 (source binary signals device control: S31 must be set to "Parameter")
- See operating manual for drive controller SD6

Safety-related RESET by the safety function SRL

The safety function SRL can be used as follows:

- ▶ As safety-related enabling for a RESTART (0: NOP, 1: ACK ERR). The RESTART is triggered by the alternative RESTART options inputs SS1_ACT/STO_ACT or by the ACK command of the drive controller.
- ▶ Triggering the RESTART of the safety module (2: RESTART).

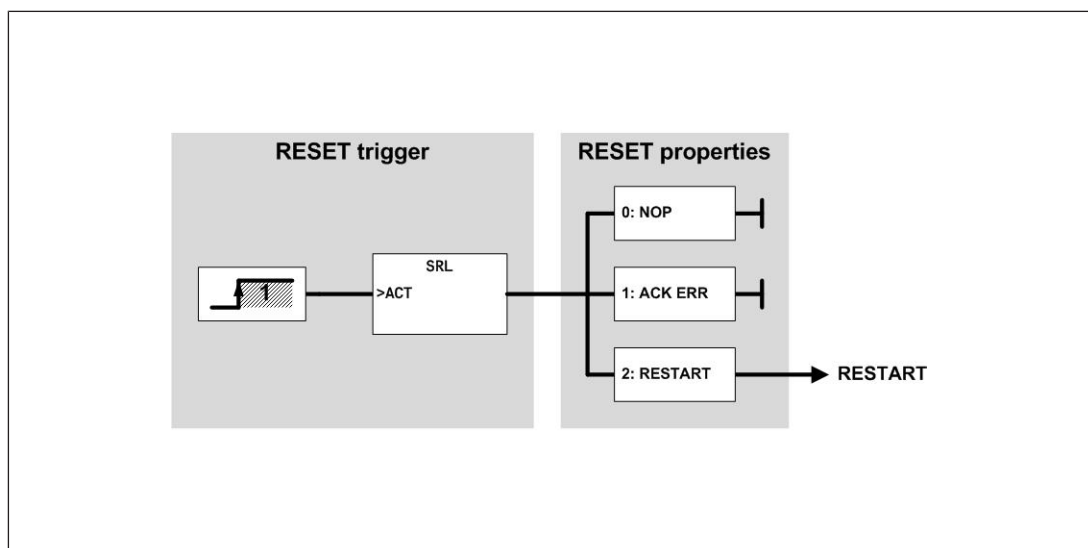


Fig.: RESET by the safety function SRL

Legend

NOP	No operation
ACK ERR	Acknowledge errors
RESTART	A RESTART is triggered.

Configuration of the RESET behaviour in the configuration tool

Field: RESET trigger: Safety function SRL			
Input field	Valid entry	Unit	Description
RESET behaviour	0: NOP	--	No action No RESTART occurs.
	1: ACK ERR	--	Acknowledge error No RESTART occurs.
	2: RESTART	--	Acknowledge error A RESTART is triggered.

The safety function SRL is described in detail in the following chapter [Safe Restart Lock \(SRL\)](#) [137]

A combination with the ACK command of the drive controller is possible (see above). The RESTART then only occurs if there is a 1 signal at the input of the safety function SRL (a RESTART is enabled).

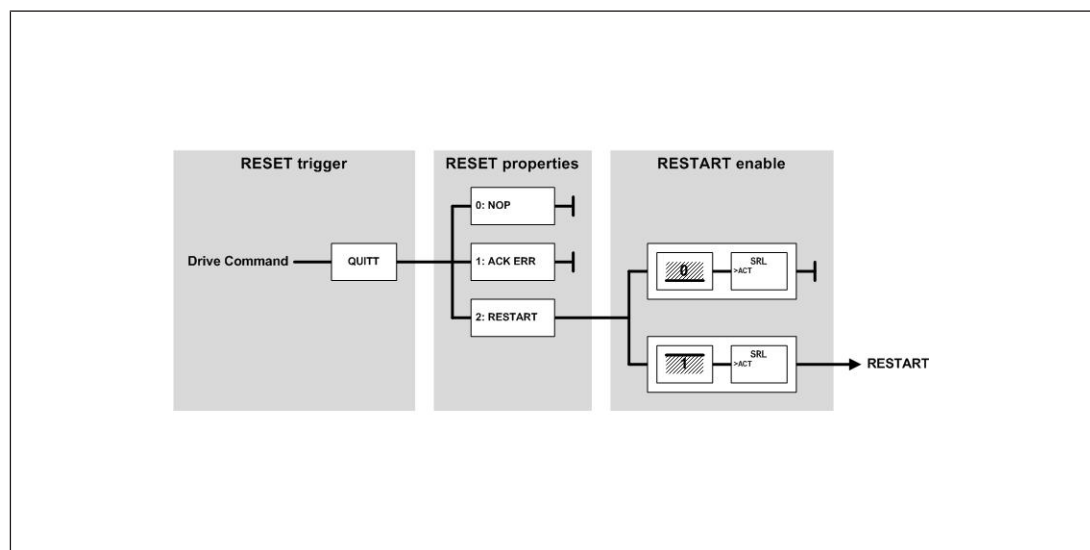


Fig.: RESET by the ACK command of the drive controller and enabling by the safety function SRL

Legend

- NOP No operation
- ACK ERR Acknowledge errors
- RESTART A RESTART is triggered.

4.10 Application of the SBC and SBT safe brake functions

The safety module SE6 makes it possible to trigger and test standby current-activated mechanical brakes. Mechanical brakes may be required for various safety functions to reduce the risk in environments in which "load suspension" is common.

Mechanical brakes are particularly used with vertical traversing movements that could endanger operators and third parties. Such movements may pose risks both during operation and when the system is switched off, due to the force of gravity.

If a load has been stopped but is to be suspended in its current position, a brake is usually used. The "load suspension" safety function is one of the most important among the many different applications. In the safety module SE6, the "load suspension" safety function can be implemented by using the SBC and SBT safety functions.

In addition to safe suspension, the SBC and SBT safety functions can also reduce the risk of other applications that make use of mechanical brakes, such as when stopping high mass inertias.

4.10.1 Definition of the "load suspension" safety function

The "load suspension" safety function is a technical measure to prevent unintended sagging of loads.

Gravity-loaded axes must be kept in position:

- During normal operation
- During interrupted operation

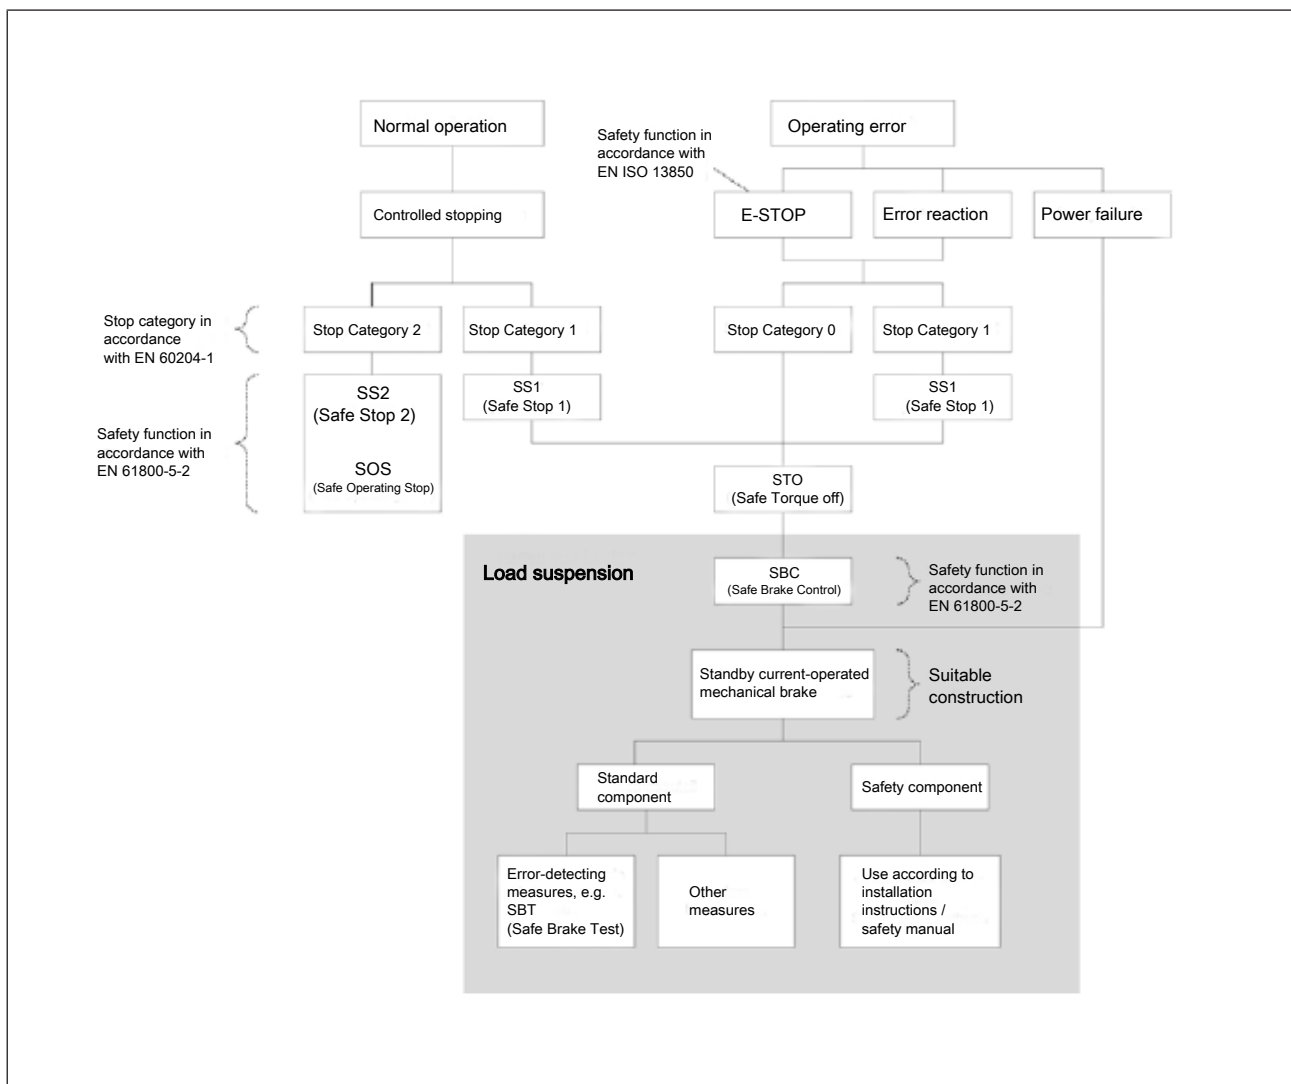


Fig.: Overview of "load suspension" during normal and interrupted operation

4.10.2 Standby current-operated, mechanical brakes

4.10.2.1 Safety components

Mechanical brakes provided by the manufacturer for safe suspension or stopping are deemed to be safety components in terms of the Machinery Directive, provided that they are sold separately.

The manufacturer provides the following documents together with the brake:

- A statement of conformity
- Installation instructions
- A safety manual for intended use in safety-related applications

4.10.2.2 Standard components

Brakes are frequently used as standard components in safety functions.

In this case the user must perform safety-related monitoring in accordance with EN ISO 13849-1 and provide proof that the brakes meet the following requirements:

- All requirements of the PL r related to the "Load suspension" safety function

Other essential measures are as follows:

- Appropriate design of the brake
- Error detection measures, such as a brake test

4.10.2.3 Motor brakes

Motor brakes (motor-integrated brakes) cannot be sold separately. This means that they cannot be sold independently from the motor. They can therefore not be categorised as a safety component in accordance with the Machinery Directive 2006/42/EC.

4.10.3 Options of "Load suspension" implementation

The safety module SE6 offers the option

- of triggering standby current-activated, mechanical brakes.
- of triggering an external safe system for load suspension.

The safety module SE6 provides functions and interfaces that permit the user to implement "load suspension" in various ways.

The implementation concept is determined by:

- The specifications for mechanical brakes
(depending on the load to be suspended, mounting location, etc.)
- The required performance level (PL r)
- The required category
- The test options

The following requirements can be derived from the specified mechanical brakes:

- Brake triggering
(voltages, currents, performance drop, emergency shutdown, etc.)
- Measures for error detection

4.10.3.1 Performance trigger of standby current-activated mechanical brakes by the safety module

During performance triggering, the brakes are connected to the 2-pole outputs of the safety module.

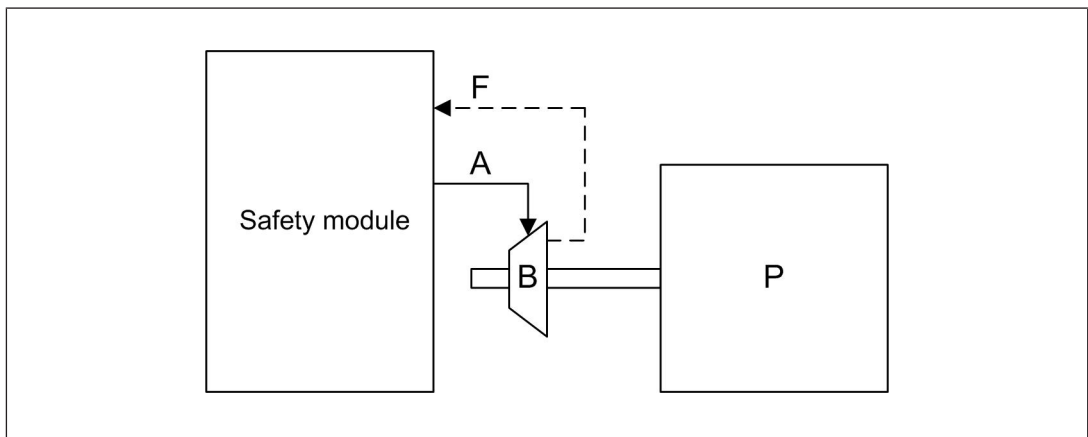


Fig.: Performance trigger for standby current-activated, mechanical brakes

Legend

- F Optional feedback
- A Performance trigger
- B Standby current-operated, mechanical brake
- P Driven system (for example a gravity-loaded axis)

4.10.3.2 Triggering an external safe system

If an external safe system is used, this is triggered via the 1-pole safe outputs of the safety module. These outputs must be allocated to the SBC safety function.

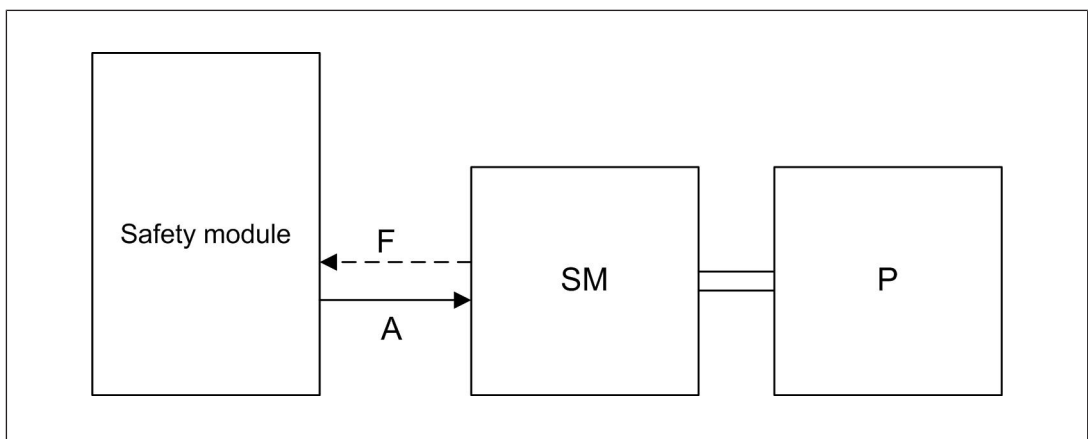


Fig.: Triggering an external safe system

Legend

- F Optional feedback
- A Trigger signal
- SM Safe system for shutdown and load suspension
- P Driven system (for example a gravity-loaded axis)


4.10.4 Examples

General information about the examples:

The safety integrity tables indicate the maximum achievable categories according to EN ISO 13849-1.

No performance levels can be indicated, as the failure rates and the mechanical requirements differ from application to application.

The following requirements apply to all "Load suspension" examples:

- ▶ To detect a hazardous movement (e.g. sagging of the load to be suspended), it is essential that a save movement function (e.g. SLS, SOS, etc.) should be active. In the event of an error, this will trigger an error reaction function and activate the STO safety function.
- ▶ To ensure that a brake is activated if the STO safety function is active, thus stopping the hazardous movement, at least one SBC safety function must be configured (see [Safe Brake Control \(SBC\)](#) [ 122]).
- ▶ An error analysis must be carried out for the mechanical brake used. This must be performed for each application.
- ▶ An error analysis must be carried out for the driven system. This must be performed for each application.

4.10.4.1 "Load suspension" with an external brake (standard component)

Triggering of a standby current-activated, mechanical brake by the 2-pole SBC+/- output (X8) with or without ventilation monitoring (feedback).

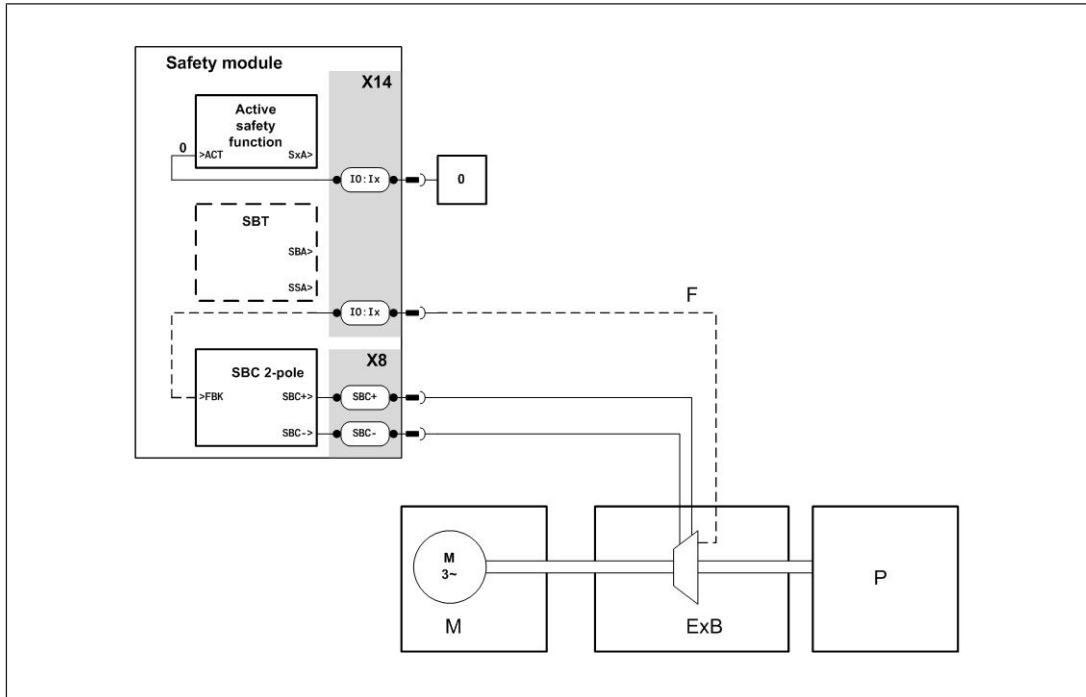


Fig.: "Load suspension" with an external brake (Brake 2) (standard component)

Legend

- M Motor
- F Optional ventilation monitoring (feedback)
- - - Dotted line, optional
- ExB External, standby current-activated, mechanical brake (Brake 2)
- P Driven system (for example a gravity-loaded axis)

Max. category in accordance with EN ISO 13849-1	1	2
Active stop function or safety function for motion monitoring	Essential	Essential
SBC (Safe Brake Control)	Essential	Essential
SBC ventilation monitoring feedback	optionally	optionally
SBT (Safe Brake Test) Test interval according to EN ISO 13849-1 (requirement rate ≤ 1/100 of test rate or testing takes place immediately when required by the safety function)	Not required	Essential
Categorisation of the brake as a proven component (Cat. 1)	Essential	Not required
Categorisation of the brake as a safety component	Not required	Not required

The following notes apply:

- ▶ A mechanical brake must be used to achieve Category 1 according to EN ISO 13849-1. This must be categorised as a proven component.
- ▶ If necessary, ventilation monitoring of the brake can be evaluated by the SBC safety function.
- ▶ If Category 2 according to EN ISO 13849-1 is to be achieved, the SBT safety function in the safety module SE6 must be configured and the brake must be tested.

4.10.4.2 "Load suspension" with a motor brake (standard component)

Triggering of a standby current-activated, mechanical motor brake by the 2-pole SBC+/- output (X8).

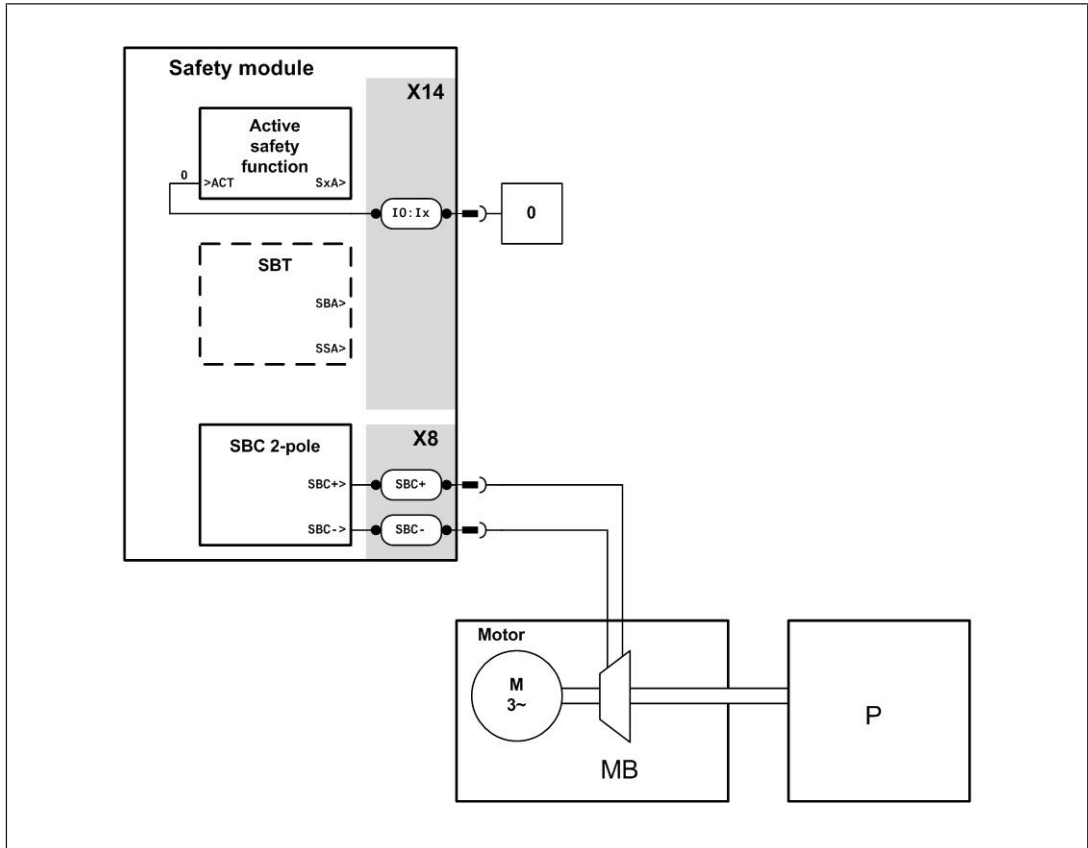


Fig.: "Load suspension" with a motor brake

Legend

- MB Standby current-operated mechanical motor brake
- P Driven system (for example a gravity-loaded axis)

Max. category in accordance with EN ISO 13849-1	1	2
Active stop function or safety function for motion monitoring	Essential	Essential
SBC (Safe Brake Control)	Essential	Essential
SBC ventilation monitoring feedback	Not required	Not required
SBT (Safe Brake Test) Test interval according to EN ISO 13849-1 (requirement rate $\leq 1/100$ of test rate or testing takes place immediately when required by the safety function)	Not required	Essential
Categorisation of the brake as a proven component (Cat. 1)	Essential	Not required
Categorisation of the brake as a safety component	Not required	Not required

The following notes apply:

- ▶ A mechanical brake must be used to achieve Category 1 according to EN ISO 13849-1. This must be categorised as a proven component.
- ▶ If Category 2 according to EN ISO 13849-1 is to be achieved, the SBT safety function in the safety module SE6 must be configured and the brake must be tested.

4.10.4.3 "Load suspension" with an external safety brake (safety component)

Triggering of an external, standby current-activated, mechanical safety brake by the 2-pole SBC+/- output (X8).

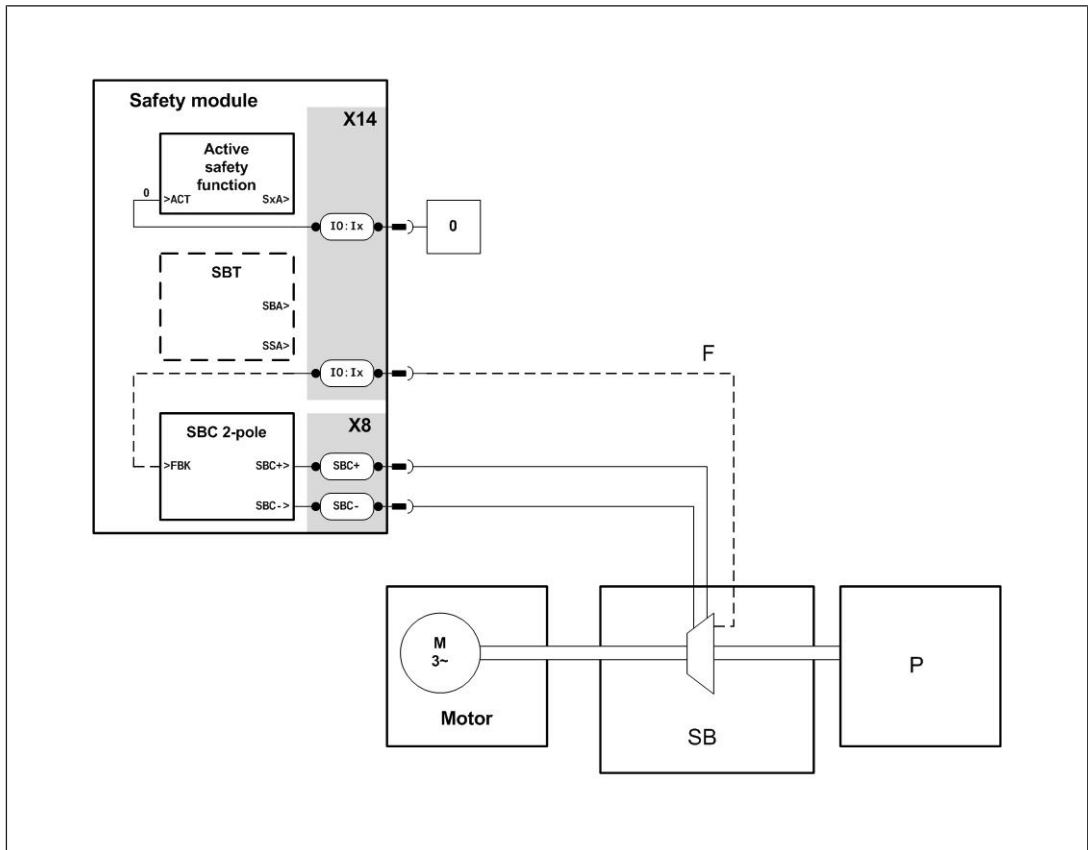


Fig.: "Load suspension" with an external safety brake (safety component)

Legend

- F Optional ventilation monitoring
- SB External, standby current-activated, mechanical brake
- P Driven system (for example a gravity-loaded axis)

Max. category in accordance with EN ISO 13849-1	4
Active stop function or safety function for motion monitoring	Essential
SBC (Safe Brake Control)	Essential
SBC ventilation monitoring feedback	optionally
SBT (Safe Brake Test)	optionally
Categorisation of the brake as a proven component (Cat. 1)	Not required
Categorisation of the brake as a safety component	Essential

The following notes apply:

- ▶ If a mechanical brake categorised as a safety component is used, a maximum of Category 4 according to EN ISO 13849-1 can be achieved.

- ▶ The brake requirements in accordance with the installation instructions/ safety manual must be taken into account.
- ▶ Depending on the requirements, the SBT safety function and the ventilation monitoring system may be used.

4.10.4.4 "Load suspension" by triggering an external system

Triggering an external safe system for load suspension, using safe 1-pole outputs and optional evaluation of feedback signals.

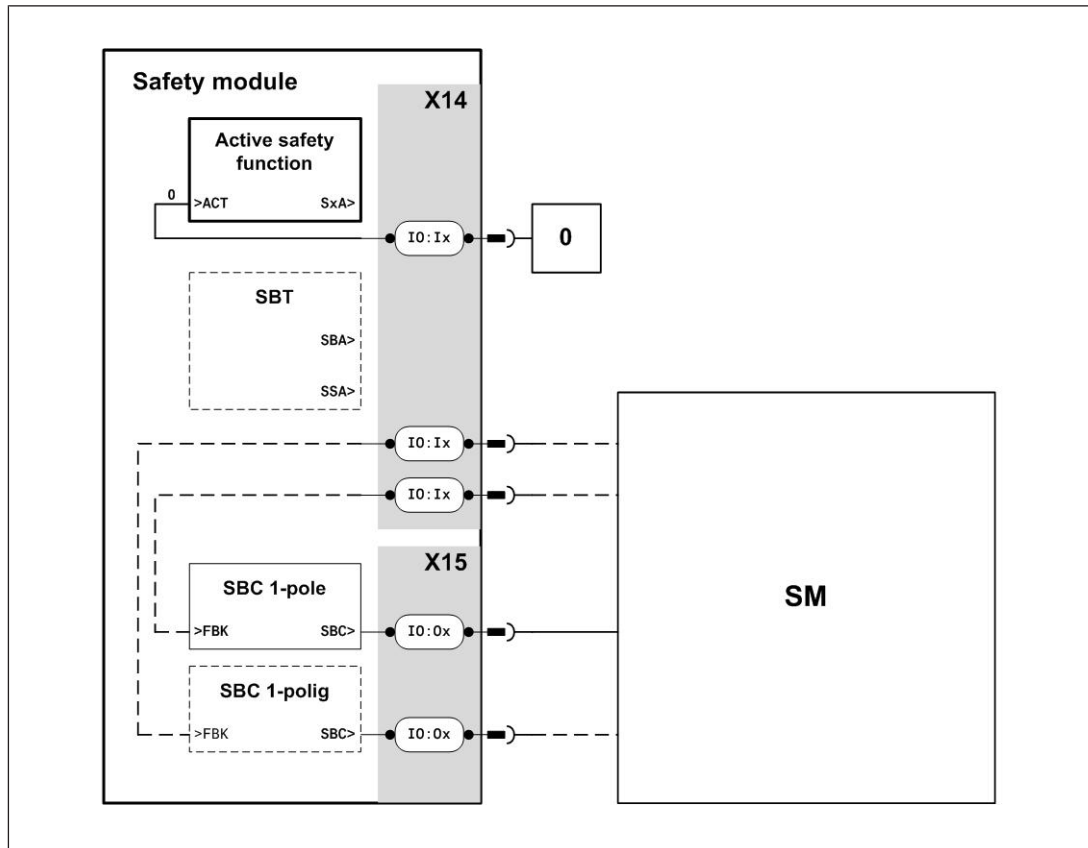


Fig.: "Load suspension" by triggering an external system


Legend

SM Safe system for load suspension

Max. category in accordance with EN ISO 13849-1	4
Active stop function or safety function for motion monitoring	Essential
SBC (Safe Brake Control)	Essential
SBC ventilation monitoring feedback	optionally
SBT (Safe Brake Test)	optionally
Categorisation of the brake as a proven component (Cat. 1)	optionally
Categorisation of the brake as a safety component	optionally

The following notes apply:

- ▶ The safety module SE6 only generates trigger signals for activation of the "Load suspension" safety function.
- ▶ If necessary, feedback signals from the system can be evaluated by the safety module SE6 .

- ▶ Error monitoring of brakes, performance trigger and the driven system must be covered by the external system.
- ▶ The external system should be regarded as a separate, safety-related subsystem (SRP/CS according to EN ISO 13849-1).
- ▶ The achievable category depends on the characteristics of the safe, external brake controls.
- ▶ Please take note of the chapter on [Feedback from the safety functions](#)  29] to prevent and detect errors due to overvoltage.

Apply the measures in Chapter [Application of the SBC and SBT safe brake functions](#)  56].

4.10.4.5 "Load suspension" with two brakes

Triggering a standby current-activated, mechanical motor brake and an external standby current-activated brake.

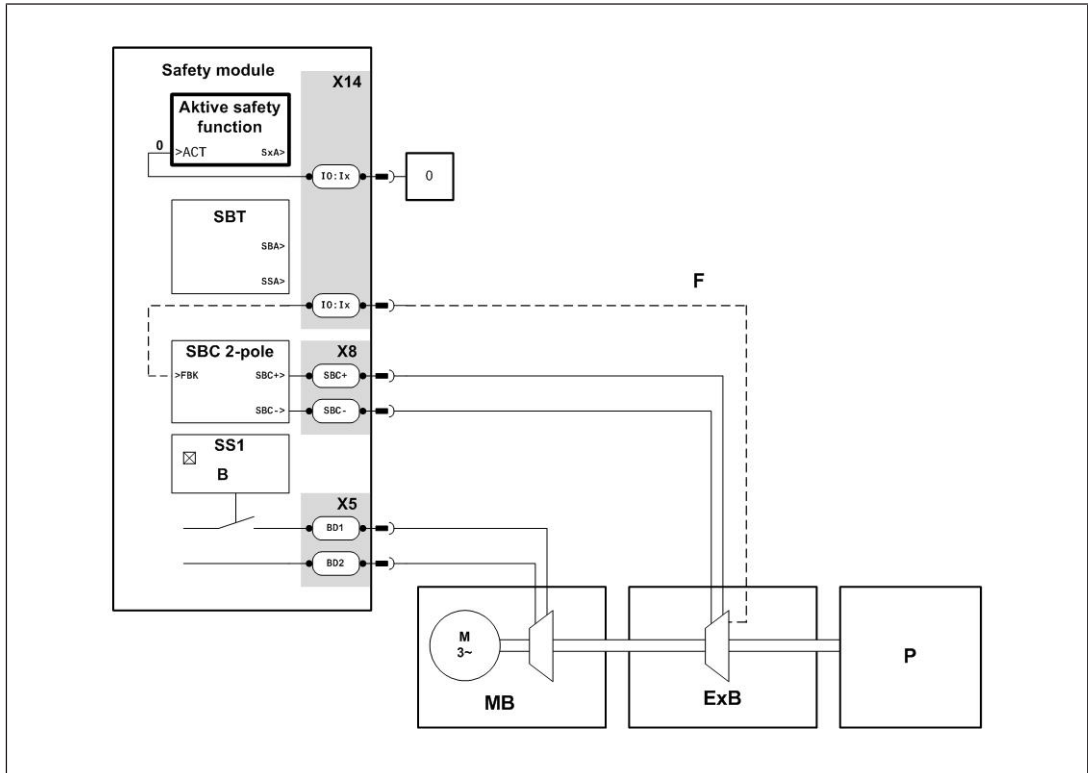


Fig.: "Load suspension" with two brakes

Legend

- F Optional ventilation monitoring
- B Triggering BD1/BD2 for STO
- ExB External, standby current-activated, mechanical brake
- MB Standby current-operated mechanical motor brake
- P Driven system (for example a gravity-loaded axis)

Max. category in accordance with EN ISO 13849-1	4
Active stop function or safety function for motion monitoring	Essential
SBC (Safe Brake Control)	Essential
SBC ventilation monitoring feedback	optionally
SBT (Safe Brake Test)	Essential
Categorisation of the brakes as a proven component (Cat. 1)	Not required
Categorisation of the brakes as a safety component	Not required

The following notes apply:

- ▶ When using two brakes in combination with the SBT safety function, a "Load suspension" up to Category 4 in accordance with EN ISO 13849-1 can be achieved.
- ▶ Brakes must meet the basic requirements of the application (momentum, temperature, environment, vibration, etc.).
- ▶ Brakes must be employed in accordance with the intended use as prescribed by the manufacturer.

4.10.4.6 "Load suspension" with a motor brake and an external system

Triggering a standby current-activated, mechanical motor brake and an external safe system.

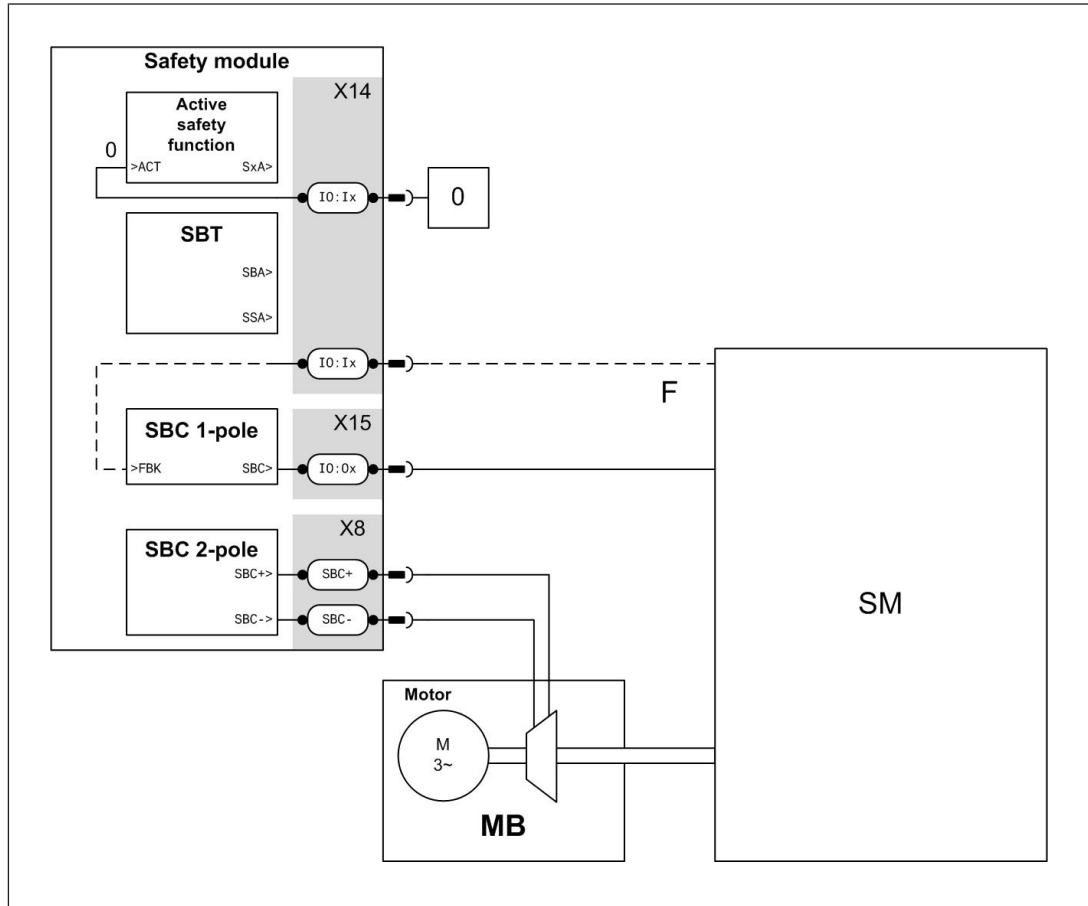



Fig.: "Load suspension" with a motor brake and an external safe system

Legend

- F Optional ventilation monitoring
- SM Safe system for load suspension
- MB Standby current-operated mechanical motor brake

Max. category in accordance with EN ISO 13849-1	4
Active stop function or safety function for motion monitoring	Essential
SBC (Safe Brake Control)	Essential
SBC ventilation monitoring feedback	optionally
SBT (Safe Brake Test)	Essential
Categorisation of the brake as a proven component (Cat. 1)	Not required
Categorisation of the brake as a safety component	optionally

The following notes apply:

- ▶ The safety module SE6 only generates trigger signals for activation of the "Load suspension" safety function for the external system.
- ▶ If necessary, feedback signals from the system can be evaluated by the safety module SE6 .
- ▶ The external system should be regarded as a separate, safety-related subsystem (SRP/CS according to EN ISO 13849-1).
- ▶ A separate error evaluation must be carried out for the components included in the safe system (e.g. brake, performance trigger, driven system, etc.)
- ▶ Please take note of the chapter on [Feedback from the safety functions](#)  29] to prevent and detect errors due to overvoltage.
- ▶ Brakes must meet the basic requirements of the application (momentum, temperature, environment, vibration, etc.).
- ▶ Brakes must be employed in accordance with the intended use as prescribed by the manufacturer.

4.10.5 Procedure when determining the safety integrity

The "Load suspension" safety function consists of several safety-related components. These components differ from application to application.

This operating manual contains the following information and help functions:

- ▶ Typical examples for implementation using a maximum achievable category
- ▶ Description of the safety functions of the safety module SE6
- ▶ Safety characteristics of the safety module SE6
- ▶ Description of test functions for error detection

In addition, the following values must be determined for the mechanical brakes:

- ▶ $MTTF_D$ values
- ▶ Diagnostic coverage (DC)
The safety module provides the following error detection functions:
 - Safe Brake Test (SBT)
 - Evaluation of feedback signals by the SBC safety function

4.11 Safety functions

Safety functions maintain a safe condition on a plant or prevent hazardous conditions arising on a plant.

Safety functions for electrical drives are defined in EN 61800-5-2.

Configuration of safety functions in the configuration tool

A maximum of 10 safety functions can be configured in the configuration tool, using function blocks. In addition the safety function Safe Stop1 (SS1) must always be configured.

The safety function SS1 cannot be deactivated in the Configurator. The input for safety function SS1 on the safety module must always be connected.

All safety functions must be configured individually.

The following function blocks of the safety functions can be used only once:

- ▶ Safe Stop 1 (SS1), a fixed component of the safety configuration
- ▶ Safe Restart Lock (SRL)
- ▶ Safe Status Output (SSO)
- ▶ Safe Brake Test (SBT)

The other function blocks of the safety functions can be used as many times as desired (limited only by the maximum number of safety functions).

External activation of safety functions

- ▶ The safety functions are activated with the 1-pole safe inputs of the safety module SE6, see [Activation of safety functions](#) [27].
- ▶ These inputs operate in accordance with the standby current principle (on switching off). The programmable safety system activates the safety functions via a 0-signal.

Feedback from the safety functions

- ▶ Message via 1-pole semiconductor outputs
 - 1-signal: If monitoring has been activated and within the parametrised limit values
 - 0-signal: If monitoring has been deactivated and outside the parametrised limit values


Simultaneous activation of safety functions

- ▶ All safety functions can be active at the same time. However, safety function SS1 has priority over all other safety functions.
- ▶ If SS1 is activated, the drive is stopped in accordance with its configuration.
- ▶ No other safety functions are processed or called up during this time.

Reaction to limit value violations and errors

- ▶ When the parametrised limit values are exceeded (FAULT), the SS1 safety function is triggered with the aid of the emergency stop deceleration ramp and the feedback output of the safety function is switched to the 0-signal.
- ▶ When parametrised limit values are exceeded for monitoring functions (FAULT), only the alarm output of the safety function is switched to the 0-signal.

- ▶ In the event of an internal fault (FAULT) of the safety module SE6 , the SS1 safety function is triggered with the emergency stop deceleration ramp.
- ▶ In the event of a serious fault (FATAL), for example an internal memory or data fault, the STO safety function is directly activated. The torque or force generation in the motor is prevented. The safety module can only be restarted once it has been switched off and on again and can only continue to be operated if the fault is not permanent.

For further information see [Operating states](#)  169].

4.11.1 Permanent monitoring (optional)

Permanent monitoring means the motion and monitoring functions are permanently activated. With permanent monitoring of a safety function configured, this is active after run-up of the safety module. The safety module then automatically switches to the FSRUN state. Activation or deactivation at runtime is not possible.

- ▶ The safety function is monitored without an activation signal and permanently without a delay time.
- ▶ No external wiring is necessary.

Parameter monitoring can be configured for the following safety functions

Motion functions

- ▶ Safe Direction (SDI)
- ▶ Safely Limited Speed (SLS)
- ▶ Safe Speed Range (SSR)
- ▶ Safely Limited Position (SLP)

Monitoring functions

- ▶ Safely Monitored Direction (SDI-M)
- ▶ Safely Monitored Speed (SLS-M)
- ▶ Safely Monitored Speed Range (SSR-M)
- ▶ Safely Monitored Position (SLP-M)

Configuration of permanent monitoring in the configuration tool

Field: Permanent monitoring			
Input field	Valid entry	Unit	Description
Permanent monitoring	Activate/deactivate (default: deactivated)	--	Activates permanent monitoring

**INFORMATION****Permanent monitoring for the safety function SLP**

The situation may arise where the drive can no longer be moved back into the valid range in a controlled manner when it has left the valid position range. The safety card cannot be reset while the axis is in the invalid range.

Possible remedy:

The axis is returned mechanically (manually) to the valid range if this is technically feasible.

Alternatively permanent monitoring of the safety function must be dispensed with and activation can be performed via a digital input. In this case the safety function can be deactivated and the axis moved back into the permitted range.

**INFORMATION****Hysteresis (optional)**

If the **permanent monitoring option** has been selected in the configurator of a monitoring function, it is mandatory to select the hysteresis option (see [Hysteresis for monitoring functions](#) [143]).

The Set/Reset function (default) is then not possible.



4.11.2 Safe torque off, STO

The STO safety function prevents torque or force generation in the motor. It is redundantly designed via two safe shutdown paths in the safety module SE6. To prevent the motor running down in an uncontrolled manner, in normal operation the safety function STO is activated via the SS1 safety function. The STO safety function forms part of the SS1 safety function and is also configured via this function.


- ▶ The STO safety function corresponds to the definition in accordance with EN 61800-5-2.
- ▶ The STO safety function corresponds to a category 0 stop (uncontrolled stop) in accordance with EN 60204-1.
- ▶ An emergency stop in accordance with EN ISO 13850 can be realised with the STO safety function.
- ▶ The STO safety function can be used to prevent an unexpected start-up in accordance with ISO 14118 after the power supply has been switched off.
- ▶ A safety stop in accordance with EN ISO 10218-1 can be realised with the STO safety function.


Activation of the STO safety function

The safety function STO can be activated in a variety of ways:


- ▶ During normal operation, by external activation at the optional activation input STO_ACT of the SS1 safety function, see [Safe stop 1 \(SS1\)](#)  80].
- ▶ During normal operation, with the SS1 safety function activated, once a machine stop has been detected or the monitoring time has run out.
- ▶ In the event of an error, as an error reaction of the deceleration ramp monitoring of the SS1 safety function.
- ▶ When the STO safety function has been activated, the safety module switches to the STO operating state, see [Operating states](#)  169].

Interaction with safe brake control (SBC)

If any external forces influence the motor axis (e.g. suspended loads), additional measures (e.g. a standby current brake) are required. This is to avoid hazards when the STO safety function is active, see [Application of the SBC and SBT safe brake functions](#)  56]. The SBC safety function in the configuration tool must be configured for this purpose. If the STO safety function has been activated, the output is set to a 0-signal (brake activation). If the STO safety function is switched off, the hardware output of the SBC safety function is triggered, in accordance with its configuration (configuration: linking to the brake trigger signal of the Drive controller active or not). For ventilation purposes, the hardware output is set to the 1-signal (brake is ventilated).

For further information about the SBC safety function, see [Safe Brake Control \(SBC\)](#)  122].

Activation inputs and feedback outputs of the STO safety function

The activation inputs and feedback outputs of the STO safety function form part of the SS1 safety function and are described in the chapter [Safe stop 1 \(SS1\)](#)  80].



NOTICE

STO operating status

In the STO operating status, a 0 signal is output at all feedback outputs of the configured safety functions.

Exceptions:

Feedback output STO-ACK of the safety function SS1 reports the active status STO with a 1 signal.

Feedback output SBT_SBA of the safety function SBT remains set throughout the inspection period.

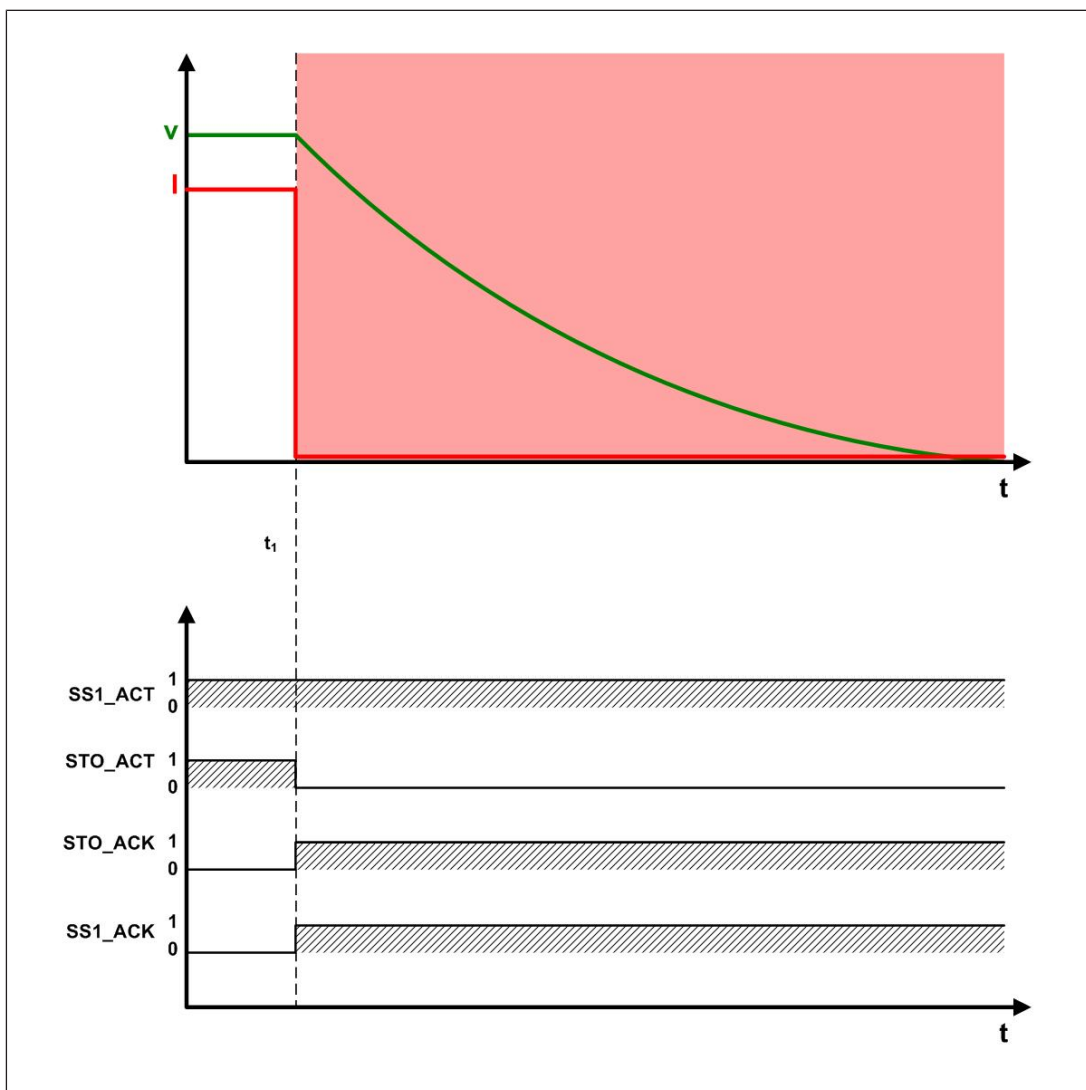


Fig.: Safety function STO

Legend

- v Speed
- T Torque/force generation
- t_1 Activation of the safety function STO


SS1_ACT	Input for activation of the SS1 safety function
STO_ACT	Input for activation of the STO safety function Activation input STO_ACT (optional) Input required as a second shutdown path to achieve SIL3/PLe.
STO_ACK	Output for feedback from safety function STO

4.11.3 Safe stop 1 (SS1)

The safety function SS1 triggers braking of the motor to a standstill. The safety function STO is then performed and the motor is switched to torque-free/force-free.

- ▶ The safety function SS1 corresponds to the definition in accordance with EN 61800-5-2.
- ▶ The safety function SS1 corresponds to a category 1 stop, a controlled stop in accordance with EN 60204-1.
- ▶ The safety function SS1 is relevant for calculation of overrun in accordance with EN ISO 13855.
- ▶ A safety stop in accordance with EN ISO 10218-1 can be realised with the safety function SS1.

The safety function must always be contained in a configuration. It cannot be used multiple times.

A RESET of the safety module can be carried out via the inputs of the safety function SS1 (see [Resetting \(RESET\) the safety module](#) [ 50]).

Activating safety function SS1

The safety function SS1 can be deactivated in a variety of ways:

- ▶ Normally by external activation at the activation input SS1_ACT.
- ▶ In the event of an error as a reaction upon limit value violation by other safety functions.
- ▶ In the event of an error as a reaction to an internal error in the safety module.


Motor shutdown in normal operation and in the event of an error

Controlling the brake ramp to shut down the motor, both in normal operation and in the event of an error, is performed either

- ▶ drive-activated – by the Drive controller, or
- ▶ controller-activated – by a higher-level control system

Configuration of the safety function SS1 in the configuration tool

Field: Stop function		
Input field	Options	Description
Stop function	Drive-activated (internal) (default)	Control of the brake ramp drive-activated
	Controller-activated (external)	Control of the brake ramp controller-activated

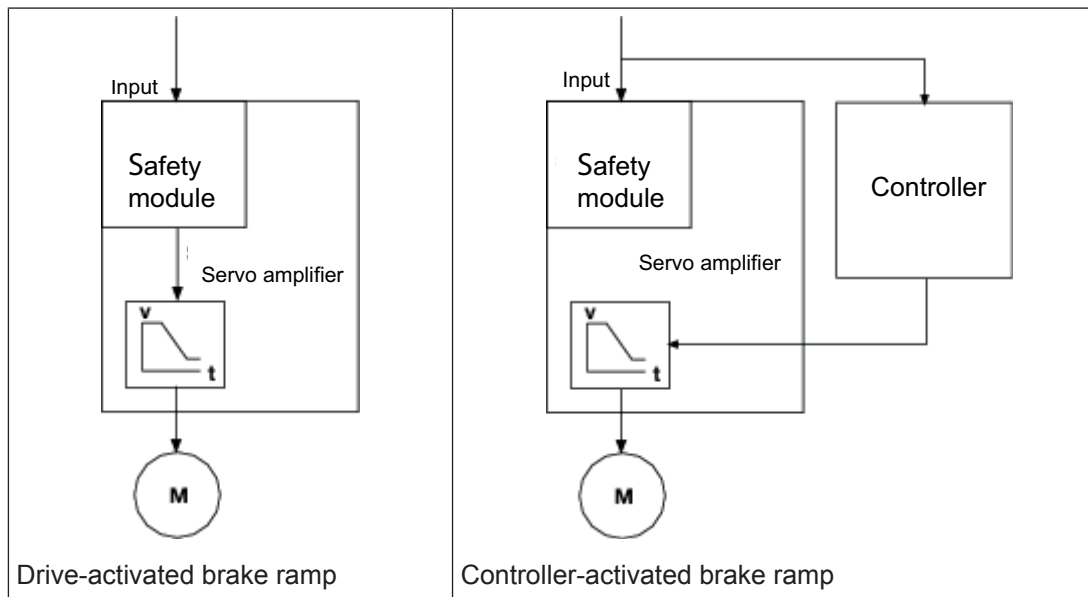

Drive-activated brake ramp

The safety module

- ▶ transmits the brake ramp (normal operation or in event of error) to the Drive controller.
- ▶ starts the braking process in the Drive controller.
- ▶ monitors the braking process.

Setpoints for a higher-level control system are ignored by the Drive controller while the safety function SS1 is active.



NOTICE

Drive-activated brake ramp

During drive-activated shutdown, axes lose their synchrony if the axes form a synchronous axis system via the control system.

Compensation movements of the motor may occur in the control system upon restarting.

Controller-activated brake ramp

The safety module

- ▶ provides the brake ramp (normal operation or in the event of an error) for a higher-level control system via the fieldbus connection of Drive controller.
- ▶ provides the signal for starting the braking process of a higher-level control system via the fieldbus connection of Drive controller.
- ▶ monitors the braking process.

Information on drive controller/control system fieldbus communication

See chapter [Field bus communication](#) [ 178].

Brake ramp for normal operation

Normally the motor brakes according to the brake ramp that can be set in the configuration tool.

Brake ramp in event of an error

In the event of an error the motor brakes according to the E-STOP brake ramp that can be set in the configuration tool.

Configuration of the safety function SS1 in the configuration tool

Field: Brake ramp			
Input field	Valid entry	Unit	Description
Brake ramp (a_{dec})	0 ... 2147483647 (default: 50000000)	User-defined [default: increments/s ²]	Brake ramp gradient for normal operation
E-STOP brake ramp ($a_{emergencyDec}$)	0 ... 2147483647 (default: 50000000)	User-defined [default: increments/s ²]	E-STOP brake ramp gradient



INFORMATION

With brake ramp monitoring activated, the valid input range of the brake ramp is reduced to 2 ... 2147483647.



INFORMATION

The braking period always depends on the speed of the motor when braking is started.

Activating STO

(see [Safe torque off, STO](#) [ 77])

The safety function STO can be activated in a variety of ways:

- ▶ After a configured delay time has elapsed in normal operation
- ▶ After a configured delay time has elapsed in the event of an error
- ▶ After a configurable speed limit has been undercut (optional)
- ▶ Directly via the activation input STO_ACT (see Activation and feedback)

**INFORMATION**

The STO is activated at the very latest after the delay time has elapsed. The safety margins in the application must be based on the safe delay time.

Configuration of the safety function SS1 in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
STO delay time (t_{del})	0 ... 120000 (default: 100)	[ms]	Delay time for normal operation between activation of SS1 and shutdown with STO.
E-STOP delay time ($t_{emergencyDel}$)	0 ... 120000 (default: 50)	[ms]	Delay time for E-STOP after an error leading to shutdown with STO.

Automatic STO

The safety function STO can be activated as follows before the delay time has elapsed using the "Automatic STO" option:

- ▶ The motor speed must fall below a configured standstill limit value.
- ▶ At a standstill limit value of 0, the software controller enable signal must be evaluated. In other words, if the controller enable signal is withdrawn the safety function STO is activated.

This option is active in both normal operation and in the event of an error.

Configuration of the safety function SS1 in the configuration tool

Field: Automatic STO			
Input field	Valid entry	Unit	Description
Automatic STO	Activate/deactivate (default: deactivated)	--	Activating the automatic STO.
Limit value standstill (v_{lim})	0 ... 16777215 (default: 340)	User-defined [default: increments/s]	If the standstill limit value is undercut, the safety function STO is triggered.

Monitoring of brake ramp

The safety function SS1 offers the option of identifying a hazardous movement at an early point by monitoring the brake ramp. By means of a target/actual comparison of the motor position curve during the braking process, an error reaction is initiated if a configurable position error is exceeded.

In the event of an error there are the following options

- ▶ For a drive-activated brake ramp, the safety function STO is triggered directly.
- ▶ For a controller-activated brake ramp, either the safety function STO or the E-STOP brake ramp (drive-activated) can be triggered directly.

Configuration of the safety function SS1 in the configuration tool

Field: Monitoring of brake ramp			
Input field	Valid entry	Unit	Description
Monitor brake ramp	Activate/deactivate (default: deactivated)	--	Activating brake ramp monitoring
Position error (pos _{err})	0 ... 2147483647 (default: 0)	User-defined [default: increments]	Maximum permitted position error
Error reaction	STO	--	For controller-activated brake ramp, direct triggering of the safety function STO
	E-STOP brake ramp	--	For controller-activated brake ramp, triggering of the E-STOP brake ramp (drive-activated)

Activation and feedback

For activation and feedback of the safety function SS1, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

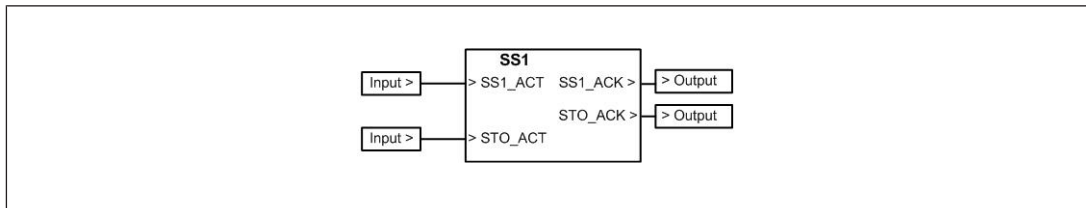


Fig.: Safety function SS1

Legend

SS1_ACT	The safety function SS1 is activated or deactivated via the activation input SS1_ACT. (0 signal activated, 1 signal deactivated)
STO_ACT	The safety function STO is activated or deactivated via the activation input STO_ACT. (0 signal activated, 1 signal deactivated)
SS1_ACK	The feedback output SS1_ACK reports whether the safety function SS1 is activated or deactivated. (1 signal activated, 0 signal deactivated)
STO_ACK	The feedback output STO_ACK reports whether the safety function STO is activated or deactivated. (1 signal activated, 0 signal deactivated)

Activation input STO_ACT (optional)

- ▶ The safety function STO is activated directly via the activation input STO_ACT.
(0 signal activated, 1 signal deactivated)

The activation input STO_ACT may be necessary for the following reasons:

- ▶ Direct triggering of the safety function STO by a higher-level control system.
- ▶ Second shutdown path for the higher-level control system if no error exclusion for activation can be applied.

Configuration of the safety function SS1 in the configuration tool

Field: IO activation			
Input field	Valid entry	Unit	Description
Activate STO input	Activate/deactivate (default: deactivated)	--	Use of activation input for STO

**NOTICE**

The safety function SS1 is a fixed component of the safety configuration. When the safety function SS1 is activated, one axis loses its synchrony with other axes in a synchronous axis system. Safety function SS1 is present precisely once in every safety configuration.

Control of brake output BD1/BD2 (X5) of the drive controller by the safety module (optional)

If safe power control is required for two closed-current brakes, this can be achieved as follows:

- ▶ Power control of the first closed-current brake by the safe brake output SBC+/SBC- of the safety module
- ▶ Power control of the second closed-current brake by the brake output BD1/BD2 of the drive controller

Function

Control of the first brake at the SBC+/SBC- output is done by the safety function SBC (see [Safe Brake Control \(SBC\)](#) [122]).

Control of the second brake at the BD1/BD2 output takes place when the safety function STO is activated. No additional SBC function is required for that purpose.

Parameter setting is performed in the safety function SS1 by the configuration tool.

Configuration of the brake output BD1/BD2 of the drive controller in the configuration tool

Field: Brake output BD1/BD2			
Input field	Valid entry	Unit	Description
Drive-controlled (not safe)	Activate/deactivate (default: deactivated)	--	<p>Function activated: The drive controller has control over the brake output at all times. In the STO state, the brake BD1/BD2 can be released by the drive controller.</p> <p>Function deactivated: In the STO state, the brake BD1/BD2 cannot be released by the drive controller.</p>



WARNING!

Possible loss of the safety function

An optional configuration may result in loss of the safety function. If the second brake at output BD1/BD2 is used in a safety function, the function "Drive BD1/BD2 by drive controller (not safe)" must be deactivated.

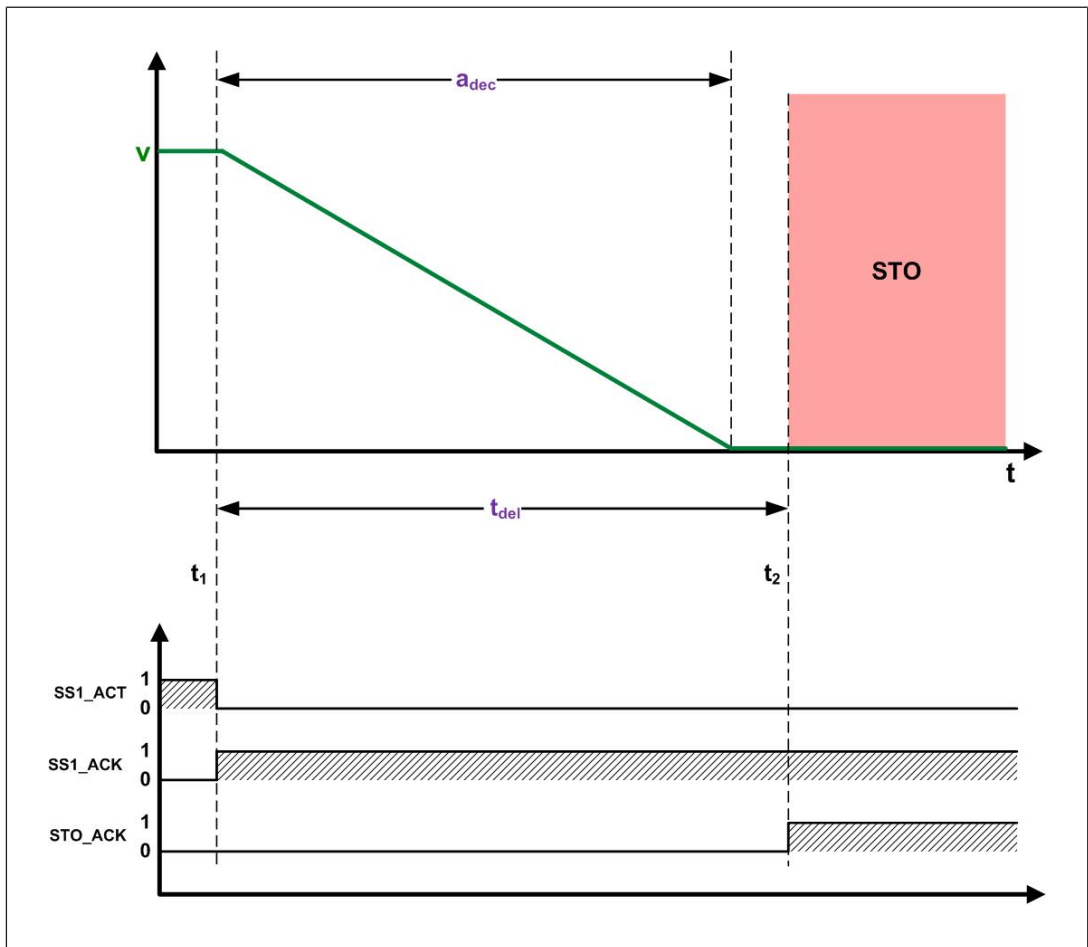


Fig.: Timing diagram: SS1 with STO once the STO delay time has elapsed

Legend

- a_{dec} Brake ramp
- v Speed
- t_{del} STO delay time
- t_1 Activation of the safety function SS1
- t_2 Activation of the safety function STO
- SS1_ACT Input for safety function SS1
- SS1_ACK Output for feedback from safety function SS1
- STO_ACK Output for feedback from safety function STO

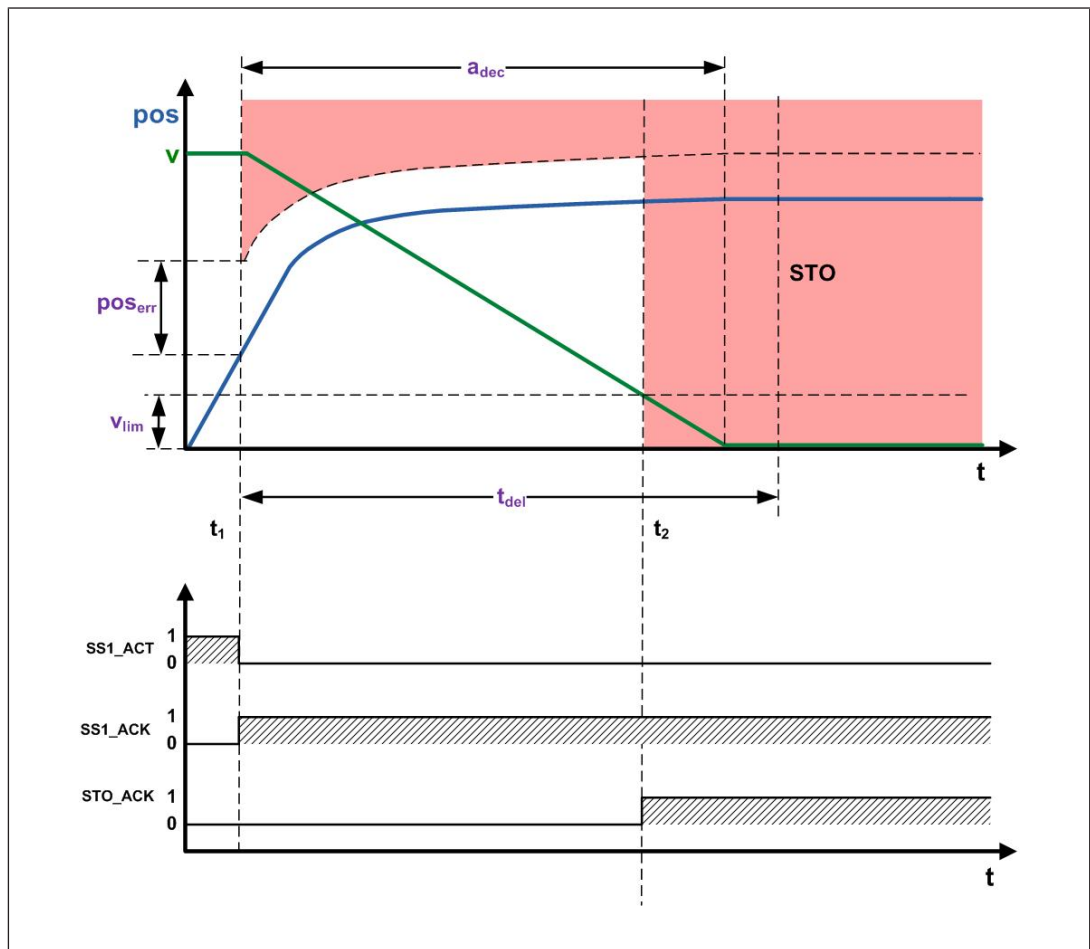


Fig.: Timing diagram: SS1 with automatic STO if standstill detected and brake ramp monitored

Legend

- a_{dec} Brake ramp
- pos Position
- v Speed
- t_{del} STO delay time
- pos_{err} Position error
- v_{lim} Standstill limit value
- t_1 Activation of the safety function SS1
- t_2 Activation of the safety function STO
- SS1_ACT Input for safety function SS1
- SS1_ACK Output for feedback from safety function SS1
- STO_ACK Output for feedback from safety function STO

4.11.4 Safe Stop 2 (SS2)

The safety function SS2 triggers braking of the motor to a standstill. The motor is then monitored for a safe standstill (SOS).

- ▶ The safety function SS2 corresponds to the definition in accordance with EN 61800-5-2.
- ▶ The safety function SS2 corresponds to a category 2 stop, a controlled stop in accordance with EN 60204-1.
- ▶ The safety function SS2 is relevant for calculation of overrun in accordance with EN ISO 13855.
- ▶ A safety stop in accordance with EN ISO 10218-1 can be realised with the safety function SS2.

The safety function can be used as many times as desired (limited only by the maximum number of safety functions).

Activation of safety function SS2

The safety function SS2 can be activated in the following way:

- ▶ By external activation at the activation input ACT.


Motor shutdown

Controlling the brake ramp to shut down the motor is performed either:

- ▶ drive-activated – by the Drive controller, or
- ▶ controller-activated – by a higher-level control system

Configuration of the safety function SS2 in the configuration tool

Field: Stop function		
Input field	Options	Description
Stop function	Drive-activated (internal) (default)	Control of the brake ramp drive-activated
	Controller-activated (external)	Control of the brake ramp controller-activated

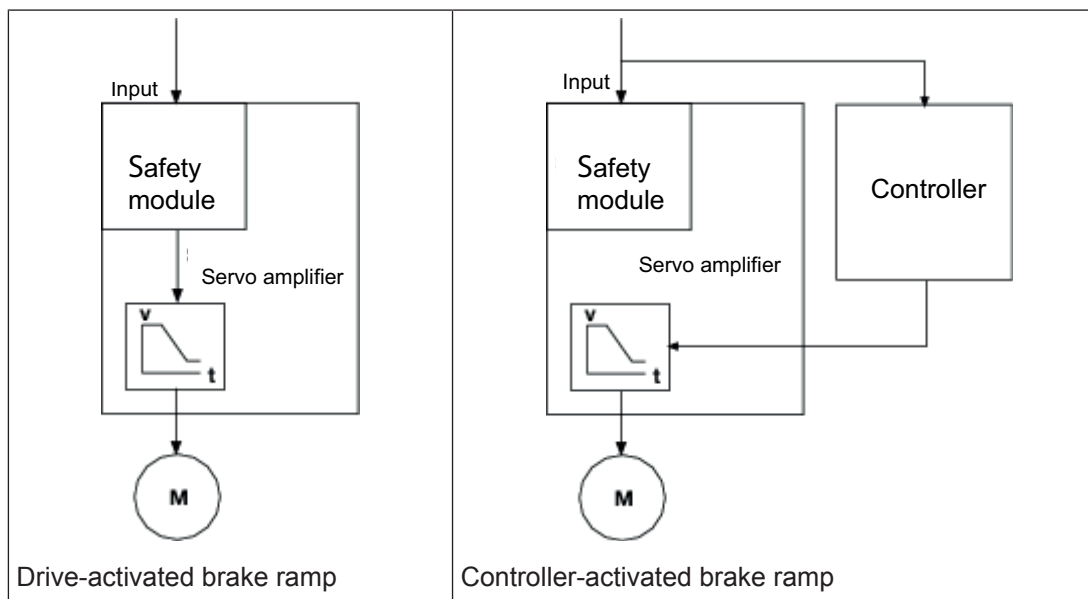

Drive-activated brake ramp

The safety module

- ▶ transmits the brake ramp (normal operation) to the Drive controller.
- ▶ starts the braking process in the Drive controller.
- ▶ monitors the braking process.

Setpoints for a higher-level control system are ignored by the Drive controller while the safety function SS2 is active.



NOTICE

Drive-activated brake ramp

During drive-activated shutdown, axes lose their synchrony if the axes form a synchronous axis system via the control system.

Compensation movements of the motor may occur in the control system upon restarting.

Controller-activated brake ramp

The safety module

- ▶ provides the brake ramp (normal operation or in the event of an error) for a higher-level control system via the fieldbus connection of Drive controller.
- ▶ provides the signal for starting the braking process of a higher-level control system via the fieldbus connection of Drive controller.
- ▶ monitors the braking process.

However the brake ramp can in addition be adjusted in the control system itself.

Information on drive controller/control system fieldbus communication

See chapter [Field bus communication](#) [ 178].

Brake ramp for normal operation

Normally the motor brakes according to the brake ramp that can be set in the configuration tool.

Configuration of the safety function SS2 in the configuration tool

Field: Brake ramp			
Input field	Valid entry	Unit	Description
Brake ramp (a_{dec})	0 ... 2147483647 (default: 0)	User-defined [default: increments/s ²]	Brake ramp gradient for normal operation



INFORMATION

With brake ramp monitoring activated, the valid input range of the brake ramp is reduced to 2 ... 2147483647.

Monitoring of brake ramp

The safety function SS2 offers the option of identifying a hazardous movement at an early point by monitoring the brake ramp. By means of a target/actual comparison of the motor position curve during the braking process, an error reaction is triggered if a configurable position error is exceeded.

Configuration of the safety function SS2 in the configuration tool

Field: Monitoring of brake ramp			
Input field	Valid entry	Unit	Description
Monitor brake ramp	Activate/deactivate (default: deactivated)	--	Activating brake ramp monitoring
Position error (pos_{err})	0 ... 2147483647 (default: 10000000)	User-defined [default: increments]	Maximum permitted position error



INFORMATION

The braking period always depends on the speed of the motor when braking is started.

Activating SOS

The safety function SOS can be activated in a variety of ways:

- ▶ After a configured delay time has elapsed
- ▶ If a parameterised speed limit has been undercut (optional)



INFORMATION

The SOS is activated at the very latest after the delay time has elapsed.

Configuration of the safety function SS2 in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
SOS delay time (t_{del})	0 ... 120000 (default: 100)	[ms]	Delay time between activation of SS2 and monitored standstill with SOS.

Monitoring

- ▶ The actual position of the motor is continuously compared with the parameterised standstill position window.
If it is identified as exceeded, an error reaction is triggered.

Configuration of the safety function SS2 in the configuration tool

Field: Position limit values			
Input field	Valid entry	Unit	Description
Standstill position window (pos_{win})	0 ... 2147483647 (default: 100)	User-defined [default: increments]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

Automatic SOS (optional)

For the automatic SOS, the safety function SOS is activated before the delay time has elapsed. For this to occur, the motor speed must fall below a configurable standstill limit value.

Configuration of the safety function SS2 in the configuration tool

Field: Automatic SOS			
Input field	Valid entry	Unit	Description
Automatic SOS	Activate/deactivate (default: deactivated)	--	Activating the automatic SOS.
Limit value standstill (V_{lim})	0 ... 16777215 (default: 340)	User-defined [default: increments/s]	If the standstill limit value is undercut, the safety function SOS is triggered.

Error reaction with activated SOS

If a limit value violation is identified during standstill monitoring, the safety function SS1 is triggered as a reaction.

Activation and feedback

For activation and feedback of the safety function SS2, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

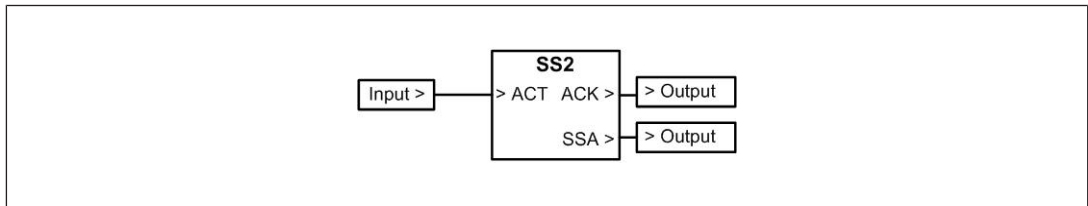


Fig.: Safety function SS2

Legend

- ACT** The safety function SS2 is activated or deactivated via the activation input ACT.
(0 signal activated, 1 signal deactivated)
- ACK** The feedback output ACK reports whether the safety function SS2 is activated or deactivated.
(1 signal activated, 0 signal deactivated)
- SSA** Safe Standstill Acknowledge
The feedback output SSA reports whether the motor is at a standstill (1 signal), or whether there is a limit value violation (0 signal). If the safety function SS2 is not activated, the feedback output likewise reports a 0 signal.

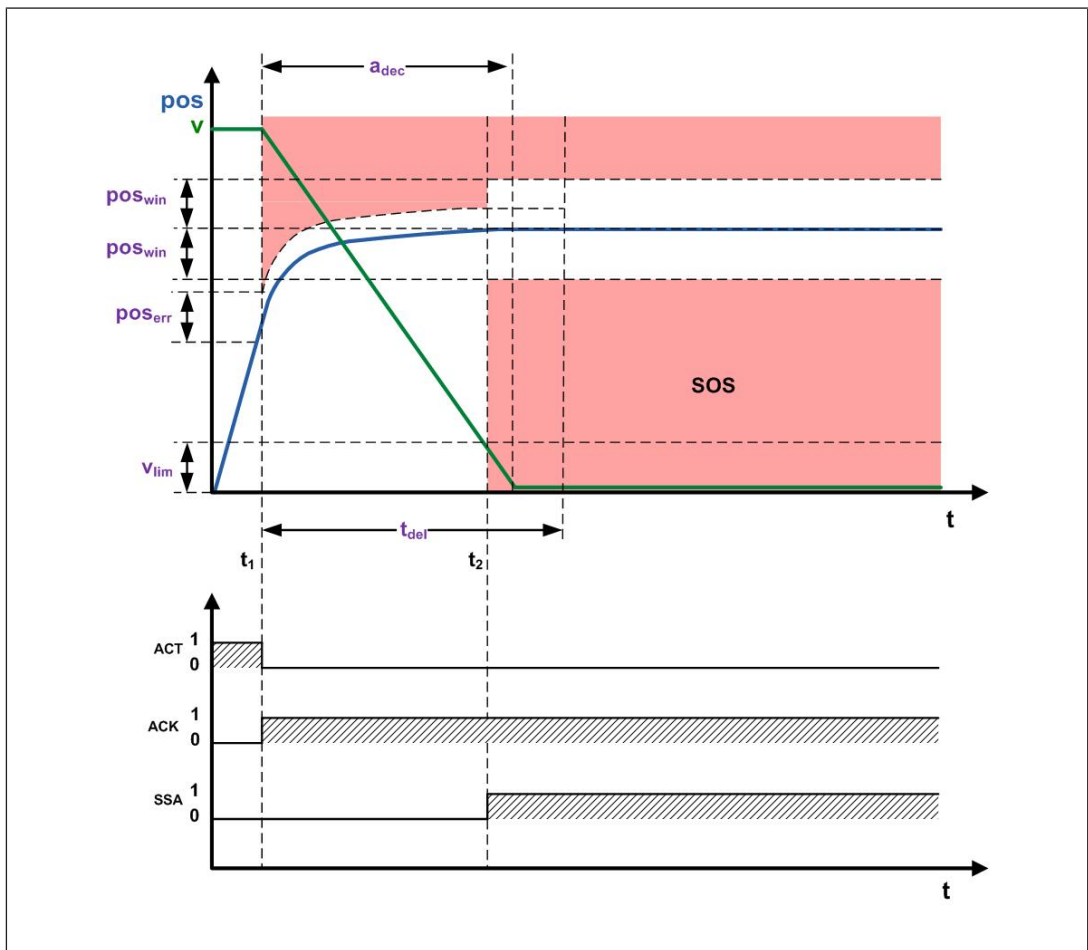


Fig.: Safety function SS2

Legend

- a_{dec} Brake ramp
- pos Position
- v Speed
- pos_{win} Standstill position window
- pos_{err} Position error
- v_{lim} Standstill limit value
- t_{del} SOS delay time
- t_1 Activation of safety function SS2
- t_2 Activation of safety function SOS
- ACT Input for safety function SS2
- ACK Output for feedback from safety function SS2
- SSA Safe Standstill Acknowledge
Output for feedback from limit value monitoring

4.11.5 Safe Direction (SDI) and Safely Monitored Direction (SDI-M)



INFORMATION

The **monitoring function SDI-M "Safely Monitored Direction"** can be selected as a variant of the normative safety function SDI "Safe Direction". The monitoring function SDI-M corresponds to the normative safety function SDI except for the error reaction.

When parameterised limit values are exceeded:

- no SS1 is triggered
- a 0 signal is issued at the SDA (Safe Direction Acknowledge) output


The safety function SDI monitors whether the motor's motion complies with a defined direction. To monitor the positive and negative direction, the SDI function must be used twice.

- ▶ The safety function SDI corresponds to the definition in accordance with EN 61800-5-2.
- ▶ Safe axial and spatial boundaries in accordance with EN ISO 10218-1 can be realised with the safety function SDI.

The safety function can be used as many times as desired (limited only by the maximum number of safety functions).

Activation of safety function SDI

The safety function SDI can be activated in the following way:

- ▶ By external activation at the activation input ACT
- ▶ **Permanent monitoring (optional)**  75
 - The direction is monitored without an activation signal and permanently, without an SDI delay time.
 - No external wiring is necessary.

Monitoring start

- ▶ Once the SDI delay time has elapsed, monitoring of the direction starts.
- ▶ Once the SDI delay time has elapsed, the feedback output SDA becomes active (see diagram).

Configuration of the safety function SDI in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 20)	[ms]	Time between activation of the safety function SDI and the point at which monitoring begins

**INFORMATION**

Clockwise ⇒ positive direction
The shaft rotates clockwise looking at the drive end.

Anti-clockwise ⇒ negative direction
The shaft rotates anti-clockwise looking at the drive end.

Monitoring

- ▶ The motor's direction of rotation is continuously compared with the parameterised, permitted direction (positive or negative).
- ▶ A user-specific position window prevents limit value violation caused by minimal movements around the standstill position.
- ▶ The position window is drawn behind the actual position provided the motor is turning in the permitted direction.
- ▶ If there is a movement in the impermissible direction that exceeds the distance set in the position window, the SS1 function is triggered.

Configuration of the safety function SDI in the configuration tool

Field: Direction			
Input field	Valid entry	Unit	Description
Safely monitored direction	Negative (default)	--	Determination of permitted direction
	Positive	--	

Field: Standstill position			
Input field	Valid entry	Unit	Description
Standstill position window (pos _{win})	0 ... 2147483647 (default: 100)	User-defined [default: increments]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

SDI error reaction

- ▶ If the limit value is exceeded, safety function SS1 is triggered.
- ▶ A 0 signal is issued at the SDA feedback output.

SDI-M error reaction

- ▶ A 0 signal is issued at the feedback output SDA if the limit value is exceeded.

Activation and feedback

For activation and feedback of the safety function SDI, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

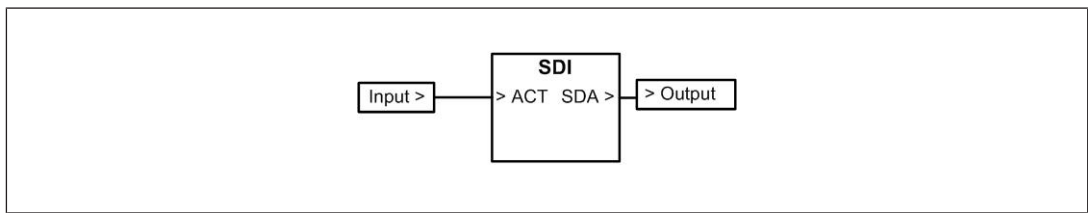


Fig.: Function block SDI

Legend

- ACT The safety function SDI is activated or deactivated via the activation input ACT.
(0 signal activated, 1 signal deactivated)
- SDA Safe Direction Acknowledge
The feedback output SDA reports whether the motor is within its permitted limit values (1 signal), or whether there is a limit value violation (0 signal). If the safety function is not activated, the feedback output likewise reports a 0 signal.

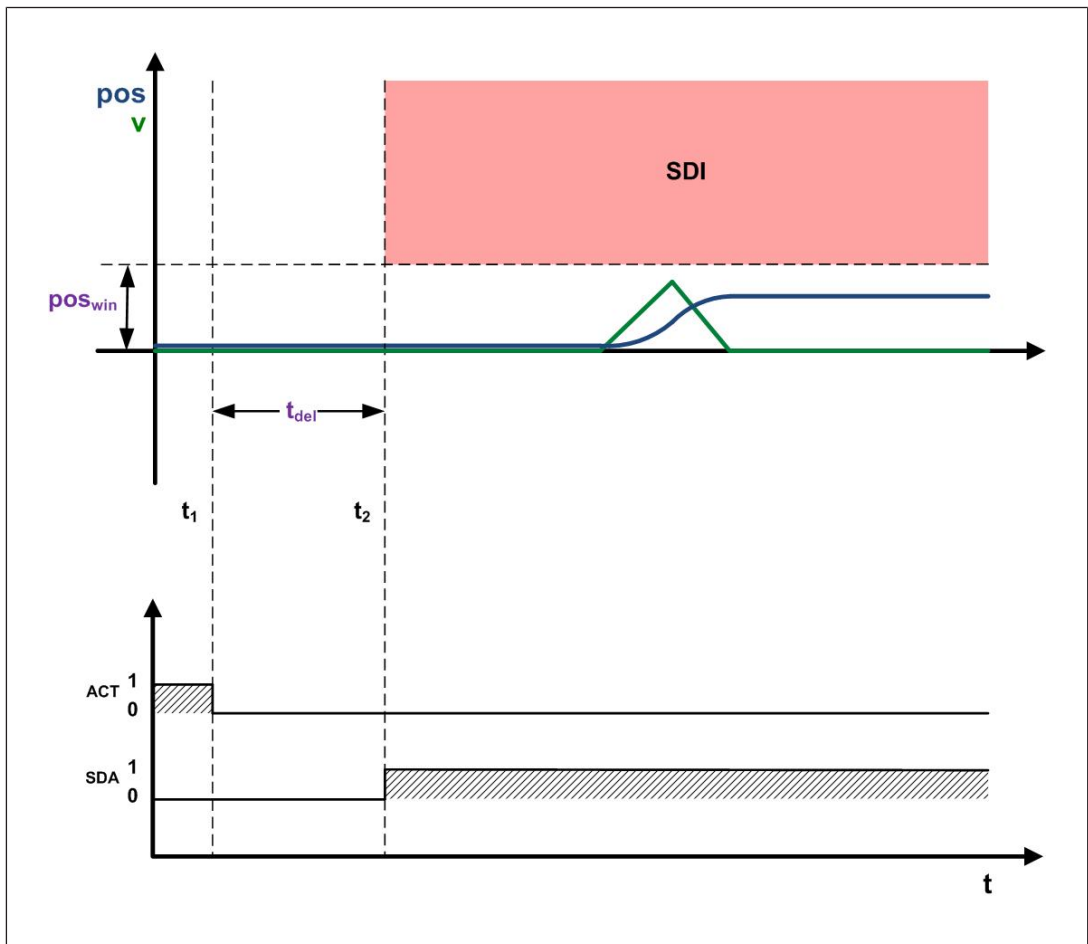



Fig.: Safety function SDI

Legend

- pos Position
- v Speed
- pos_{win} Standstill position window

t_{del}	Delay time
t_1	Activation of the safety function SDI
t_2	Monitoring start
ACT	Input for safety function SSR
SDA	Safe Direction Acknowledge
	Output for feedback from safety function SDI

Hysteresis for monitoring functions

A hysteresis can be configured optionally for the monitoring functions, see [Hysteresis for monitoring functions](#)  143].

4.11.6 Safely Limited Increment (SLI) and Safely Monitored Increment (SLI-M)



INFORMATION

The **monitoring function SLI-M "Safely Monitored Increment"** can be selected as a variant of the normative safety function SLI "Safely Monitored Increment".

The monitoring function SLI-M corresponds to the normative safety function SLI except for the error reaction.

When parameterised limit values are exceeded:

- no SS1 is triggered
- a 0 signal is issued at the SRA (Safe Range Acknowledge) output

The safety function SLI monitors whether the motor's motion complies with a defined increment. After activation, the motor may only move within the permitted parameterised position range.

- ▶ The safety function SLI corresponds to the definition in accordance with EN 61800-5-2.

The safety function can be used as many times as desired (limited only by the maximum number of safety functions).

Activation of safety function SLI

The safety function SLI can be activated in the following way:

- ▶ By external activation at the activation input ACT

Monitoring start

- ▶ Once the SLI delay time has elapsed, monitoring of the defined increment starts.
- ▶ The position after the SLI delay time has elapsed is taken as the start position.
- ▶ Once the SLI delay time has elapsed, the feedback output SRA becomes active (see diagram).

Configuration of the safety function SLI in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 20)	[ms]	Time between activation of the safety function SLI and the point at which monitoring begins

**INFORMATION**

Clockwise \Rightarrow positive direction
The shaft rotates clockwise looking at the drive end.

Anti-clockwise \Rightarrow negative direction
The shaft rotates anti-clockwise looking at the drive end.

Monitoring

- ▶ The actual position of the motor is continuously compared with the parameterised position limit values.
If it is identified as exceeded, an error reaction is triggered.

Configuration of the safety function SLI in the configuration tool

Field: Limit values increment			
Input field	Valid entry	Unit	Description
Upper limit value position ($V_{\text{upperLimit}}$)	0 2147483647 (default: 0)	User-defined [default: increments]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.
Lower limit value position ($pos_{\text{lowerLimit}}$)	0 ... 2147483647 (default: 0)	User-defined [default: increments]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

Error reaction SLI

- ▶ If a limit value is exceeded, safety function SS1 is activated.
- ▶ A 0 signal is issued at the SRA feedback output.

Error reaction SLI-M

- ▶ A 0 signal is issued at the feedback output SRA if a limit value is exceeded.

Activation and feedback

For activation and feedback of the safety function SLI, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

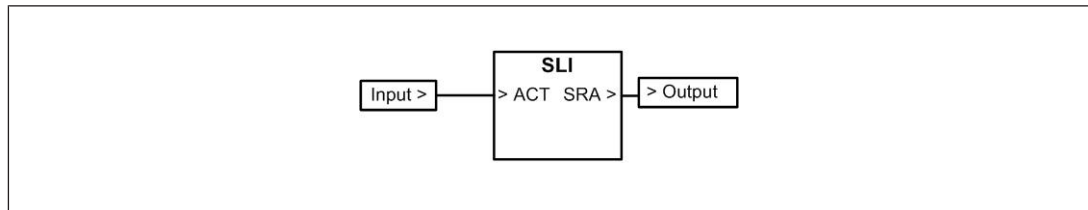


Fig.: Function block SLI

Legend

- ACT** The safety function SLI is activated or deactivated via the activation input ACT, (0 signal activated, 1 signal deactivated)
- SRA** Safe Range Acknowledge
- The feedback output SRA reports whether the motor is within its permitted limit values (1 signal), or whether there is a limit value violation (0 signal). If the safety function is not activated, the feedback output likewise reports a 0 signal.

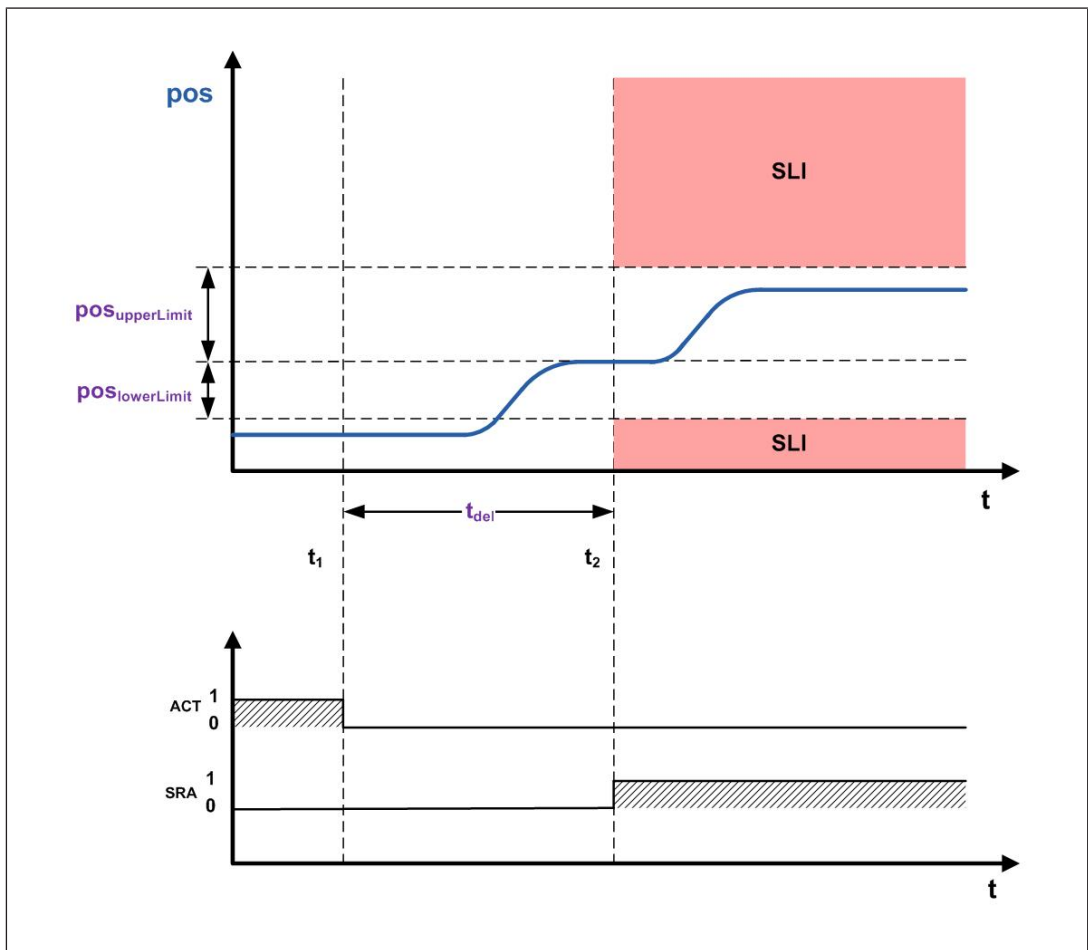


Fig.: Safety function SLI

Legend

- pos Position
- $pos_{upperLimit}$ Upper limit value position
- $pos_{lowerLimit}$ Lower limit value position
- t_{del} Delay time
- t_1 Activation of the safety function SLI
- t_2 Monitoring start
- ACT Input for safety function SLI
- SRA Safe Range Acknowledge
 Output for feedback from safety function SLI

Hysteresis for monitoring functions

A hysteresis can be configured optionally for the monitoring functions, see [Hysteresis for monitoring functions](#) [143].

4.11.7 Safely Limited Speed (SLS) and Safely Monitored Speed (SLS-M)



INFORMATION

The **monitoring function SLS-M "Safely Monitored Speed"** can be selected as a variant of the normative safety function SLS "Safely Limited Speed".

The monitoring function SLS-M corresponds to the normative safety function SLS except for the error reaction.

When parameterised limit values are exceeded:

- no SS1 is triggered
- a 0 signal is issued at the SRA (Safe Range Acknowledge) output


The SLS safety function prevents the motor from exceeding the specified speed limit.

- ▶ The safety function SLS corresponds to the definition in accordance with EN 61800-5-2.
- ▶ The safety function SLS makes it possible to realise a safety-rated reduced speed and a safety-rated monitored speed in accordance with EN ISO 10218-1.

The safety function can be used as many times as desired (limited only by the maximum number of safety functions).

Activation of safety function SLS

The safety function SLS can be activated in the following way:

- ▶ By external activation at the activation input ACT
- ▶ **Permanent monitoring (optional)**  75
 - The speed is monitored without an activation signal and permanently, without an SLS delay time.
 - No external wiring is necessary.

Monitoring start

- ▶ Once the SLS delay time has elapsed, monitoring of the speed starts.
- ▶ Once the SLS delay time has elapsed, the feedback output SRA becomes active (see diagram).

Configuration of the safety function SLS in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 20)	[ms]	Time between activation of the safety function SLS and the point at which monitoring begins.

Monitoring

- ▶ The actual speed of the motor is continuously compared with the parameterised speed limit value.
- ▶ If it is identified as exceeded, an error reaction is triggered.

Configuration of the safety function SLS in the configuration tool

Field: Speed limit value			
Input field	Valid entry	Unit	Description
Limit value speed (V_{lim})	0 ... 16777215 (default: 100000)	User-defined [default: increments/s]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

Error reaction SLS

- ▶ If the limit value is exceeded, safety function SS1 is triggered.
- ▶ A 0 signal is issued at the SRA feedback output.

Error reaction SLS-M

- ▶ A 0 signal is issued at the feedback output SRA if the limit value is exceeded.

Activation and feedback

For activation and feedback of the safety function SLS, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

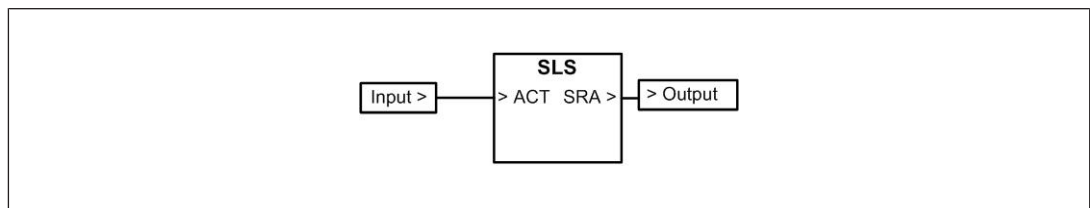


Fig.: Function block SLS

Legend

- ACT The safety function SLS is activated or deactivated via the activation input ACT, (0 signal activated, 1 signal deactivated)
- SRA Safe Range Acknowledge
- The feedback output SRA reports whether the motor is within its permitted limit values (1 signal), or whether there is a limit value violation (0 signal). If the safety function is not activated, the feedback output likewise reports a 0 signal.

Parameterising tolerance range (optional)

A tolerance range may also be set for the limit values used to monitor the speed. This tolerance range modifies the set limit values. As a result, one-off or periodic overshoots that exceed the limit values can be tolerated.

The following values can be parameterised for the tolerance range

- ▶ Tolerance window, which takes into account the amplitude of the overshoots.
- ▶ Tolerance time, which takes into account the width of the overshoots.
- ▶ Tolerance period, which takes into account the oscillation period.

Activating the tolerance range

- ▶ If the speed limit value is exceeded, the tolerance range becomes active (see illustration "Safety function SSR with activated tolerance range").

Reaction

- ▶ If the first tolerance range is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

Configuration of tolerance range in the configuration tool (optional)

Field: Tolerance			
Input field	Valid entry	Unit	Description
Tolerance range	Activate/deactivate (default: deactivated)	--	Activates the tolerance range
Tolerance window (tol_{win})	1 ... 25 (default: 1)	[%]	Permitted amplitude of the overshoots
Tolerance time (tol_{t1})	1 ... 120000 (default: 100)	[ms]	Permitted width of the overshoots
Tolerance period (tol_{t2})	2 ... 120000 (default: 1000)	[ms]	Permitted period of oscillation

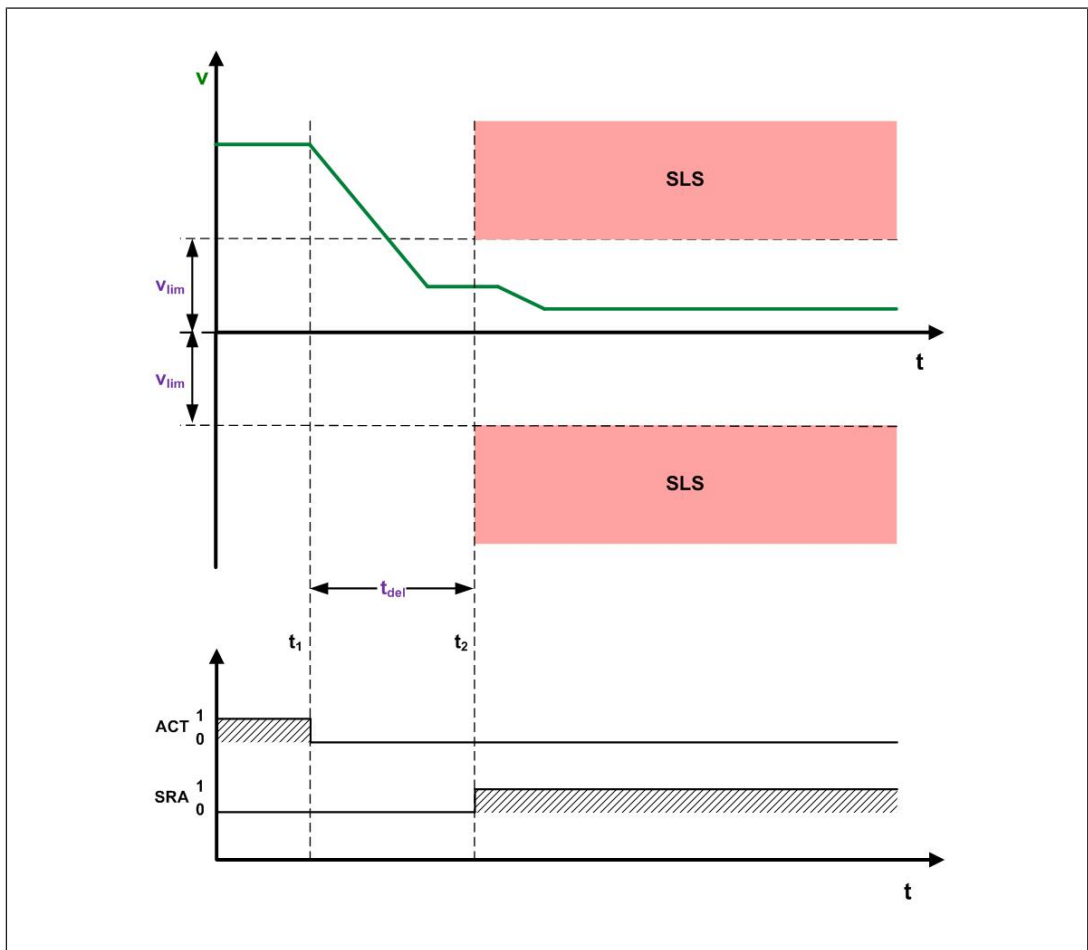


Fig.: Safety function SLS without tolerance range activated

Legend

- v Speed
- v_{lim} Speed limit value
- t_{del} Delay time
- t₁ Activation of the safety function SLS
- t₂ Monitoring start
- ACT Input for safety function SLS
- SRA Safe Range Acknowledge
Output for feedback from safety function SLS

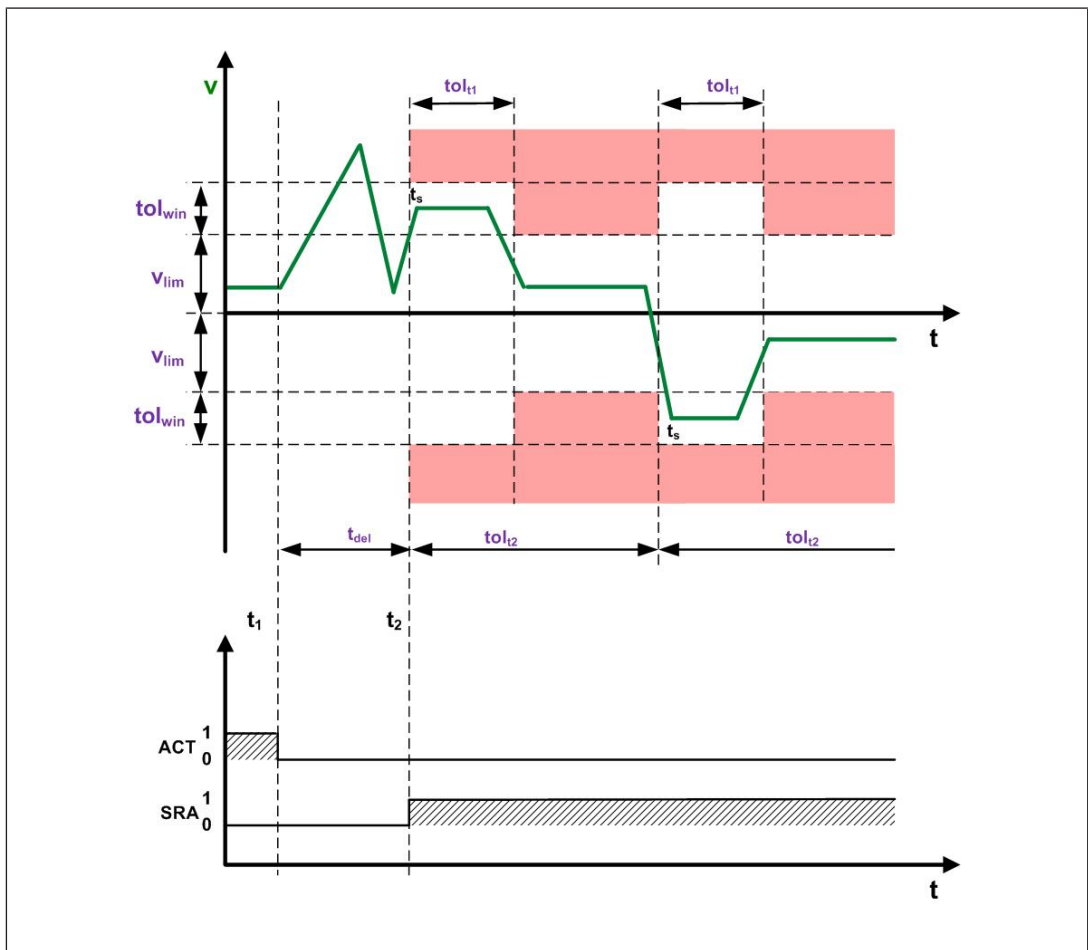


Fig.: Safety function SLS with tolerance window activated

Legend

- v Speed
- tol_{win} Tolerance window
- v_{lim} Speed limit value
- t₁ Activation of the safety function SLS
- t₂ Monitoring start
- t_s Speed V exceeds limit value and lies in the activated tolerance range.
(tolerance window, tolerance time, tolerance period)
- t_{del} Delay time
- tol_{t1} Tolerance time
- tol_{t2} Tolerance period
- ACT Input for safety function SLS
- SRA Safe Range Acknowledge
Output for feedback from safety function SLS

Hysteresis for monitoring functions

A hysteresis can be configured optionally for the monitoring functions, see [Hysteresis for monitoring functions](#) [143].

4.11.8 Safe Operating Stop (SOS) and Safely Monitored Operating Stop (SOS-M)



INFORMATION

The **monitoring function SOS-M "Safely Monitored Operating Stop"** can be selected as a variant of the normative safety function SOS "Safe Operating Stop".

The monitoring function SOS-M corresponds to the normative safety function SOS except for the error reaction.

When parameterised limit values are exceeded:

- no SS1 is triggered
- a 0 signal is issued at the SSA (Safe Standstill Acknowledge) output

The safety function SOS monitors whether the motor's motion complies with the standstill position.

- ▶ The safety function SOS corresponds to the definition in accordance with EN 61800-5-2.
- ▶ A safety-rated monitored stop in accordance with EN ISO 10218-1 can be realised with the safety function SOS.

The safety function can be used as many times as desired (limited only by the maximum number of safety functions).

Activation of safety function SOS

The safety function SOS can be activated in the following way:

- ▶ By external activation at the activation input ACT

Monitoring start

- ▶ Once the SOS delay time has elapsed, the motor position is monitored. It may not leave the set position window.
- ▶ The position after the SOS delay time has elapsed is taken as the start position for monitoring.
- ▶ Once the SOS delay time has elapsed, the feedback output SSA becomes active (see diagram).

Configuration of the safety function SOS in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 100)	[ms]	Time between activation of the safety function SOS and the point at which monitoring begins

Monitoring

- ▶ The actual position of the motor is continuously compared with the parameterised standstill position window.
If it is identified as exceeded, an error reaction is triggered.

Configuration of the safety function SOS in the configuration tool

Field: Position limit value			
Input field	Valid entry	Unit	Description
Standstill position window (pos_{win})	0 ... 2147483647 (default: 100)	User-defined [default: increments]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

Error reaction SOS

- ▶ If a limit value is exceeded, safety function SS1 is activated.
- ▶ A 0 signal is issued at the SSA feedback output.

Error reaction SOS-M

- ▶ A 0 signal is issued at the feedback output SSA if a limit value is exceeded.

Automatic SOS (optional)

For the automatic SOS, the safety function SOS is activated before the delay time has elapsed. For this to occur, the motor speed must fall below a configurable standstill limit value.

**INFORMATION**

The standstill threshold is to be understood as a limit value because an ideal standstill (speed = 0) is frequently not achieved in real systems.

Configuration of the safety function SOS in the configuration tool

Field: Automatic SOS			
Input field	Valid entry	Unit	Description
Automatic standstill monitoring	Activate/deactivate (default: deactivated)	--	Activating the automatic SOS.
Limit value standstill (v_{lim})	0 ... 16777215 (default: 340)	User-defined [default: increments/s]	If the standstill limit value is undercut, the safety function SOS is triggered.

Activation and feedback

For activation and feedback of the safety function SOS, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

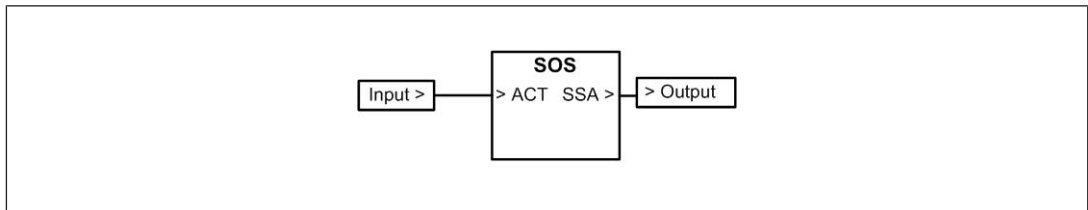


Fig.: Function block SOS

Legend

- ACT** The safety function SOS is activated or deactivated via the activation input ACT.
(0 signal activated, 1 signal deactivated).
- SSA** Safe Standstill Acknowledge
The feedback output SSA reports whether the motor is within its permitted limit values (1 signal), or whether there is a limit value violation (0 signal). If the safety function is not activated, the feedback output likewise reports a 0 signal.

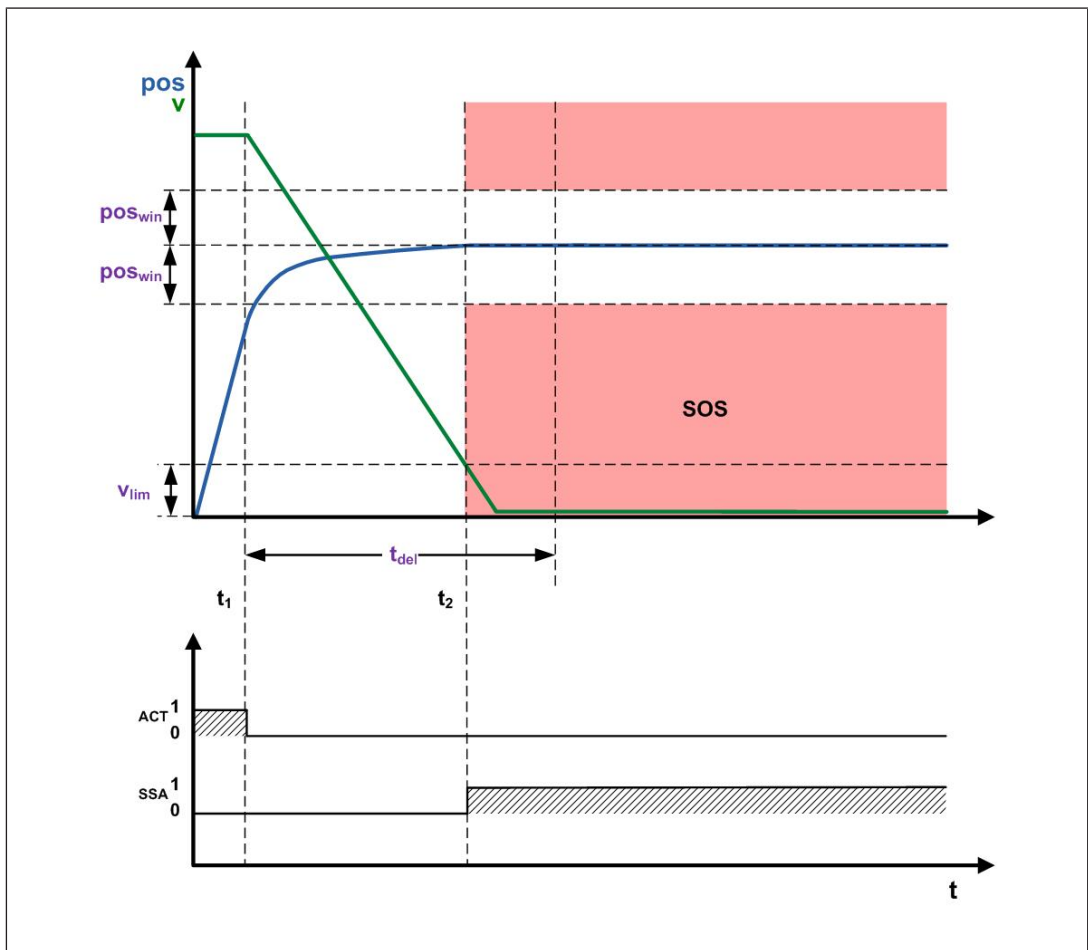


Fig.: Safety function SOS

Legend

pos	Position
v	Speed
pos_{win}	Standstill position window
v_{lim}	Standstill limit value
t_{del}	Delay time
t_1	Activation of safety function SOS
t_2	Monitoring start when automatic standstill monitoring is configured
ACT	Input for safety function SOS
SSA	Safe Standstill Acknowledge
	Output for feedback from limit value monitoring

Hysteresis for monitoring functions

A hysteresis can be configured optionally for the monitoring functions, see [Hysteresis for monitoring functions](#) [143].

4.11.9 Safe Speed Range (SSR) and Safely Monitored Speed Range (SSR-M)



INFORMATION

The **monitoring function SSR-M "Safely Monitored Speed Range"** can be selected as a variant of the normative safety function SSR "Safe Speed Range".

The monitoring function SSR-M corresponds to the normative safety function SSR except for the error reaction.

When parameterised limit values are exceeded:

- no SS1 is triggered
- a 0 signal is issued at the SRA (Safe Range Acknowledge) output


The SSR safety function prevents the motor from exceeding the specified maximum and minimum permitted speed range.

- ▶ The safety function SSR corresponds to the definition in accordance with EN 61800-5-2.
- ▶ The safety function SSR makes it possible to realise a safety-rated reduced speed and a safety-rated monitored speed in accordance with EN ISO 10218-1.

The safety function can be used as many times as desired (limited only by the maximum number of safety functions).

Activation of the safety function SSR

The safety function SSR can be activated in the following way:

- ▶ By external activation at the activation input ACT
- ▶ **Permanent monitoring (optional)**  75
 - The speed range is monitored without an activation signal and permanently, without an SSR delay time.
 - No external wiring is necessary.

Monitoring start

- ▶ Once the SSR delay time has elapsed, the speed is monitored.
- ▶ Once the SSR delay time has elapsed, the feedback output SRA becomes active (see diagram).

Configuration of the safety function SSR in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 20)	[ms]	Time between activation of the safety function SSR and the point at which monitoring begins

Monitoring

- ▶ The actual speed of the motor is continuously compared with the maximum and minimum parameterised speed limit value.
- ▶ If one of the two limit values is identified as exceeded, an error reaction is triggered.

Configuration of the safety function SSR in the configuration tool

Field: Speed limit value			
Input field	Valid entry	Unit	Description
Upper limit value speed ($v_{\text{upperLimit}}$)	-16777216... 16777215 (default: 100000)	User-defined [default: increments/s]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.
Lower limit value speed ($v_{\text{lowerLimit}}$)	-16777216 ... 16777215 (default: -100000)	User-defined [default: increments/s]	If the limit value is undercut, the safety function SS1 (E-STOP brake ramp) is activated.

Error reaction SSR

- ▶ If a limit value is exceeded, safety function SS1 is activated.
- ▶ A 0 signal is issued at the SRA feedback output.

Error reaction SSR-M

- ▶ A 0 signal is issued at the feedback output SRA if a limit value is exceeded.

Activation and feedback

For activation and feedback of the safety function SSR, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

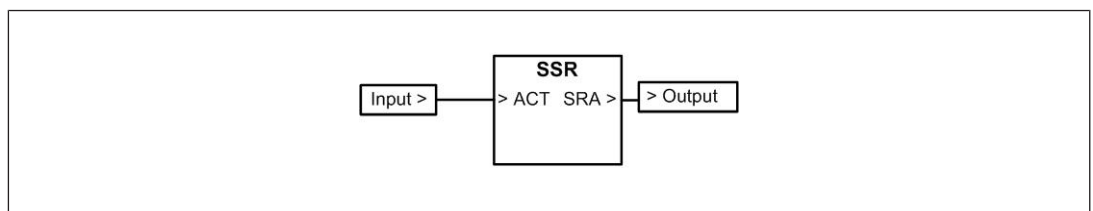


Fig.: Function block SSR

Legend

- ACT** The safety function SSR is activated or deactivated via the activation input ACT.
(0 signal activated, 1 signal deactivated)
- SRA** Safe Range Acknowledge
The feedback output SRA reports whether the motor is within its permitted limit values (1 signal), or whether there is a limit value violation (0 signal). If the safety function is not activated, the feedback output likewise reports a 0 signal.

Parameterising tolerance range (optional)

A tolerance range may also be set for the limit values used to monitor the speed. This tolerance range modifies the set limit values. As a result, one-off or periodic overshoots that exceed the limit values can be tolerated.

The following values can be parameterised for the tolerance range

- ▶ Tolerance window, which takes into account the amplitude of the overshoots.
- ▶ Tolerance time, which takes into account the width of the overshoots.
- ▶ Tolerance period, which takes into account the oscillation period.

Activating the tolerance range

- ▶ If the speed limit value is exceeded, the tolerance range becomes active (see illustration "Safety function SSR with activated tolerance range").

Reaction

- ▶ If the first tolerance range is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.

Configuration of tolerance range in the configuration tool (optional)

Field: Tolerance			
Input field	Valid entry	Unit	Description
Tolerance range	Activate/deactivate (default: deactivated)	--	Activates the tolerance range
Tolerance window (tol _{win})	1 ... 25 (default: 1)	[%]	Permitted amplitude of the overshoots
Tolerance time (tol _{t1})	1 ... 120000 (default: 100)	[ms]	Permitted width of the overshoots
Tolerance period (tol _{t2})	2 ... 120000 (default: 1000)	[ms]	Permitted period of oscillation

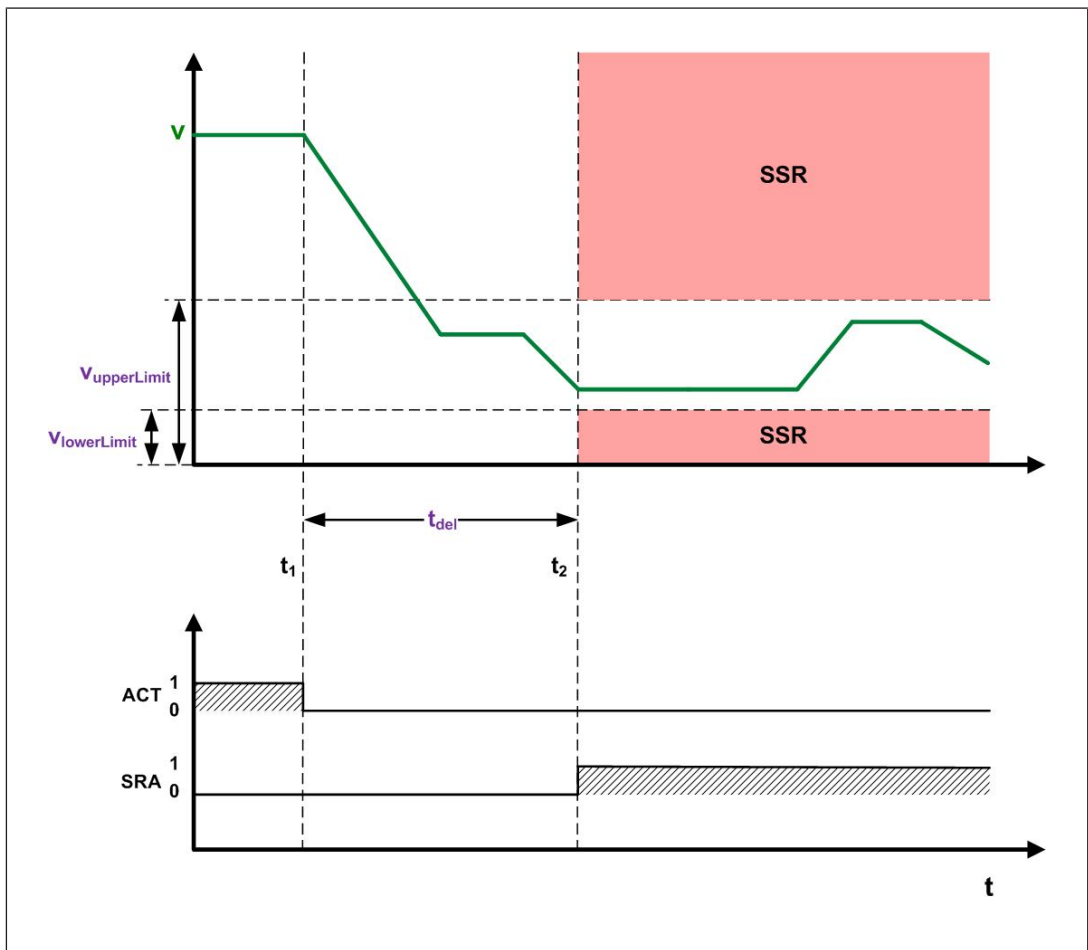


Fig.: Safety function SSR without tolerance range activated

Legend

- v Speed
- $v_{upperLimit}$ Upper limit value speed
- $v_{lowerLimit}$ Lower limit value speed
- t_{del} Delay time
- t_1 Activation of the safety function SSR
- t_2 Monitoring start
- ACT Input for safety function SSR
- SRA Safe Range Acknowledge
Output for feedback from safety function SSR

4.11.10 Safely Limited Position (SLP) and Safely Monitored Position (SLP-M)



INFORMATION

The **monitoring function SLP-M "Safely Monitored Position"** can be selected as a variant of the normative safety function SLP "Safely Limited Position".

The monitoring function SLP-M corresponds to the normative safety function SLP except for the error reaction.

When parameterised limit values are exceeded:

- no SS1 is triggered
- a 0 signal is issued at the SRA (Safe Range Acknowledge) output

The safety function SLP monitors whether the motor's motion complies with a defined lower and upper absolute position.

- ▶ The safety function SLP corresponds to the definition in accordance with EN 61800-5-2.
- ▶ Safe axial and spatial boundaries in accordance with EN ISO 10218-1 can be realised with the safety function SLP.



INFORMATION

For the safety function SLP, an additional external absolute-value encoder must be connected to the interface X50 of the safety module.

If an external encoder is used with a different (reduced) resolution range compared to the internal motor encoder resolution, the resulting overall resolution of the system may be restricted.

Equally, a reduced overall resolution range may arise if a gear ratio exists between the drive and output ends or as a result of the mechanical transmission path itself.



WARNING!

Potential loss of safety function due to overflow of the signals in the motor encoder or in the external absolute-value encoder!


Depending on the application, serious injury or death may result.

The position range of the motor encoder and external absolute-value encoder may not overflow when monitoring the absolute position.

Appropriate measures should be used to ensure that the signals are adapted to the mechanical travel.

Activation of safety function SLP

The safety function SLP can be activated in the following way:

- ▶ By external activation at the activation input ACT
- ▶ **Permanent monitoring (optional)**  75
 - The position is monitored without an activation signal and permanently, without an SLP delay time.
 - No external wiring is necessary.



INFORMATION

When you use the safety function SLP with permanent monitoring (optional), make sure that the axis can be reset to the permitted range after the limit value is exceeded.

Monitoring start

- ▶ Once the SLP delay time has elapsed, the absolute position is monitored.
- ▶ Once the SLP delay time has elapsed, the feedback output SRA becomes active (see diagram).

Configuration of the safety function SLP in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 20)	[ms]	Time between activation of the safety function SLP and the point at which monitoring begins

Monitoring

- ▶ The actual position of the motor is continuously compared with the parameterised absolute position limit values (lower and upper).
If it is identified as exceeded, an error reaction is triggered.
- ▶ The absolute position of the motor encoder is verified using the position values of the external absolute encoder. The external encoder is configured with the safety module's configuration tool.
- ▶ The permitted position range is within the set limit values.
- ▶ With inverted monitoring, the permitted position range is outside the set limit values (optional).

Configuration of the safety function SLP in the configuration tool

Field: Position limit values			
Input field	Valid entry	Unit	Description
Upper limit value position ($v_{\text{upperLimit}}$)	-8388608 ... 8388607 (default: 0)	User-defined [default: increments]	If the limit value is exceeded, the safety function SS1 (E-STOP brake ramp) is activated.
Lower limit value position ($pos_{\text{lowerLimit}}$)	-8388608 ... 8388607 (default: 0)	User-defined [default: increments]	If the limit value is undercut, the safety function SS1 (E-STOP brake ramp) is activated.

Error reaction SLP

- ▶ If a limit value is exceeded, safety function SS1 is activated.
- ▶ A 0 signal is issued at the SRA feedback output.

Error reaction SLP-M

- ▶ A 0 signal is issued at the feedback output SRA if a limit value is exceeded.

Activation and feedback

For activation and feedback of the safety function SLP, the following activation and feedback signals of the function can be routed to safe inputs and outputs:

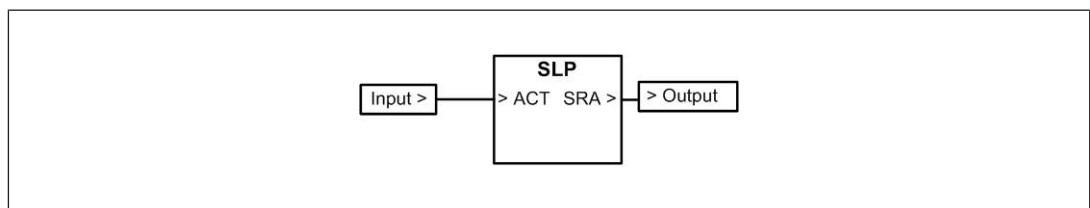


Fig.: Function block SLP

Legend

- ACT** The safety function SLP is activated or deactivated via the activation input ACT.
(0 signal activated, 1 signal deactivated)
- SRA** Safe Range Acknowledge
The feedback output SRA reports whether the motor is within its permitted limit values (1 signal), or whether there is a limit value violation (0 signal). If the safety function is not activated, the feedback output likewise reports a 0 signal.

SLP inverted (optional)

With inverted monitoring, the permitted position range is outside the set limit values.

Configuration of the safety function SLP inverted in the configuration tool

Field: Position range inverted			
Input field	Valid entry	Unit	Description
Safe range	Activate/deactivate (default: deactivated)	--	Activated position range inverted

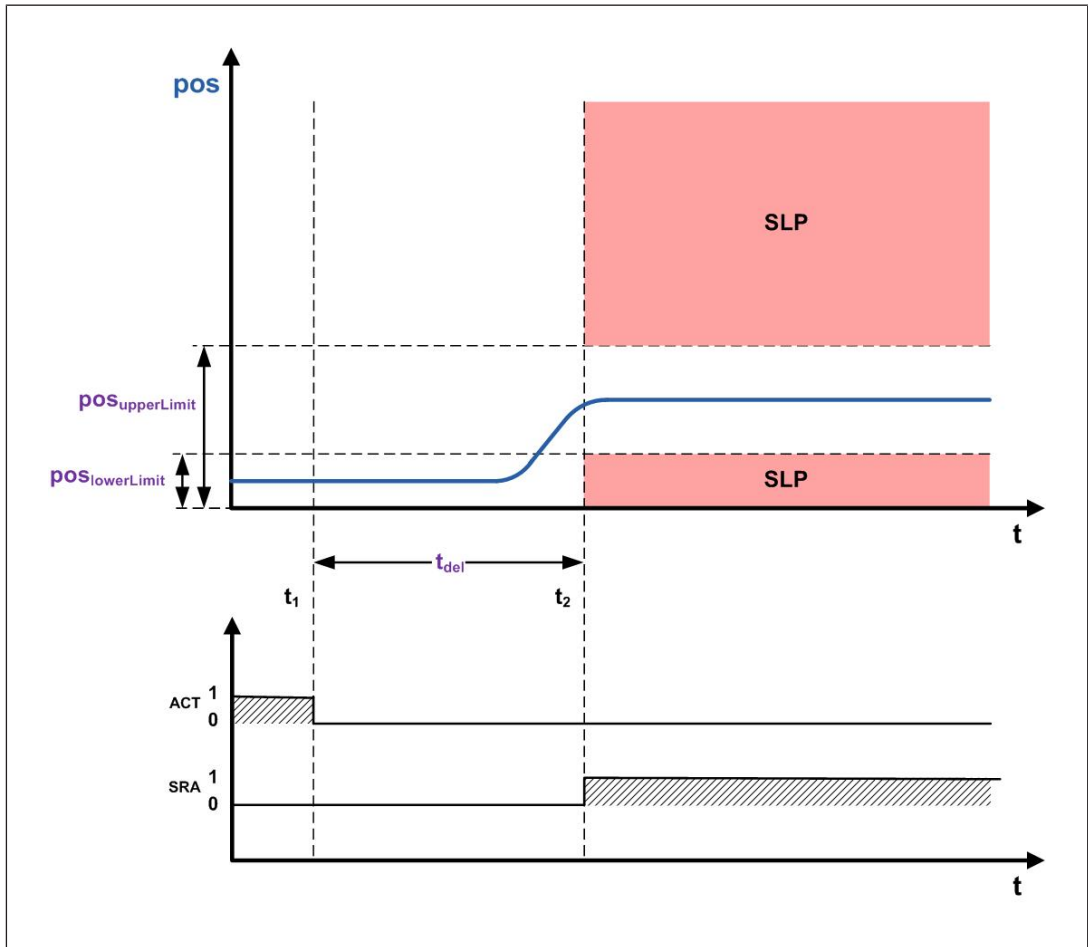


Fig.: Safety function SLP (not inverted)

Legend

- pos Position
- pos_{upperLimit} Upper limit value position
- pos_{lowerLimit} Lower limit value position
- t_{del} Delay time
- t₁ Activation of the safety function SLP
- t₂ Monitoring start
- ACT Input for safety function SLP
- SRA Safe Range Acknowledge
Output for feedback from safety function SLP

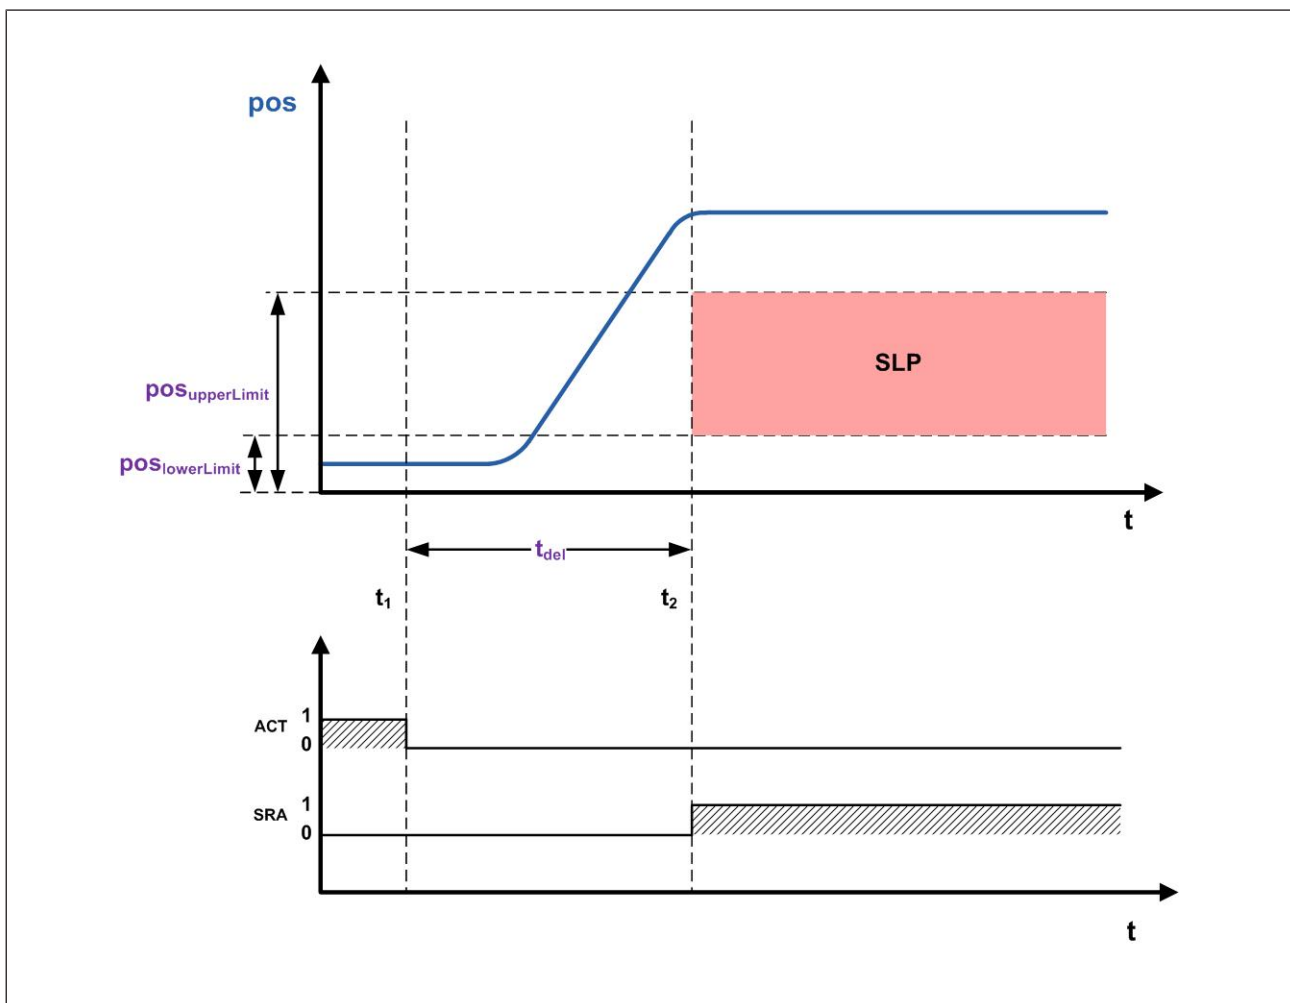


Fig.: Safety function SLP (inverted)

Legend

pos	Position
$pos_{upperLimit}$	Upper limit value position
$pos_{lowerLimit}$	Lower limit value position
t_{del}	Delay time
t_1	Activation of the safety function SLP
t_2	Monitoring start
ACT	Input for safety function SLP
SRA	Safe Range Acknowledge Output for feedback from safety function SLP

Hysteresis for monitoring functions

A hysteresis can be configured optionally for the monitoring functions, see [Hysteresis for monitoring functions](#) [143].

4.11.11 Safe Brake Control (SBC)

The safety function SBC supplies a safe output signal to control a

- ▶ closed-current mechanical brake or
- ▶ a safe device to control a brake (e.g. PWM switchgear PNOZ s50 for safe brake control).

The safety function can be used especially if additional measures to control external influences (e.g. suspended loads falling) are required in the application.

- ▶ The safety function SBC corresponds to the definition in accordance with EN 61800-5-2.
- ▶ "Holding of loads" can be realised with the safety function SBC.

See chapter [Application of the SBC and SBT safe brake functions](#) [ 56]

Activating the safety function SBC

The safety function SBC is activated as soon as the safety function STO is active. Direct activation via a safe input is not necessary.

Control of the assigned output

With the safety function SBC activated, a 0 signal is issued at the assigned output. A connected closed-current brake is applied, causing the mechanical braking force to be applied to the axis.

With the safety function SBC deactivated, a 1 signal is issued at the assigned output. A connected closed-current brake is released, causing the mechanical braking force to be removed from the axis

Connection of drive controller brake control

The safety module offers scope for assigning the non-safe brake control signal of the drive controller SD6 to the safe brake output of a SBC function. This allows functional brake control of the drive controller to be combined with safe brake control by the safety function SBC.

By activating the connection, a closed-current braking device can be used simultaneously for the following:

- ▶ Non-safe functions of the drive controller SD6
- ▶ Safety functions of the safety module SE6

Configuration of the safety function SBC in the configuration tool

Field: Connection			
Input field	Valid entry	Unit	Description
Connection	Activate/deactivate (default: deactivated)	--	Activating the connection of the drive controller's brake control signal on the safety module

With the connection activated, the safe brake output behaves as follows

- ▶ The safety module is in the operating status STO
 - The safety module issues a 0 signal at the brake output.
 - The brake is applied, or the braking device prompts the brake application.
 - Control by the drive controller is not possible.
- ▶ The safety module is in the operating status FSRUN
 - The brake output is controlled in a non-safety-related way by the drive controller.

**NOTICE**

In the **operating status RUN** hazardous or impermissible movements of the drive must be protected by active safety functions. If the operating status STO is activated by the safety function SS1 when an error has been identified, the brake is applied safely via the safety function SBC independently of the brake control signal from the drive controller.

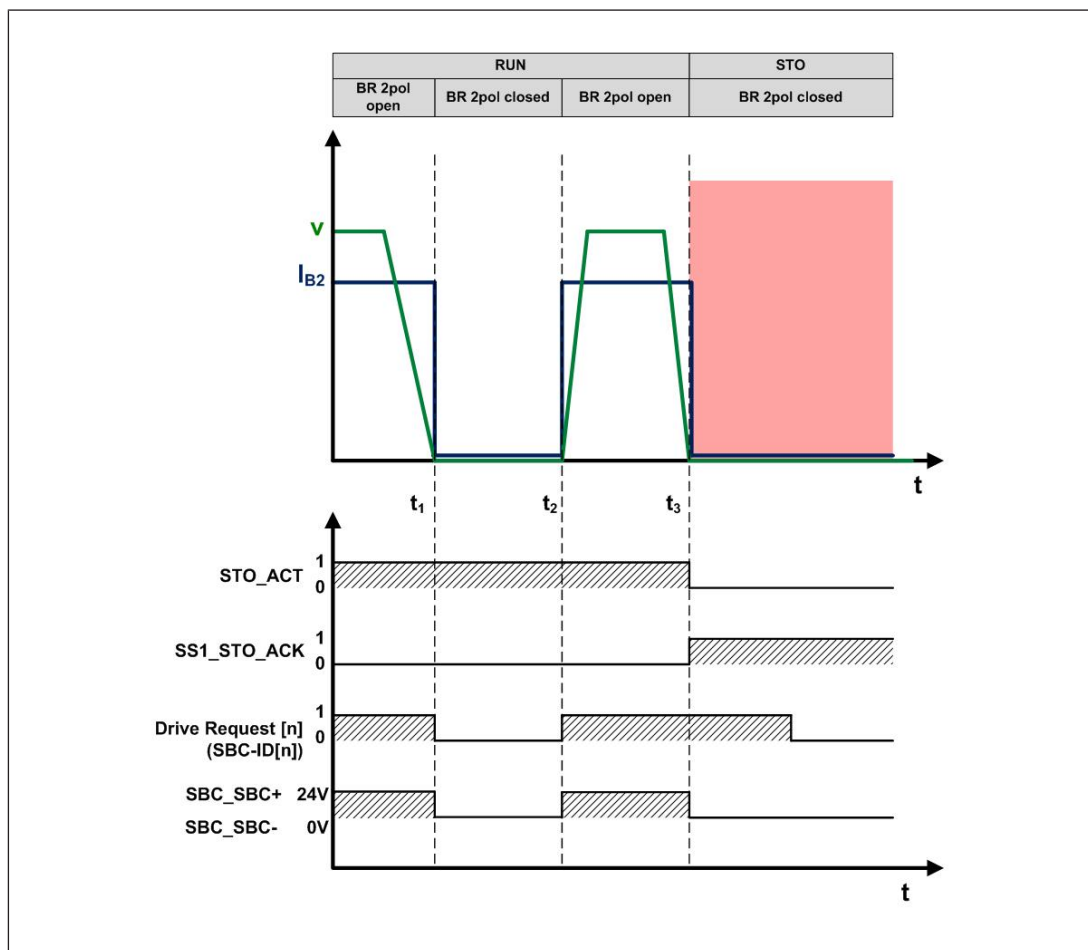


Fig.: Flow chart safety function SBC with connection activated

Legend

v	Speed
I_{B2}	Current, brake 2-pole
t_1	A 0 signal is issued at the brake output SBC+/SBC- in a non-safety-related way.
t_2	A 1 signal is issued at the brake output SBC+/SBC- in a non-safety-related way.
t_3	The safety function STO and SBC are activated, a 0 signal is issued at the brake output SBC+/SBC- in a safety-related way.
STO_ACT	Input for safety function STO
STO_ACK	Output for feedback from safety function STO
Drive request	Brake control signal from drive controller
SBC+ / SBC-	Brake control output

Use of a feedback input (optional)

The safety function SBC offers scope for evaluating a feedback signal from the controlled braking device.

The behaviour of the feedback signal can be parameterised in the configuration tool.

NO – normally open

With the braking device released a 1 signal is expected as the feedback signal.

With the braking device applied a 0 signal is expected as the feedback signal.

NC – normally closed

With the braking device released a 0 signal is expected as the feedback signal.

With the braking device applied a 1 signal is expected as the feedback signal.

The maximum delay time for feedback when changing the signal to a 1 signal (ON) and a 0 signal (OFF) can be set in the configuration tool.

Configuration of the safety function SBC in the configuration tool

Field: Feedback control			
Input field	Valid entry	Unit	Description
Feedback input	Activate/deactivate (default: deactivated)	--	Activation of the feedback input
Type	1: Normally open (NO) 2: Normally closed (NC)	--	Contact type selection
Delay time ON (Ton)	0 ... 120000 (default: 20)	[ms]	Maximum delay time when changing signal to 1 signal
Delay time OFF (Toff)	0 ... 120000 (default: 20)	[ms]	Maximum delay time when changing signal to 0 signal

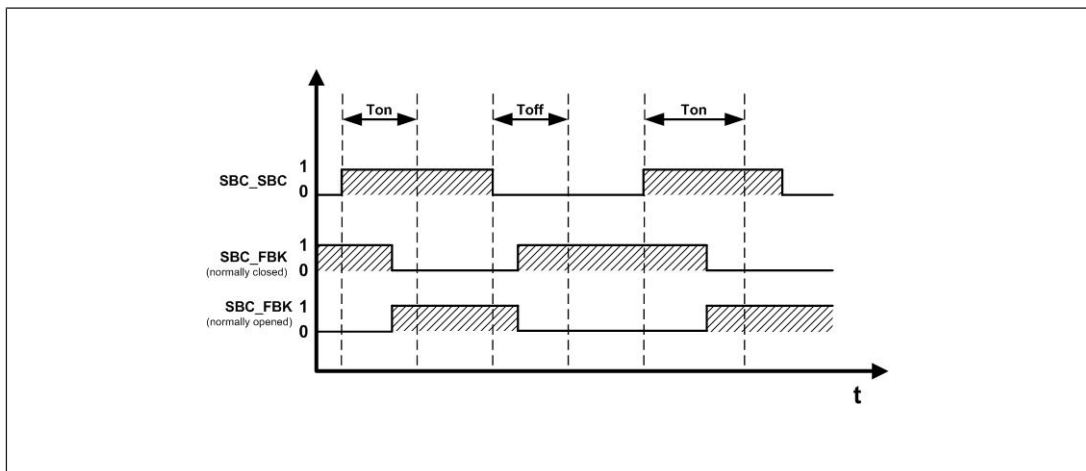


Fig.: Safety function SBC, feedback

Legend

Ton	Delay time ON Feedback when changing signal to 1 signal
Toff	Delay time OFF Feedback when changing signal to 0 signal
SBC_SBC	Brake control output
SBC_FBK (normally closed)	Feedback input (feedback FBK) (normally closed, N/C)
SBC_FBK (normally opened)	Feedback input (feedback FBK) (normally open, N/O)

4.11.11.1**Combination options for SBC 1-pole and SBC 2-pole**

There is a choice of the following function blocks in the configuration tool:

- ▶ SBC 1-pole
- ▶ SBC 2-pole

**INFORMATION**

A maximum of two SBC function blocks can be used in the configuration tool.

Possible use of the SBC function blocks:

SBC 1-pole + SBC 1-pole

SBC 2-pole + SBC 1-pole

The various combinations are described in the following chapter
[Application of the SBC and SBT safe brake functions](#) [56]

4.11.11.2 SBC with 1-pole output for controlling an external safe device

The safety function SBC 1-pole is envisaged for controlling an external safe braking device. This is connected to the assigned 1-pole safe output.

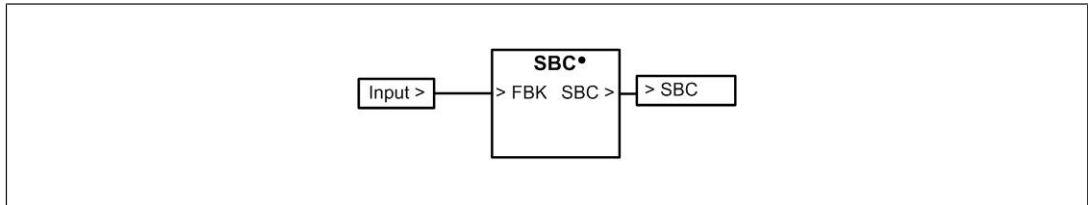


Fig.: Function block SBC 1-pole

The safety function SBC 1-pole can be assigned to any 1-pole, digital output (O0 ... Ox).

4.11.11.3 SBC with 2-pole output for direct power control of a brake

The safety function SBC 2-pole is envisaged for direct power control of closed-current, mechanical brakes. The brake is connected directly to the terminals of the 2-pole output SBC+/-.

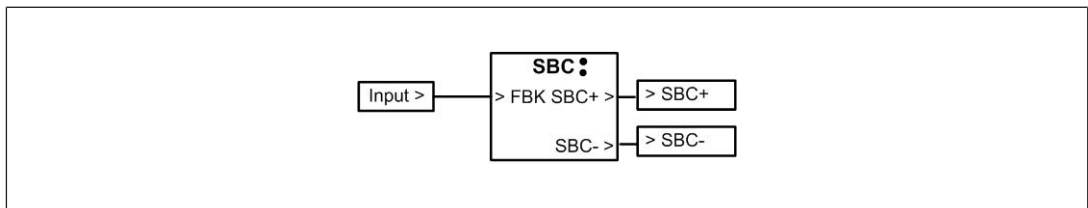



Fig.: Function block SBC 2-pole

The safety function SBC 2-pole is assigned to the 2-pole, digital output SBC+/SBC- (see [Performance trigger of standby current-activated mechanical brakes by the safety module](#) [ 58]).

4.11.12 Safe Brake Test (SBT)

The proper functioning of a closed-current brake can be tested with the safety function SBT.

The safety function SBT corresponds to a cyclical test of the braking device.

The safety function can only be used once.

Up to four test steps can be configured in the test sequence. In each test step it is checked whether the brake can generate the necessary holding torque for the drive axle over a defined period. During the test, standstill of the motor is monitored from a safety-related perspective.

The following components are involved in executing the safety function SBT:

- ▶ Drive controller SD6 with integral safety module SE6
- ▶ A motor connected to Drive controller (see [Permitted motor types](#) [18]) with motor encoder (see [Approved motor encoders](#) [18])
- ▶ One or more closed-current brakes/braking devices

"Holding of loads" can be tested with the safety function SBT. In conjunction with the safety function SBC, the safety function "Holding of loads" can be realised.

For further information on application of the safety function SBT, see [Application of the SBC and SBT safe brake functions](#) [56].

**CAUTION!****Risk of injury**

A hazardous status may occur if there is a faulty brake or braking device. Ensure that no persons remain in the hazardous area during the brake test.

**CAUTION!****Risk of injury****Use of two safe brakes (optional)**

After every update to the drive controller firmware, inspect the brake test for functioning. Brake 2 must be released during the safety inspection of brake 1. Brake 1 must be released during the safety inspection of brake 2.

Inspection period and tolerance time

The safety function SBT must be activated cyclically, within an inspection period.

The inspection period

- ▶ should be limited to a maximum of 8 h.
- ▶ can be set in the configuration tool.
- ▶ is monitored in a safety-related way.
- ▶ is restarted once the safety function SBT has been executed without errors.

If there is no activation of the safety function SBT within the inspection period

- ▶ the tolerance time is started.
- ▶ a 0 signal is issued at the feedback output SBA.

The tolerance time

- ▶ can be set in the configuration tool.
- ▶ is monitored in a safety-related way.

If there is equally no activation of the safety function SBT within the tolerance time

- ▶ the motor is shut down with the safety function SS1.
- ▶ the safety module switches to the FAULT state.

If the RUN state is achieved after the safety mode has run up, the inspection period is treated as elapsed and the safety function SBT must be activated within the tolerance time.

Configuration of the safety function SBT in the configuration tool

Field: Test interval			
Input field	Valid entry	Unit	Description
Test period	X ... 10000 (default: 480)	[min]	Time after which the safety function SBT must be executed. Max. 8 h
Tolerance time	1 ... 100 (default: 10)	[%]	Tolerance time of inspection period

Activation of the safety function SBT

The safety function SBT can be activated in the following way:

- ▶ By external activation at the activation input ACT
- ▶ By internal activation via Drive controller

Configuration of the safety function SBT in the configuration tool

Field: Activation			
Input field	Valid entry	Unit	Description
Activated via amplifier	Activate/deactivate (default: deactivated)	--	Activation of the safety function SBT is by the parameters for Drive controller .

Activation and feedback

For activation and feedback of the safety function SBT, the following activation and feedback signals of the function can be routed to safe inputs and outputs.

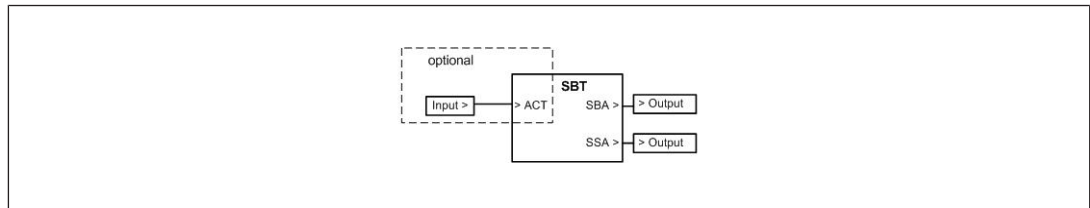


Fig.: Function blocks SBT

Legend

- ACT** The safety function SBT is activated or deactivated via the activation input ACT (0 signal activated, 1 signal deactivated).
- SBA** Safe Brake Acknowledge
The feedback output reports that the last brake test was completed successfully and the test period has not yet elapsed (1 signal) or that the brake test is in progress (0 signal) or that the test period has elapsed (0 signal).
- SSA** Safe Standstill Acknowledge
The feedback output reports that standstill monitoring is active and the motor is at a standstill (1 signal) or that the motor has moved during the brake test in progress (0 signal).
- optionally Activation of the safety function SBT can optionally be performed by Drive controller (selectable in the configuration tool).

Start of test sequence

With external activation

- ▶ Once the SBT delay time has elapsed, the test sequence starts.
- ▶ Once the SBT delay time has elapsed, the feedback output SSA becomes active.
- ▶ The SBT delay time can be set in the configuration tool.

With internal activation

- ▶ the test sequence starts without a delay time.
- ▶ the feedback output SSA is active.

The configuration of the safety function SBT in the configuration tool

Field: Delay time			
Input field	Valid entry	Unit	Description
Delay time (t_{del})	0 ... 120000 (default: 20)	[ms]	Time between activation of the safety function SBT and the point at which monitoring begins

Test sequence procedure

Up to four test steps can be defined in the configuration tool for the test sequence. These are then performed in succession.

Once a test step has ended, the next test step begins after a waiting period of two seconds.

The entire test sequence is monitored via a total time (timeout) that can be set in the configuration tool, and must be completed before this time period has elapsed. If that is not the case, safety function SS1 is activated and the safety module switches to the FAULT state. The brake test is considered to have been failed.



INFORMATION

Determining total time manually

The total time depends on the set times for the total test sequences and must be determined manually.

During the total test sequence, standstill of the drive is monitored from a safety-related perspective. The permitted position window for standstill monitoring can be set in the configuration tool.

Configuration of the safety function SBT in the configuration tool

Field: Maximum total time			
Input field	Valid entry	Unit	Description
Total time (t_{Σ})	0 ... 2147483647 (default: 50)	[ms]	If the brake test is not performed within the total time, an error reaction is triggered.

Field: Position window			
Input field	Valid entry	Unit	Description
Standstill position window (pos _{win})	0 ... 2147483647 (default: 50)	User-defined [default: increments]	Position window of the safety function SOS (SOS is active throughout the entire brake test).

Aborting of the test sequence

The test sequence can be aborted by the following safety functions:

- ▶ Activation of the safety function SS1
- ▶ Activation of safety function SS2
- ▶ Deactivation of the safety function SBT

After aborting

- ▶ the safety function STO is activated.
- ▶ the brake test is considered to have been failed.

Test step

Each of the four test steps can be activated individually in the configuration tool.

In the test step,

- ▶ the torque/force-forming test current for the connected motor is recorded.
- ▶ the duration of energisation is monitored.
- ▶ the brake or braking device to be tested is controlled so that a braking force is applied.
- ▶ motor standstill is monitored from a safety-related perspective.
- ▶ the amplitude of motor current is monitored for compliance with the tolerance window that can be set in the configuration tool.

Configuration of the safety function SBT in the configuration tool

For all test steps

Field: Test steps			
Input field	Valid input/ permanently set	Unit	Description
Waiting period (t _{wait})	(default: 2000) Greyed (permanently set)	[ms]	Waiting period after each test step
Test current tolerance	1 ... 100000 (default: 100)	[mA]	Tolerance window for test current
Execute test step	Activate/deactivate (default: deactivated)	--	Activates the test step

For test step 1

Field: Test step 1			
Input field	Valid input/ permanently set	Unit	Description
Test current	0 ... 100000 (default: 0)	[mA]	Max. positive current value that must be achieved
Duration	Greyed (permanently set) (default: 500)	[ms]	Duration of energisation
Brake 1	0: Brake drive controller BD1/BD2 on X5	--	Specification of brake for testing

For test step 2

Field: test step 2			
Input field	Valid input/ permanently set	Unit	Description
Test current	0 ... -100000 (default: 0)	[mA]	Max. negative current value that must be achieved
Duration	Greyed (permanently set) (default: 500)	[ms]	Duration of energisation
Brake 1	0: Brake drive controller BD1/BD2 on X5	--	Specification of brake for testing

For test step 3

Field: test step 3			
Input field	Valid input/ permanently set	Unit	Description
Test current	0 ... 100000 (default: 0)	[mA]	Max. positive current value that must be achieved
Duration	Greyed (permanently set) (default: 500)	[ms]	Duration of energisation
SBC function Brake 2	SBC nameX*	--	Specification of brake for testing
	SBC nameY*	--	Specification of brake for testing
*SBC nameX, SBC nameY The designations/names of the brakes are specified in the configuration tool of the safety function SBC.			

For test step 4

Field: test step 4			
Input field	Valid input/ Permanently config- urable	Unit	Description
Test current	0 ... -100000 (default: 0)	[mA]	Max. negative current value that must be achieved
Duration	Greyed (permanently set) (default: 500)	[ms]	Duration of energisation
SBC function Brake 2	SBC nameX*	--	Specification of brake for testing
	SBC nameY*	--	Specification of brake for testing
*SBC nameX, SBC nameY The designations/names of the brakes are specified in the configuration tool of the safety function SBC.			

The brake/braking device of the completed test step is released as soon as the brake force of the brake/braking device for the next test step is applied. This overlap prevents a suspended load from dropping.

Throughout the entire test step, the motor may only move within the configured tolerance window.

If the safety module detects an error via one of the monitoring functions

- ▶ the safety function SS1 is activated.
- ▶ the safety module switches to the FAULT state.

Calculation of test current

The test current corresponds to the force-forming component of the motor current.

For rotary motors, the test torque is calculated using the following formula:

- Test current x torque constant

For linear motors, the test force is calculated using the following formula:

- Test current x force constant

Forces or torques already acting on the axis must be considered in the measurement, e.g. suspended loads.

Test sequence completed successfully

If all test steps have been performed without errors, the test sequence has been completed successfully.

Then

- ▶ the test period is started afresh.
- ▶ a 1 signal is issued at the feedback output SBA.

Activation and feedback

For activation and feedback of the safety function SBT, the following activation and feedback signals of the function can be routed to safe inputs and outputs.

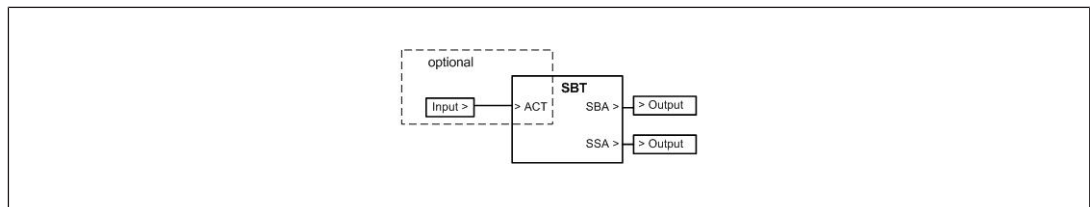


Fig.: Function blocks SBT

Legend

- ACT** The safety function SBT is activated or deactivated via the activation input ACT (0 signal activated, 1 signal deactivated).
- SBA** Safe Brake Acknowledge
The feedback output reports that the last brake test was completed successfully and the test period has not yet elapsed (1 signal) or that the brake test is in progress (0 signal) or that the test period has elapsed (0 signal).
- SSA** Safe Standstill Acknowledge
The feedback output reports that standstill monitoring is active and the motor is at a standstill (1 signal) or that the motor has moved during the brake test in progress (0 signal).
- optionally Activation of the safety function SBT can optionally be performed by Drive controller (selectable in the configuration tool).

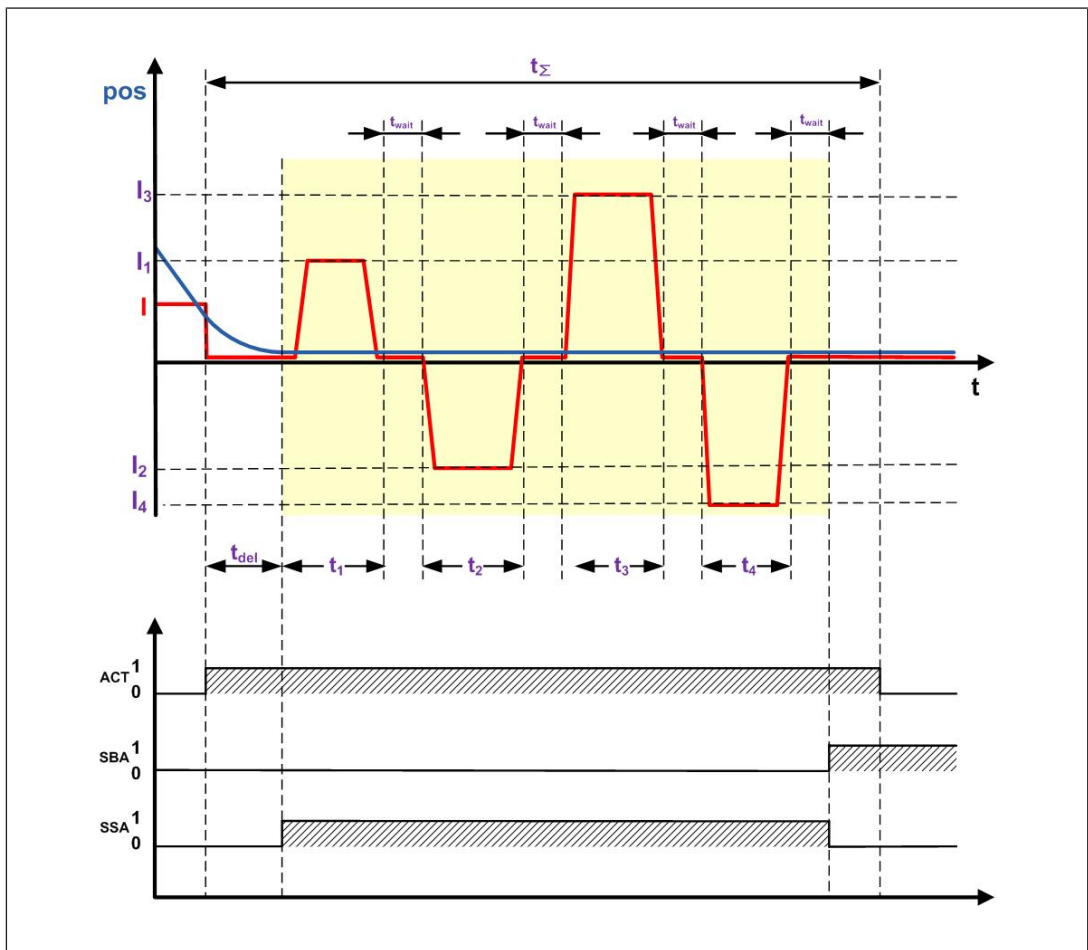


Fig.: Safety function SBT

Legend

pos	Position
t_{Σ}	Total time
t_{wait}	Waiting period (permanently set, 2 seconds, applies to all test steps)
I_1	Test current test step 1
I_2	Test current test step 2
I_3	Test current test step 3
I_4	Test current test step 4
t_{del}	Delay time
t_1	Brake test duration test step 1
t_2	Brake test duration test step 2
t_3	Brake test duration test step 3
t_4	Brake test duration test step 4
ACT	Input for safety function SBT
SBA	Safe Brake Acknowledge Output for feedback from safety function SBT
SSA	Safe Standstill Acknowledge Output for feedback from standstill monitoring

4.11.13 Safe Restart Lock (SRL)

The safety function SRL prevents the safety module from leaving the operating status STO by a reset. An unexpected or unintended motor start-up is thus not possible.

- ▶ The safety function SRL can be used to prevent an unexpected start-up in accordance with ISO 14118.

The safety function can only be used once.

Activation of the safety function SRL

The safety function SRL can be activated in the following way:

- ▶ By external activation at the activation input ACT

The following activation signals of the function can be connected to a safe input for activation of the safety function SRL:

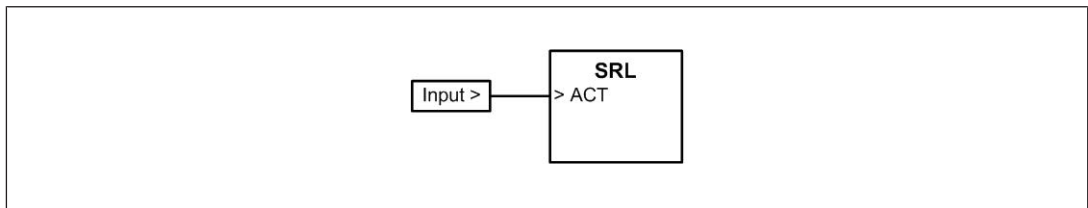


Fig.: Function block SRL

Legend

ACT The safety function SRL is activated or deactivated via the activation input SRL_ACT.
(0 signal activated, 1 signal deactivated)

0 signal (activated)

The RESET is blocked and cannot be triggered.

Supplementary information on the RESET behaviour is provided in the following chapters:

[Safe restart of the machine](#) 49]

[Resetting \(RESET\) the safety module](#) 50]

Switching from 0 signal to 1 signal

Various actions can be configured in the configuration tool.

The following can be performed when switching from the 0 signal to 1 signal:

- ▶ RESTART of safety module is triggered, errors are acknowledged or
- ▶ Only errors are acknowledged or
- ▶ No action takes place.

1 signal (deactivated)

A RESET is possible (optionally depending on other RESET settings).

Configuration of the safety function SRL in the configuration tool

Field: RESET trigger			
Input field	Valid entry	Unit	Description
RESET behaviour	0: NOP (default: 0)	--	No action No RESTART occurs.
	1: ACK ERR	--	Acknowledge error No RESTART occurs.
	2: RESTART	--	Acknowledge error The RESTART is triggered.

**INFORMATION**

A RESET of the safety module (switching to the operating status RUN) can only take place if the activation input SS1_ACT (and STO_ACT, if configured) has a 1 signal.

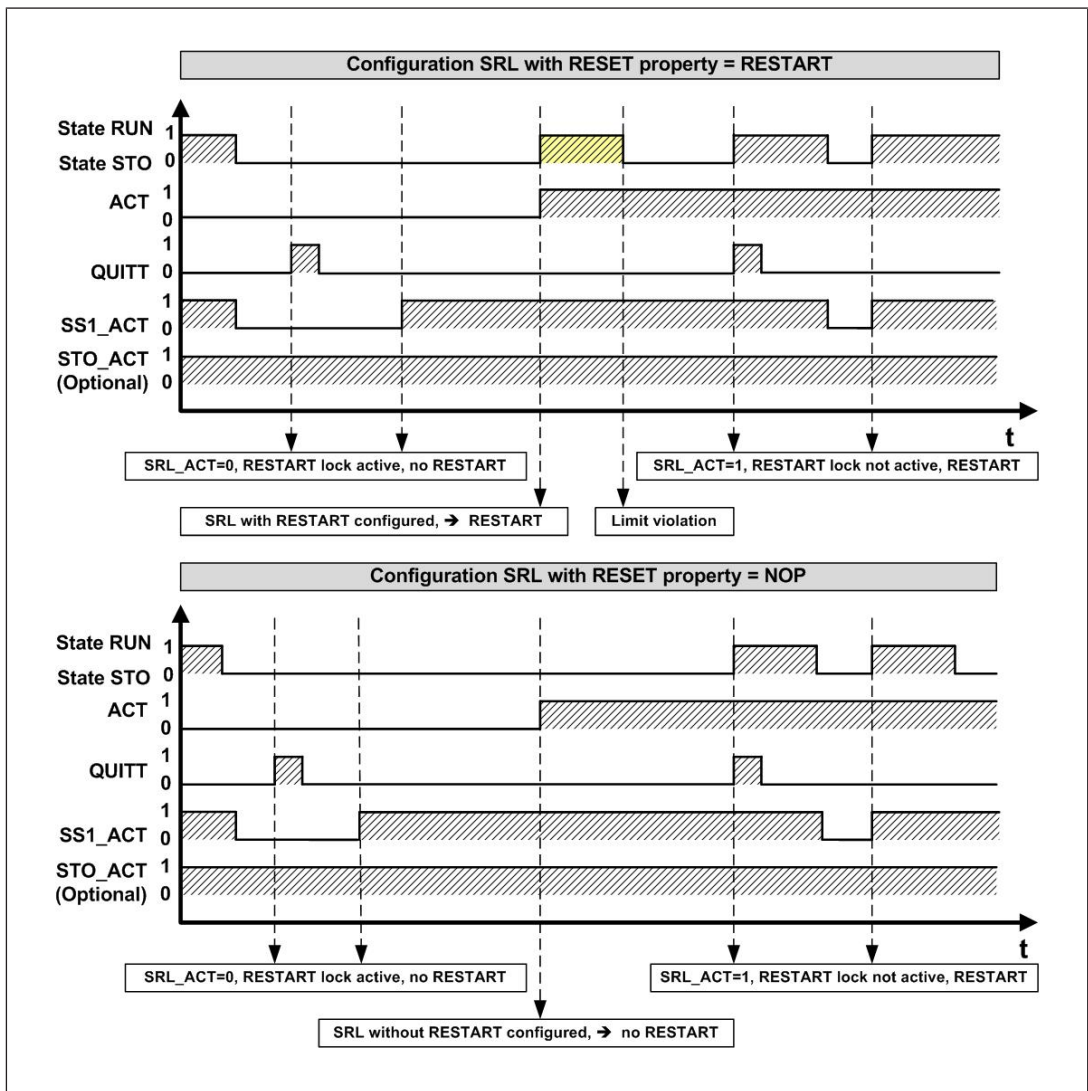


Fig.: Safety function SRL, RESET

Legend

- State RUN The device status of the safety module is RUN.
(see [Operating states \[169\]](#))
- State STO The device status of the safety module is STO
(see [Operating states \[169\]](#))
- ACT Input for safety function SRL
- ACK The ACK command was performed via the drive controller.
- SS1_ACT Input for safety function SS1
- Optionally
STO_ACT Optional input for safety function STO

4.11.14 Safe Status Output (SSO)

The safety function "Safe Status Output" (SSO) reports the current status of the safety module. The three outputs READY, FSRUN and $\overline{\text{FAULT}}$ (no error) are available.

The safety function can only be used once.



The safety function SSO does not require explicit activation.

Output READY

1 signal


- ▶ The safety module is operational.

0 signal


- ▶ In the following cases the safety module is not operational:
 - No supply voltage
 - Safety module is in RUNUP, see [Operating states](#) [ 169]
 - Safety module is in STARTUP, see [Operating states](#) [ 169]
 - Fatal error

Output FSRUN

1 signal

- ▶ A motion-monitoring safety function is active (in other words excluding SSO, SBC, SRL or the safety functions SS1 if brake ramp monitoring is not configured).
- ▶ The safety module is in the operating status FSRUN (see [Operating states](#) [ 169])

0 signal

- ▶ No motion-monitoring safety function is active (in other words, SSO, SBC, SRL or the safety functions SS1 with configured brake ramp monitoring may be active).
- ▶ The safety module is not in the operating status FSRUN (see [Operating states](#) [ 169])

Output $\overline{\text{FAULT}}$ (no error)

1 signal

- ▶ The safety module has no error.

0 signal

- ▶ The safety module has an error.

Feedback

The following feedback signals of the function can be connected to safe outputs for feedback of the safety function SSO:

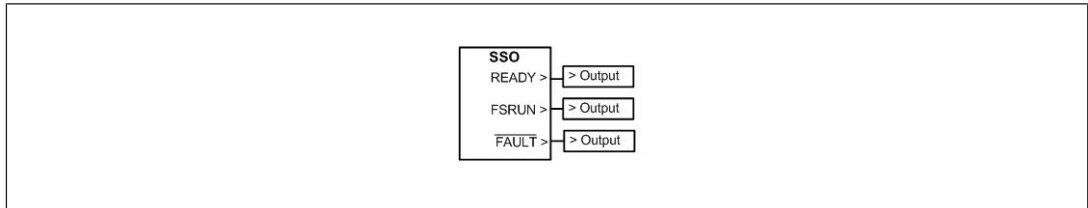


Fig.: Function block SSO

Legend

READY The READY output reports whether the safety module is operational.

FSRUN The FSRUN output reports whether a safety function is active.
(The safety functions SSO, SBC or SRL are excluded)

FAULT The $\overline{\text{FAULT}}$ output reports whether the safety module has an error.
(no error)

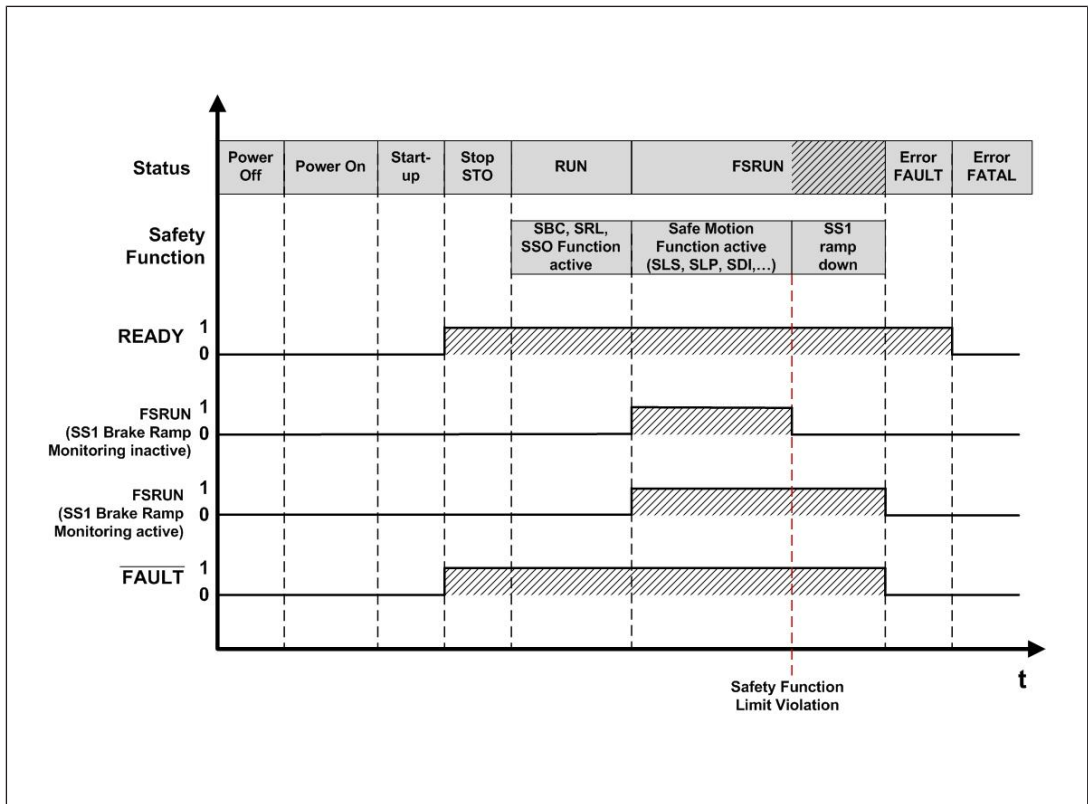


Fig.: Safety function SSO

Legend

Status Status of safety module

Safety Function Safety functions

READY Output for feedback on whether the safety module is operational.

FSRUN (SS1 brake ramp monitoring inactive)	Output for feedback on whether a safety function is active. (The safety functions SSO, SBC or SRL are excluded, the safety function SS1 with non-activated brake ramp monitoring)
FSRUN (SS1 Brake Ramp Monitoring active)	Output for feedback on whether a safety function is active. (The safety functions SSO, SBC or SRL are excluded, the safety function SS1 with activated brake ramp monitoring)
$\overline{\text{FAULT}}$	Output for feedback on whether the safety module has an error.
Safety Function Limit Violation	Limit value exceeded by a motion-monitoring safety function

4.11.15 Hysteresis for monitoring functions

A **hysteresis window** may also be defined for the limit values for monitoring.

This makes it possible to avoid toggling the feedback signal in the limit value range.


A hysteresis window can be defined for the following monitoring functions

- ▶ SDI-M (Safely Monitored Direction)
- ▶ SLI-M (Safely Monitored Increment)
- ▶ SLS-M (Safely Monitored Speed)
- ▶ SOS-M (Safely Monitored Operating Stop)
- ▶ SSR-M (Safely Monitored Speed Range)
- ▶ SLP-M (Safely Monitored Position)



INFORMATION

Hysteresis (optional)

If the permanent monitoring option function [Permanent monitoring \(optional\)](#) [ 75]) has been selected in the configurator for a monitoring function, it is mandatory to select the hysteresis option.

The Set/Reset function (default) is then not possible.

Behaviour upon exceeding limit value

If it is identified that a limit value has been exceeded, the output for the safety function in question is reset (0 signal).

Renewed setting of the feedback output (1 signal) must be performed via one of the two functions:

- ▶ SET/RESET function (default)
- ▶ Hysteresis (optional)

SET/RESET function (default)

- ▶ The output remains permanently reset even if exceeding of the limit value no longer applies.
- ▶ The output remains reset until the safety function is activated again at the input after an activation edge, the delay time has elapsed and limit value violation no longer applies.

Hysteresis (optional)

- ▶ After exceeding of a limit value the feedback output is only reset when the actual value has fallen below the limit value by the configured hysteresis value.

Configuration of a monitoring function with hysteresis in the configuration tool

Field: Hysteresis			
Input field	Valid entry	Unit	Description
Hysteresis	Activate/deactivate (default: deactivated)		Activated: Renewed setting of the feedback output via hysteresis. Deactivated: the SET/RESET function is active.
Hysteresis window ($hyst_{win}$)	0 ... 100 (default: 10)	[%]	Defines an additional window for the defined limit value. If the actual value has fallen below the limit value by the hysteresis window, the feedback output is set again.

Behaviour of hysteresis, depending on monitoring function

Safety function	Valid entry	Description
SDI-M	-	The tolerance window configured in the input field "Window standstill position (pos_{win})" is used as the hysteresis window. So if the current position moves in the correct direction by more than the configured tolerance window after a limit value has been exceeded, the feedback output is set again.
SLI-M	0 ... 100 %	0 ... 100 % of the permitted position range, in other words the sum of the input value "Upper limit value position ($pos_{upperLimit}$)" and "Lower limit value position ($pos_{lowerLimit}$)", is used as the hysteresis window.
SLS-M	0 ... 100 %	0 ... 100 % of the limit value configured in the input field "Limit value speed (v_{lim})" is used as the hysteresis window.
SOS-M	0 ... 100 %	0 ... 100 % of the limit value configured in the input field "Position window standstill (pos_{win})" is used as the hysteresis window.
SSR-M	0 ... 100 %	0 ... 100 % of the permitted speed range, in other words the difference between the input value "Upper limit value position ($v_{upperLimit}$)" and "Lower limit value position ($v_{lowerLimit}$)", is used as the hysteresis window.
SLP-M	0 ... 100 %	0 ... 100% of the permitted position range, in other words the difference between the input value "Upper limit value position ($pos_{upperLimit}$)" and "Lower limit value position ($pos_{lowerLimit}$)", is used as the hysteresis window.

The monitoring function SLS-M (Safely Monitored Speed) serves as an example of the behaviour upon hysteresis and SET/RESET.

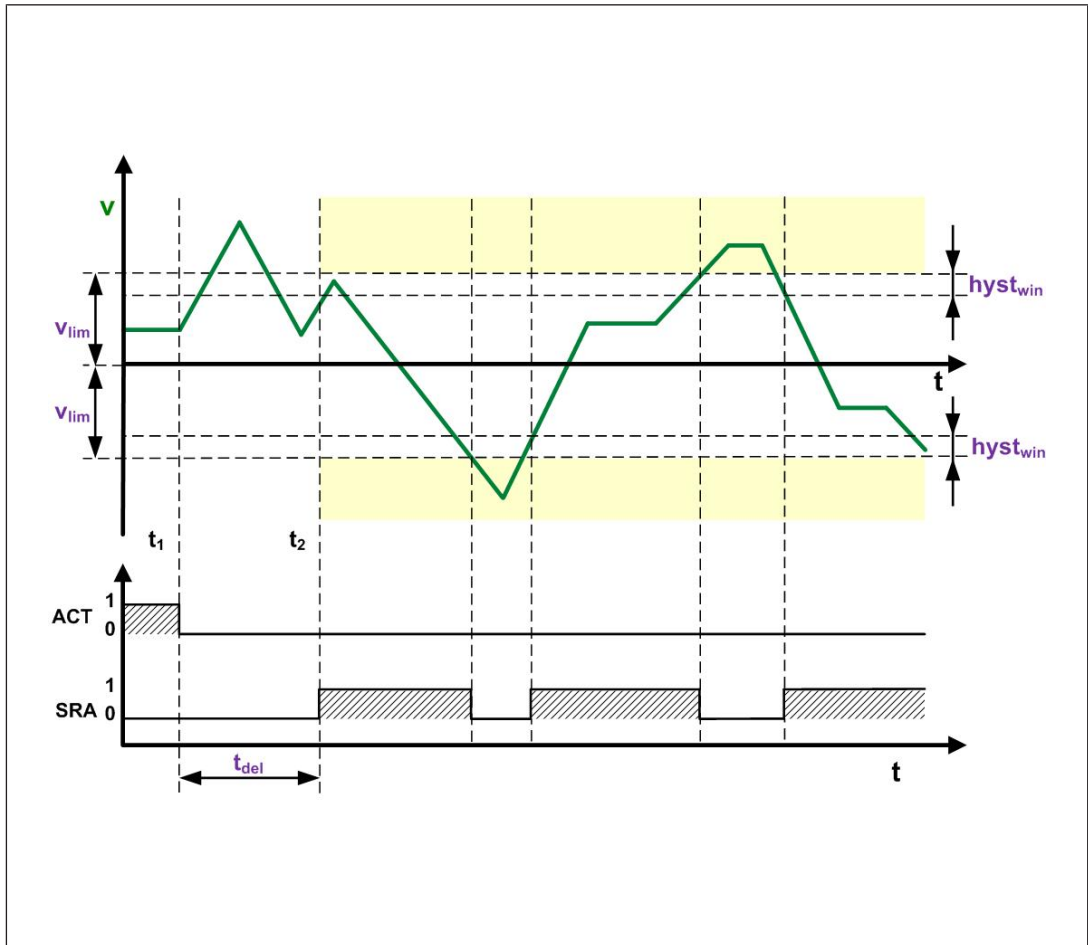


Fig.: Flow chart SLS-M, hysteresis (optional)

Legend

v	Speed
$hyst_{win}$	Hysteresis window
v_{lim}	Speed limit value
t_1	Activation of the safety function SLS-M
t_2	Monitoring start
t_{del}	Delay time
ACT	Activation input for safety function SLS-M
SRA	Safe Range Acknowledge Output for feedback from the safety function SLS-M

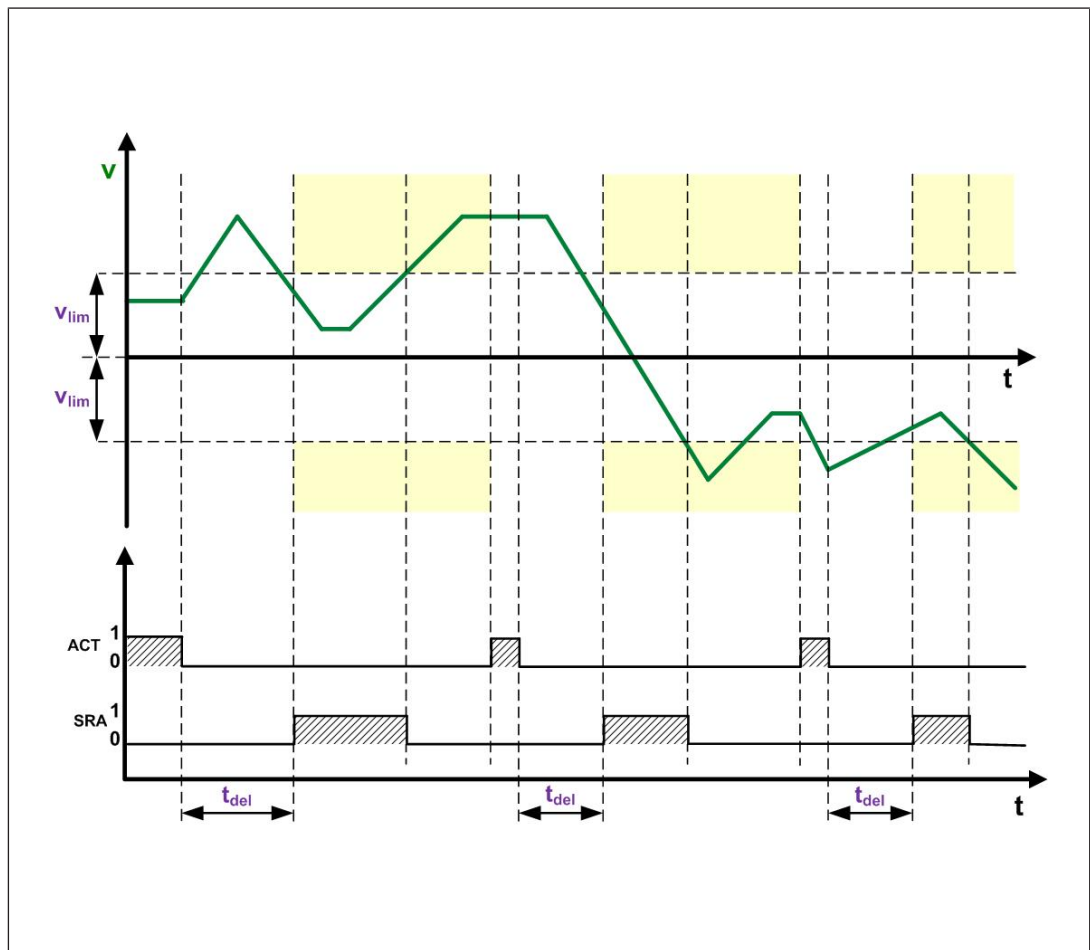


Fig.: Flow chart SLS-M, SET/RESET (default)

Legend

v	Speed
v_{lim}	Speed limit value
t_{del}	Delay time
ACT	Activation input for safety function SLS-M
SRA	Safe Range Acknowledge Output for feedback from the safety function SLS-M

4.12 Configuration

The safety functions to be performed by the safety module are defined in the safety configurator (PASmotion) (PASmotion is part of the DriveControlSuite):

- ▶ configuration of the safety functions required for safe motion sequences.
- ▶ Setting the parameters
 - for limit values
 - for brake ramps for the safety functions
 - for monitoring motion sequences
- ▶ The inputs and outputs are assigned to the safety functions.

There are various ways of transferring the configuration.

Transfer of the configuration to the safety module

- ▶ Online from the configurator to the safety module (download)
- ▶ Transfer of the configuration from the drive controller's para module to the safety module (upload).
- ▶ The feasibility of the configuration is checked when it is downloaded.

Transfer of the configuration from the safety module

- ▶ Online from the safety module to the configurator (upload)
- ▶ Saving the configuration on the drive controller's para module.

In online mode it is possible to

- ▶ Display operating statuses of the safety module (in parameter navigation: error stack)
- ▶ Display messages (in parameter navigation: error stack)
- ▶ Download configuration to the safety module
- ▶ Upload configuration to the PC

The following security mechanisms are integrated

- ▶ Safe addressing of the safety module (identification of the safety module from the serial number)
- ▶ Access to projects is password protected
- ▶ Password protection for the configuration for download and upload
- ▶ Project has unique checksum

A PDF file can be generated for **documentation** of the project and all its settings (report).

**INFORMATION**

Further information on the configuration and parameter settings for the safety functions is available in the safety module Configurator's online help.

5 Wiring

5.1 General wiring guidelines

Inputs

Note the wiring considerations described in the following chapter.


[Activation of safety functions](#) [ 27]

Outputs

Note the wiring considerations described in the following chapter.

[Feedback from the safety functions](#) [ 29]

Cable material

- ▶ Use copper wiring.
- ▶ Max. cable lengths
 - Supply voltage: Max. 30 m
 - Digital inputs and outputs: Max. 30 m
 - 1-pole output 1BD1/1BD2 (X5) max. 100 m
 - 2-pole output SBC+/SBC- (X8) max. 100 m
 - External encoder 30 ... 50 m, see [External encoder](#) [ 156]

Cable cross-sections



INFORMATION



 
Specification of the crimp connectors (AEH) takes place in accordance with DIN 46228-1 or DIN 46228-4.

Terminal specification X2, X5, X7, X8		
Grid dimensions	5.08 mm	
Rated current at 40°C ambient temperature	CE / UL / CSA	16 A / 10 A / 10 A
Max. conductor cross section	Flexible without AEH	2.5 mm ²
	Flexible with AEH without plastic collar	2.5 mm ²
	Flexible with AEH with plastic collar	2.5 mm ²
	2 flexible wires with double AEH with plastic collar	--
	AWG in accordance with UL / CSA	12

 
 
 
Terminal specification X2, X5, X7, X8		
Grid dimensions	5.08 mm	
Min. conductor cross section	Flexible without AEH	0.2 mm ²
	Flexible with AEH without plastic collar	0.2 mm ²
	Flexible with AEH with plastic collar	0.2 mm ²
	2 flexible wires with double AEH with plastic collar	--
	AWG in accordance with UL/CSA	26
Stripping length	10 mm	

Terminal specification X14 / X15		
Grid dimensions	3.5 mm	
Rated current at 40°C ambient temperature	CE / UL / CSA	8 A
Max. conductor cross section	Flexible without AEH	1.5 mm ²
	Flexible with AEH without plastic collar	1.5 mm ²
	Flexible with AEH with plastic collar	0.75 mm ²
	2 flexible wires with double AEH with plastic collar	--
	AWG in accordance with UL/CSA	16
Min. conductor cross section	Flexible without AEH	0.2 mm ²
	Flexible with AEH without plastic collar	0.25 mm ²
	Flexible with AEH with plastic collar	0.25 mm ²
	2 flexible wires with double AEH with plastic collar	--
	AWG in accordance with UL/CSA	24
Stripping length	10 mm	


5.2 Connector pin assignment

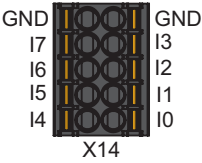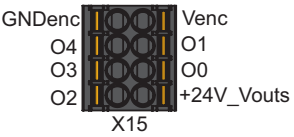X14	Pin	Designation	Description
 <p>GND I7 I6 I5 I4 I3 I2 I1 I0 X14</p>	1	I0	Safe digital input
	2	I1	Safe digital input
	3	I2	Safe digital input
	4	I3	Safe digital input
	5	GND	Reference potential for digital inputs (0 V)
	6	I4	Safe digital input
	7	I5	Safe digital input
	8	I6	Safe digital input
	9	I7	Safe digital input
	10	GND	Reference potential for digital inputs (0 V)
X15	Pin	Designation	Description
 <p>GNDenc O4 O3 O2 Venc O1 O0 +24V_Volts X15</p>	1	+24V_Volts	Supply voltage for digital outputs (24 V _{DC}) (PELV) Note: The supply voltage is also required if no safe outputs are used.
	2	O0	Safe binary output
	3	O1	Safe binary output
	4	Venc	Supply voltage for external encoder
	5	O2	Safe binary output
	6	O3	Safe binary output
	7	O4	Safe binary output
	8	GNDenc	Reference potential for external encoder (0 V)
X8	Pin	Designation	Description
 <p>SBC+ SBC-</p>	1	SBC+	Output activation of brake 2 +
	2	SBC-	Output activation of brake 2 -


The following plug assignments/functions are described in the operating manual for the drive controller:

X2	Pin	Designation	Description
	1	1TP1/1K1+	Motor temperature sensor
	2	1TP2/1K2-	Motor temperature sensor
X7	Pin	Designation	Description
	1	+24 V	Brake supply (PELV)
	2	GND	Brake supply
X5	Pin	Designation	Description
	1	1BD1	Output activation of brake 1 +
	2	1BD2	Output activation of brake 1 -

5.3 Digital inputs

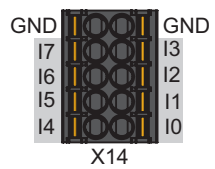X14	Pin	Designation	Description
	1	I0	Safe digital input
	2	I1	Safe digital input
	3	I2	Safe digital input
	4	I3	Safe digital input
	6	I4	Safe digital input
	7	I5	Safe digital input
	8	I6	Safe digital input
	9	I7	Safe digital input

Terminal configuration

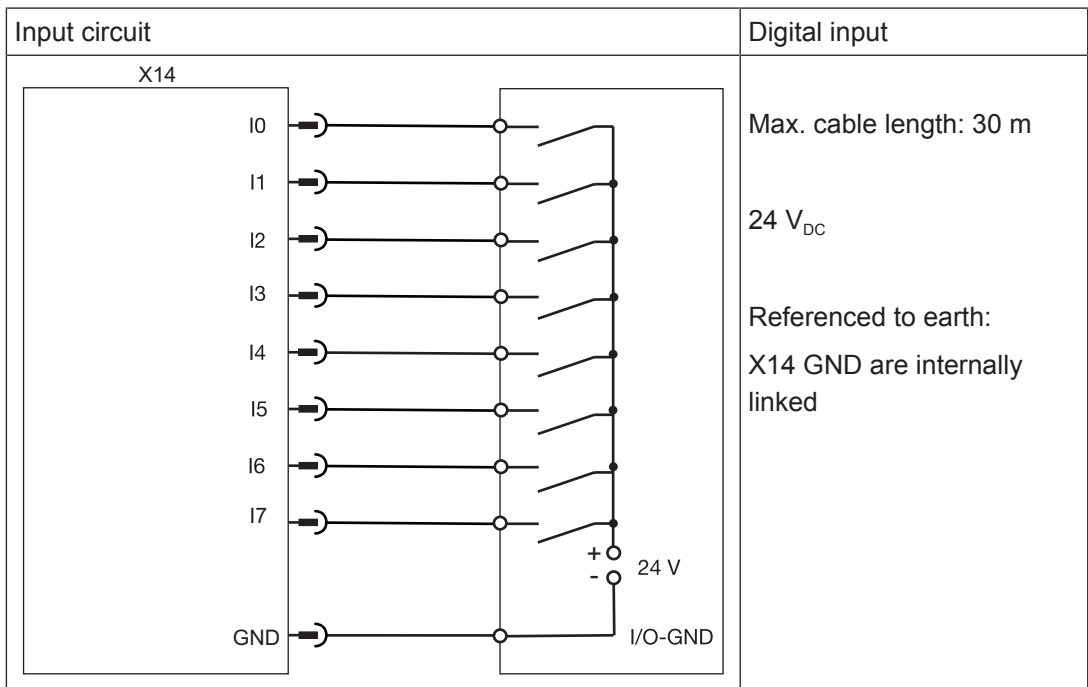


Connection principle

5.4 Digital outputs

5.4.1 Supply voltage

 
The digital outputs need a 24 VDC supply.

- ▶ When selecting the power supply, take note of the requirements in Chapter [Technical details](#) [179].




WARNING!
Risk of death by electrocution!


Safe electrical isolation must be ensured for the external power supply that generates the supply voltage. Not doing so poses a risk of death by electrocution.

X15	Pin	Designation	Description
	1	+24 V_Volts	Supply voltage for digital outputs (24 V _{DC}) (PELV)

 
Terminal configuration

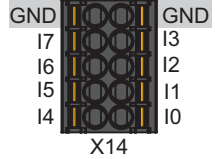X14	Pin	Designation	Description
	5	GND	Reference potential for digital outputs (GND) GND is internally linked to GND
	10	GND	


Terminal configuration

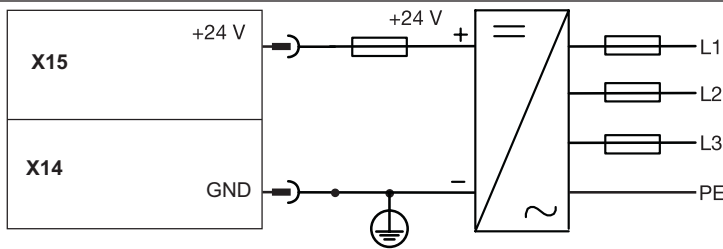Supply voltage		
		Max. cable length: 30 m 24 V connection isolated from external power supply, e.g. with isolating transformer Fuse 4 A T


Connection

X7	Pin	Designation	Description
	1	+ 24 V	Brake supply (PELV)
	2	GND	Brake supply


Terminal configuration

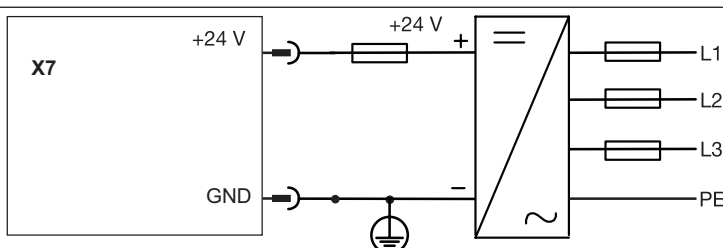Supply voltage		
		Max. cable length: 30 m Brake's supply voltage: 24 V _{DC} (PELV) Tolerance: 0 ... 20% Fuse 8 A T

5.4.2 Single-pole outputs

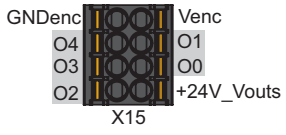
X15	Pin	Designation	Description
	2	O0	Safe binary output
	3	O1	Safe binary output
	5	O2	Safe binary output
	6	O3	Safe binary output
	7	O4	Safe binary output

Terminal configuration

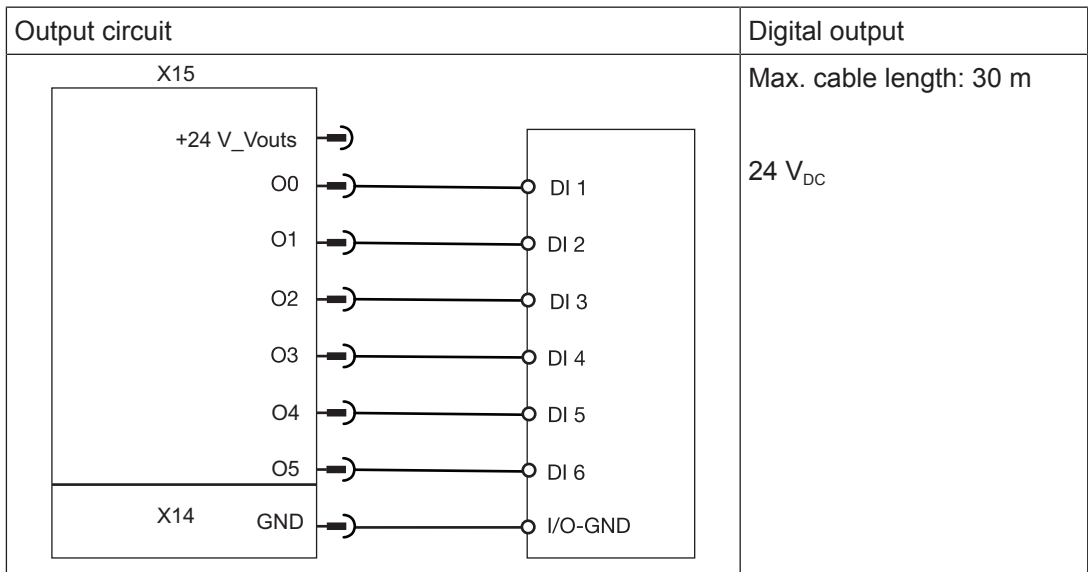


Connection principle

5.4.3 Dual-pole outputs

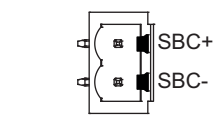X8	Pin	Designation	Description
	1	SBC+	Output: Activation of brake 2 +
	2	SBC-	Output: Activation of brake 2 -


Connector pin assignment

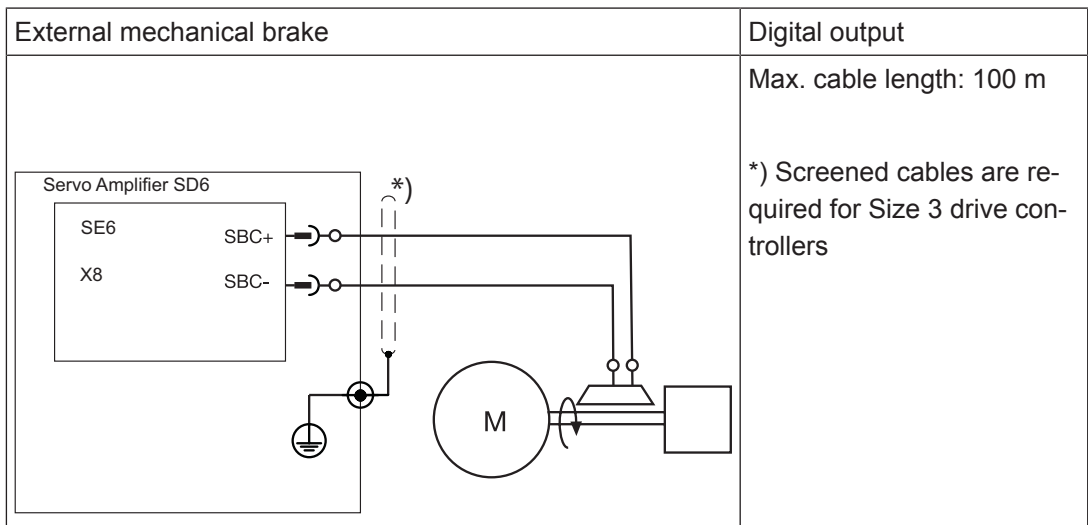

Connection

 
5.5 External encoder

5.5.1 Supply voltage




WARNING!
Risk of death by electrocution!

Safe electrical isolation must be ensured for the external power supply that generates the supply voltage. Not doing so poses a risk of death by electrocution.

X15	Pin	Designation	Description
	4	Venc	Supply voltage for external encoder (PELV)
	8	GNDenc	Reference potential for external encoder (0 V)


Terminal configuration

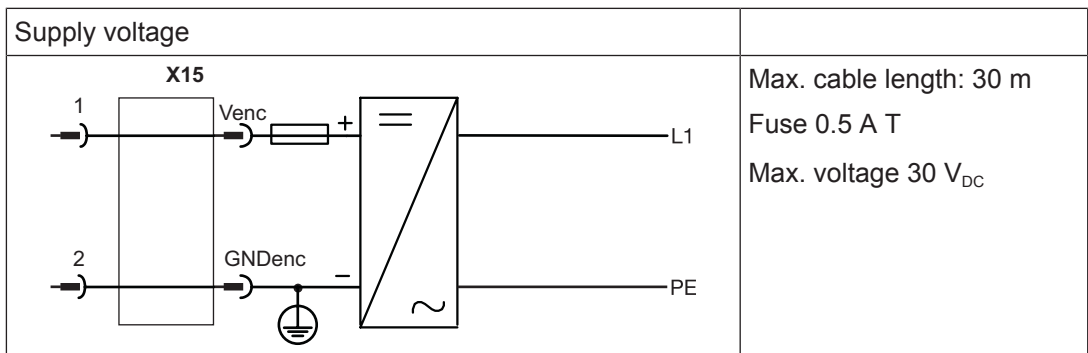


Connection

5.5.2 Incremental encoder with TTL signal

If the cable length is > 50 m, please speak to our Customer Support.

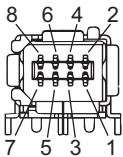X50	Pin	Designation	Description
	1	V+	Supply voltage
	2	0 V	Supply voltage reference potential
	3	n. c.	--
	4	A	Channel A
	5	/A	Channel A inverted
	6	n. c.	--
	7	B	Channel B
	8	/B	Channel B inverted
n. c.: Not connected			


Connector pin assignment

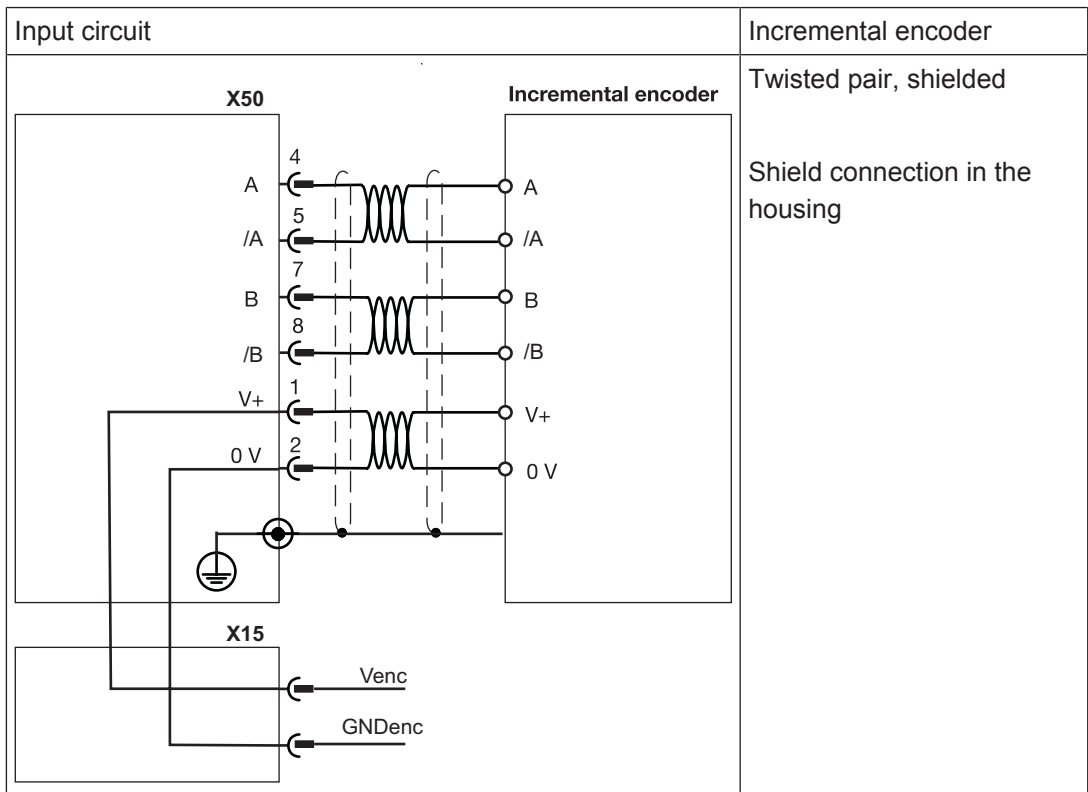


Connection

5.5.3 Absolute encoder with SSI interface

If the cable length is > 50 m, please speak to our Customer Support.

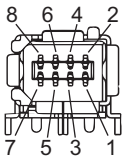X50	Pin	Designation	Description
	1	V+	Supply voltage
	2	0 V	Supply voltage reference potential
	3	n. c.	---
	4	CLOCK	Pulse signal
	5	/CLOCK	Pulse signal inverted
	6	n. c.	---
	7	DATA	Data
	8	/DATA	Data inverted
n. c.: Not connected			

Connector pin assignment

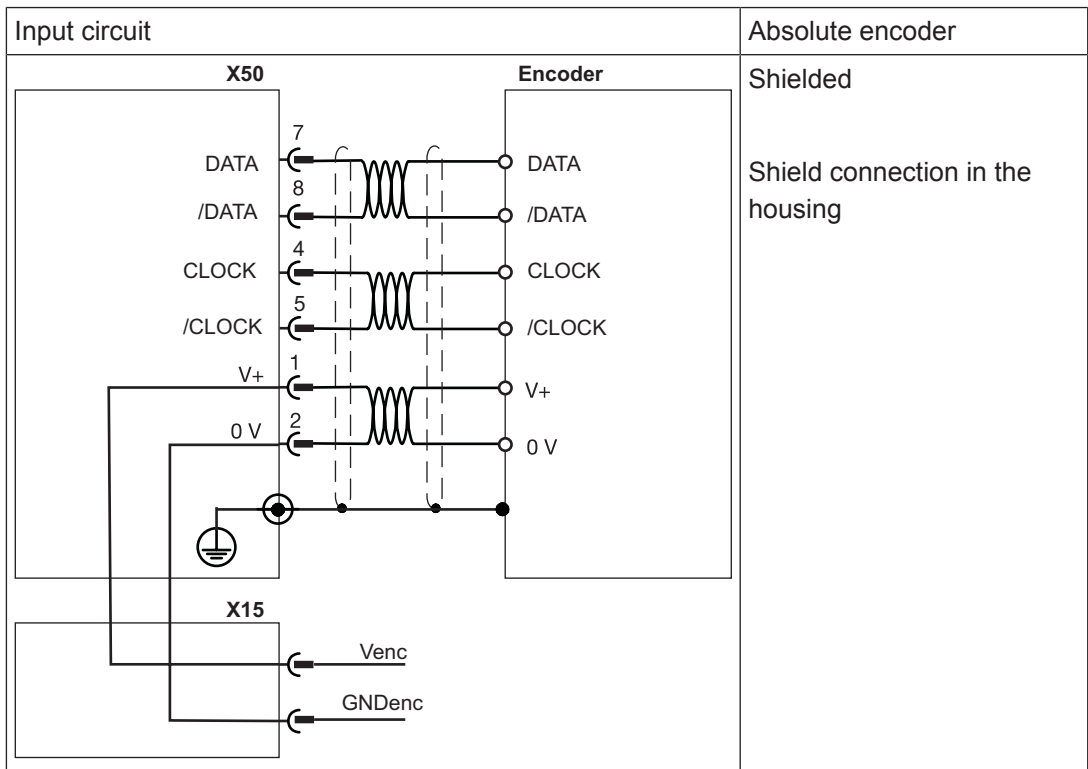

Connection

6 Commissioning

6.1 Safety guidelines

When commissioning/recommissioning, please note the following:

- ▶ Secure the site in accordance with the regulations (barrier, warning signs etc.). The system may only be commissioned/recommissioned by qualified personnel.
- ▶ Please refer to the information and specifications stated in the operating manual of the relevant programmable control system.
- ▶ During commissioning/recommissioning, make sure that no personal injury and/or material damage can occur, even if the plant/machine moves unintentionally.
- ▶ When commissioning the safety module, please read the safety guidelines for the Drive controller.



DANGER!

Risk of electrocution!

Never wire the electrical connections for the Drive controller while the system is live.

Switch off the mains voltages and 24 V supply!

Make sure that the control cabinet is made safe, e.g. through an access lock or warning signs. Do not switch on the voltages until the system is commissioned!



WARNING!

Risk to life from the automatic start-up of the motor!

The motor can start moving immediately after configuration of the safety module if the Autostart option (parameter A34) has been set in the drive configuration:

- ▶ Appropriate measures should be taken so that the start of the machine does not create a hazardous situation.
 - after the safety module has booted
 - when recommissioning after a fault



INFORMATION

The Safe Restart Lock (SRL) safety function can be used to prevent unexpected automatic start-up of the motor.

6.2 Initial commissioning

Requirements for commissioning

- ▶ The drive controller is ready for commissioning (see operating manual for the drive controller).
- ▶ The safety module must be included in the commissioning software for the drive controller.
- ▶ The serial number of the safety module is known. It can be read as follows via Parameter S54 of the drive controller:
 - Activating the parameter list in the commissioning software DriveControlSuite.
 - Via the display of the SD6 drive controller



INFORMATION

During commissioning, the serial number must be confirmed in the safety configuration.

1. Wiring the safety module



INFORMATION

Please note the guidelines given under "Wiring".

- ▶ Connect the reference potential for the inputs (X14/5) and the supply voltage for the outputs (X15/1).



INFORMATION

Do not switch on the supply voltage at this point.

Wire the inputs and outputs that are to be configured.

- ▶ Note that the SS1_ACT input for the SS1 safety function must always be connected. (Connection of the STO_ACT input is optional).

2. Connecting the configuration PC to the drive controller

- ▶ Connect the PC to the drive controller.

3. Switching on the supply voltage

- ▶ Switch on all the supply voltages for the drive controller and the safety module.
 - ⇒ The display shows: STÖBER ANTRIEBSTECHNIK SD6A
 - ⇒ The display shows: Status display self-test

You will see the ready state of the drive controller and the safety module on the display of the drive controller. A description of the status output of the safety module is provided in the following chapter [Safety module operation](#) [168].

- ⇒ The system starts up and boots (RUNUP).

Further information is provided in Chapter [Operating states](#) [169].

The safety module switches to the STO_FAULT state.



INFORMATION

The safety module is provided by the factory without a safety configuration, thus the system stops booting when it has reached the fault state (STO_FAULT) during commissioning.

The display shows:

<p>Error</p> <hr/> <p>50: Safety module</p> <p>Cause of event</p> <p>12: SafeKfg. missing</p>

4. Starting DriveControlSuite and configuring the safety module


- ▶ Start the commissioning software DriveControlSuite.
- ▶ Plan and configure your drive system.
(More detailed information may be found in the commissioning instructions for the SD6 drive controller.)

5. Configuring the safety module via PASmotion



INFORMATION

You will find additional useful recommendations and function descriptions for the safety functions in the online help of the configurator.

- ▶ In the project tree, mark the drive controller with the SE6 safety module to be configured.
- ▶ Click on " Safety Configuration"
 - ⇒ → The configuration tool PASmotion opens.
- ▶ The following basic settings for offline operation are mandatory:
 - Define passwords
 - Defining units (optional)
(The units are independent of the drive controller's axis model.)
 - External encoder (optional)
 - Configuring motor
 - Configure the safety function SS1 Safe stop 1
 - Assign inputs and outputs
- ▶ Additional configuration is optional.

6. Downloading the safety configuration

Prerequisites for download of the safety configuration

- ▶ The corresponding safety configuration was selected in PASmotion.
- ▶ The safety configuration has been created and saved in the offline mode.
- ▶ You have read the serial number for the safety module contained in parameter S54 via the SD6 display or the parameter list of the DriveControlSuite.
- ▶ Switch on the SD6 drive controller and establish an online connection to it.
 - ⇒ Once the connection to the drive controller has been established, the safety configurations are compared. As there is no configuration as yet during commissioning, PASmotion defines various safety configurations.
- ▶ Select **Next**.
- ▶ Confirm the correct serial number of the safety module.
- ▶ Select **Next**.
- ▶ Select **Download**.
 - ⇒ The "Download successfully completed" window (green circle with tick) opens.
- ▶ Select **Done**.

Further information on the download can be found in the safety module's online help.

7. Saving the configuration to the safe drive controller

- ▶ Press the diskette symbol on the drive controller or save the configuration in the DriveControlSuite using the "Save values" assistant.
 - ⇒ The configuration is saved to the paramodule of the drive controller.

You have successfully transferred the configuration from the safety module to the drive controller and saved it.

8. Safety tests

Please note the following chapter [Safety checks](#) [ 166].

6.3 Restarting after device replacement

The SD6A drive controller with safety module has been replaced with a new device.

The configuration stored on the paramodule is to be installed in the new device.

Proceed as follows:


Insert the paramodule in the new drive controller

- ▶ Remove the paramodule supplied with the drive controller.
- ▶ Insert the paramodule with the saved configuration into the drive controller.

2. Switching on the supply voltage

- ▶ Switch on the supply voltage to the drive controller.
 - ⇒ The display shows: STÖBER ANTRIEBSTECHNIK SD6A
 - ⇒ The display shows: Status display self-test

The display shows:

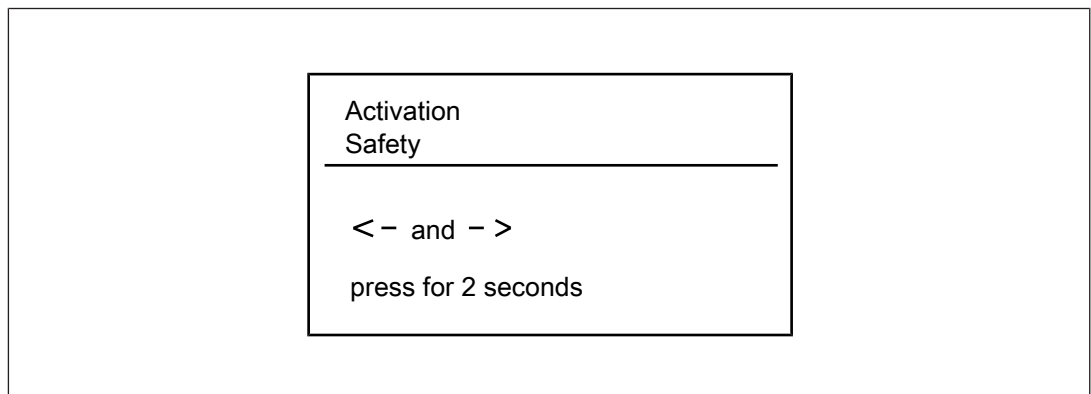


3. Saving the configuration from the safety module


- ▶ Press the right and left arrow keys simultaneously for two seconds.

If you do not press the arrow keys within 60 seconds, the data transfer process will be aborted (see Item 5.).

The display shows:

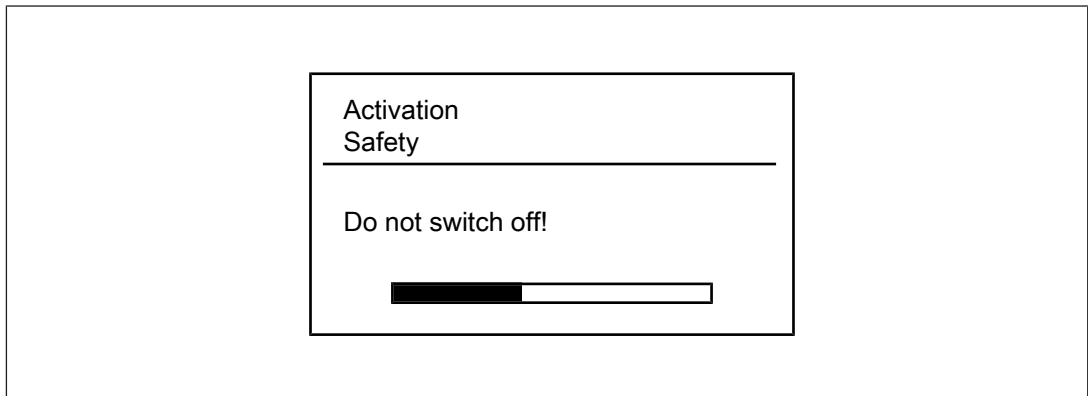


The display shows:

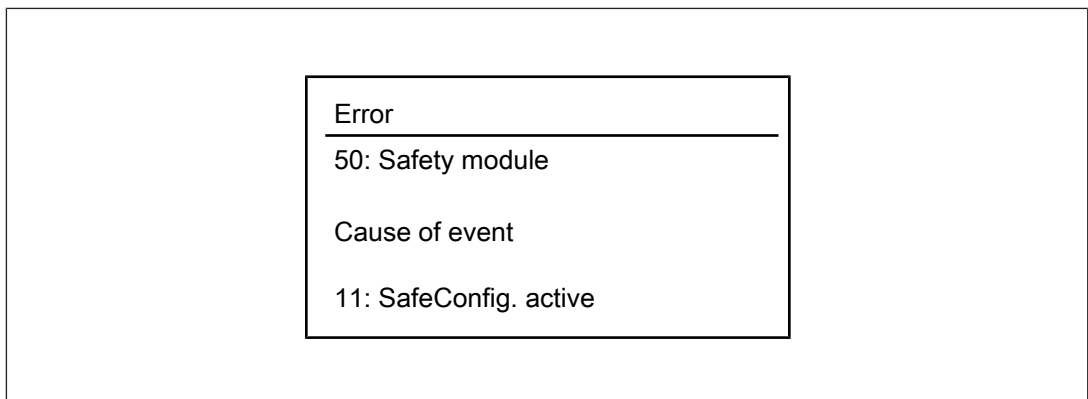

4. Completing the device replacement

- ▶ Acknowledge the message

The display shows:

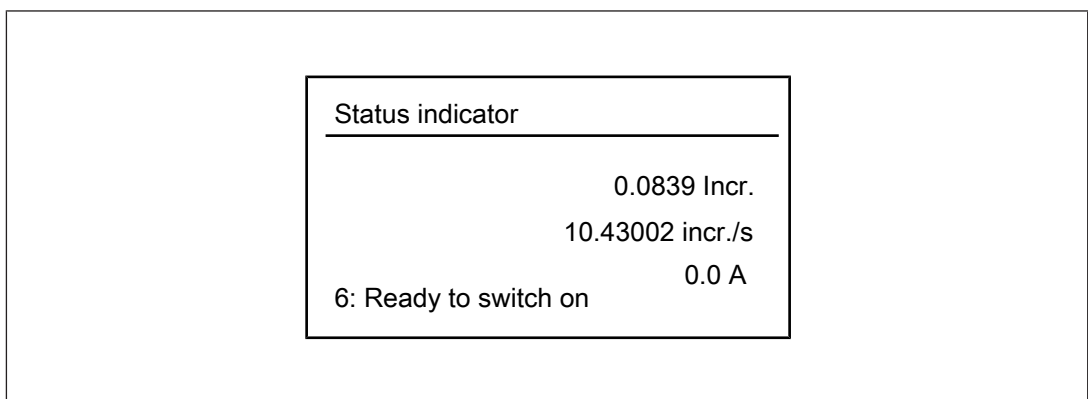

- ▶ The drive controller is ready to be switched on.

**INFORMATION**

The drive controller only changes to "Ready for switch-on" once the following basic requirements have been met:

- The STO safety function is inactive
- The intermediate circuit of the drive controller has been charged
- The device release is inactive

The E49 parameter of the drive controller indicates why the drive controller is not ready to be switched on.

5. Transferring the paramodule configuration was aborted

The right and left arrow keys (see Items 2. and 3.) were not pressed for two seconds within a period of 60 seconds.

⇒ Termination of data transfer

The display shows:


Error

50: Safety module

Cause of event

13: ErrActivation

6. Safety tests

Please note the following chapter [Safety checks](#) [ 166].

6.4 Safety checks

The safety module SE6 is a safety component under the Machinery Directive in accordance with Annex V. It guarantees functional safety against hardware and firmware errors, for example. However, it does not guarantee the safety of the overall process, nor of the configuration.

The machine manufacturer must check and verify the functionality of the employed safety functions.

- ▶ The safety function may only be checked by qualified personnel.

The safety function must be checked

- ▶ After initial commissioning
- ▶ After changing the configuration of the safety functions
- ▶ After exchanging the safety module or the Drive controller

A full check comprises

- ▶ proper execution of the employed safety functions of the safety module SE6
- ▶ proper execution of the overall safety function (e.g. combination and integration of safety functions)
- ▶ Inspection of the parameters

The basis for testing

- ▶ are the requirements for the safety functions of the safety module SE6 resulting from the risk analysis of the machine or process
- ▶ is the description of the safety module SE6 and its safety functions in accordance with this operating manual
- ▶ are all safety-related parameters and values of the safety functions used

The result of the test must be documented in a test report. This report must contain the following:

- ▶ a description of the application, including a diagram
- ▶ a description of the safety-related components (including software versions) used by the application
- ▶ a list of the safety functions used
- ▶ the results of all tests related to these safety functions
- ▶ a list of all safety-related parameters and their values
- ▶ check sums, test dates and confirmation by the test staff

Safety tests conducted on equivalent applications may be carried out as an individual type test of the equivalent application, provided that it can be ensured that the safety functions are configured as intended for all devices.

**INFORMATION**

If any of the parameters for the safety functions have been changed, the check must be repeated and this must be recorded in the test report.

Brake test

Depending on the application, the regular checks may include a test of the internal (motor brake) and external brake(s).

**INFORMATION**

Refer to [Safe Brake Test \(SBT\)](#) [ 128] for the function of the safe brake test.

7 Safety module operation

The conditions for the RUN operating status are:

- ▶ Commissioning is complete
- ▶ The safety module contains the configuration data
- ▶ The safety functions have been tested
- ▶ The drive controller display indicates:
Status display 6: Ready for switching on (parameter E80)

During operation

- ▶ the signal level and edge change are monitored at the safe inputs of the safety module.
- ▶ the safety functions are performed in accordance with the configuration.
- ▶ the switchability of the outputs is monitored.
- ▶ permanent hardware self-tests are carried out.

7.1 Operating states

The safety module is always in a clearly defined operating status.

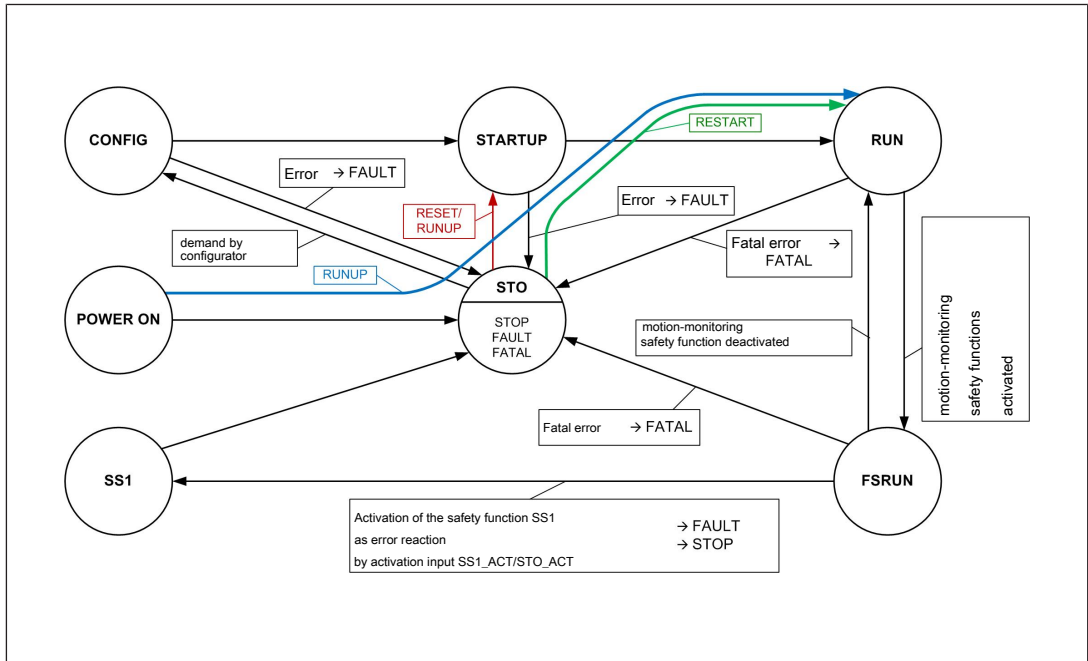




Fig.: Operating statuses

CONFIG	<p>Transfer of the configuration to the safety module.</p> <p>The motor is switched to torque/force-free in the CONFIG operating status (STO is active).</p> <p>Transition to STARTUP state: Configuration downloaded without error</p> <p>Transition to STO state: incorrect configuration data</p>
POWER ON	<p>The supply voltage is present.</p> <p>Transition to STO state: after applying supply voltage</p>
SS1	<p>SS1 is performed:</p> <ul style="list-style-type: none"> ▶ as error reaction function (FAULT) ▶ by the activation input SS1_ACT (STOP) ▶ by internal request <ul style="list-style-type: none"> – e.g. demand from "Download configuration" tool <p>Transition to STO state:</p> <ul style="list-style-type: none"> ▶ after FATAL ▶ when exceeding brake ramp (optional) ▶ after STO delay time has elapsed
STARTUP	<p>Self-test of safety module is performed.</p> <p>Transition to STO state: after FAULT</p> <p>Transition to RUN state: no error present</p>

STO	The motor is switched to torque-free/force-free. Depending on the cause, the following (sub-)statuses are active:
	STOP – Stop Switching motor to torque-free/force-free by: <ul style="list-style-type: none"> ▶ Activation input SS1_ACT or ▶ Activation input STO_ACT (optional)
	FAULT – Error Switching motor to torque-free/force-free via the safety function SS1, as a result of an error reaction: <ul style="list-style-type: none"> ▶ Limit value violation ▶ Internal error from self-test
	FATAL – Fatal error Switching motor to torque-free/force-free via the safety function STO, as a result of an error reaction: <ul style="list-style-type: none"> ▶ Safety-critical error that requires shutdown of the entire module ▶ Non-remediable software errors ▶ Errors that are neither revealed by a self-test nor constitute a limit value violation
RUN	Safety module in operation: no motion-monitoring safety function is activated Transition to STO state: after FATAL Transition to FSRUN state: a motion-monitoring safety function is activated
FSRUN	Safe operation: at least one motion-monitoring safety function is activated Transition to STO state: after FATAL Transition to SS1 state: after STOP or after FAULT Transition to RUN state: motion-monitoring safety function is deactivated
RESET	Action that triggers the RESTART (see Safe restart of the machine  49) (see Resetting (RESET) the safety module  50)
RUNUP	Run-up
RESTART	Restart

**INFORMATION****Motion-monitoring safety function**

Motion-monitoring safety functions are all safety functions with the exception of SSO, SBC SRL and SS1, if brake ramp monitoring is not configured.

7.2 RUNUP (booting)

The safety module passes through the following states during the runup:

POWER ON → STO → STARTUP → RUN

Once switched on (POWER ON), the system enters the STO safe state. The booting process continues automatically to the STARTUP state. During the STARTUP, the safety module carries out a self-test. Once this has been completed, the system automatically enters the RUN state.

During the runup, the system passes through the aforementioned states without user action.

7.3 RESTART

The safety module passes through the following states during the restart:

STO → STARTUP → RUN



INFORMATION

The SE6 safety module provides various optional configuration options for a restart.

The RESTART function can be optionally configured via the safety functions Safe Restart Lock (SRL) and Safe Stop 1.

(See [Safe Restart Lock \(SRL\)](#) [137])

Further information about a RESET may be found in Chapters

[Safe restart of the machine](#) [49]

[Resetting \(RESET\) the safety module](#) [50].

7.4 Display elements

The status display of the safety module is shown on the drive controller display.

Display	Description
<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>STÖBER DRIVE TECHNOLOGY SD6A [Current device firmware]</p> </div>	<p>Display after POWER ON</p>
<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">Status indicator</p> <hr style="width: 50%; margin: 0 auto;"/> <p style="text-align: center; margin-top: 20px;">Self test</p> </div>	<p>Display after POWER ON The safety module carries out a self-test.</p>
<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">Status indicator</p> <hr style="width: 50%; margin: 0 auto;"/> <p style="text-align: right; margin-top: 10px;">0.0839 Incr. 10.43002 incr./s 0.0 A</p> <p>6: Ready to switch on</p> </div>	<p>The drive controller is ready to be switched on. The safety module is in the RUN state.</p>
<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">...Safety active...</p> <hr style="width: 50%; margin: 0 auto;"/> <p style="text-align: right; margin-top: 10px;">0.0839 Incr. 10.43002 incr./s 0.0 A</p> <p>6: Ready to switch on</p> </div>	<p>The drive controller is ready to be switched on. The safety module is in the FSRUN state.</p>
<div style="border: 1px solid black; padding: 10px;"> <p style="text-align: center;">Error</p> <hr style="width: 50%; margin: 0 auto;"/> <p>50: Safety module</p> <p style="margin-top: 10px;">Cause of event</p> <p>12: SafeKfg. missing</p> </div>	<p>Display in the STO_FAULT state Safety configuration missing</p>



Display	Description
<div style="border: 1px solid black; padding: 5px;"> <p>Status indicator</p> <hr/> <p style="text-align: right;">0.0839 Incr. 10.43002 incr./s 0.0 A</p> <p>31: STO active</p> </div>	<p>Display in the STO state STOP, FAULT, FATAL</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Activation Safety</p> <hr/> <p style="text-align: center;">< - and - ></p> <p style="text-align: center;">press for 2 seconds</p> </div>	<p>Following device replacement Request to press pushbuttons Saving of paramodule configuration to new drive controller.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Save values</p> <hr/> <p style="text-align: right;">30%</p> <div style="border: 1px solid black; width: 100%; height: 10px; margin-top: 5px;"> <div style="background-color: black; width: 30%;"></div> </div> </div>	<p>After pressing the diskette pushbutton or starting Action A00: Save values Acceptance of configuration and saving to the paramodule.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Activation Safety</p> <hr/> <p style="text-align: center;">Do not switch off!</p> <div style="border: 1px solid black; width: 100%; height: 10px; margin-top: 5px;"> <div style="background-color: black; width: 30%;"></div> </div> </div>	<p>Following device replacement Display during process of saving the configuration from the paramodule to the SE6.</p>
<div style="border: 1px solid black; padding: 5px;"> <p>Error</p> <hr/> <p>50: Safety module</p> <p>Cause of event</p> <p>11: SafeConfig. active</p> </div>	<p>Following device replacement The paramodule saving process was successful. The acceptance of the new safety configuration must be consciously acknowledged.</p>

Display	Description
<div style="border: 1px solid black; padding: 5px;"> <p>Error</p> <hr/> <p>50: Safety module</p> <p>Cause of event</p> <p>13: ErrActivation</p> </div>	<p>Following device replacement</p> <p>The data could not be copied from the para-module.</p>

7.5 Messages

Information about safety module messages can be found in the separate document "SE6 safety module – Diagnosis".

7.6 Diagnostic tests

- ▶ The safety module has a two-channel structure with internal diagnostic tests, thus no external safety system is required.
- ▶ The test functions for the digital inputs and outputs are described in the chapter [Digital inputs and outputs](#) [ 32].
- ▶ The encoder is subject to forced dynamisation, see [Motor encoder fault detection](#) [ 43].

8 Change, maintenance, decommissioning

8.1 Change

It may be necessary to change a process/machine because:

- ▶ A safety requirement has changed
- ▶ A systematic error has occurred
- ▶ There are new operational or production requirements
- ▶ The process cycle/machine has changed

Before changing a safe process/safe machine, a preparatory analysis must be carried out. The following effects must be analysed:

- ▶ How the changes will affect the safety of the process/machine
- ▶ How the changes will affect the safety functions of the safety module

The change requirements can be combined in a catalogue of requirements. This should include:

- ▶ Detected hazards
- ▶ Desired changes
- ▶ Reason for the changes

The change should only be carried out by persons with the necessary knowledge and experience (competent persons).



INFORMATION

- Note the information about assembly/disassembly in the operating manual for the Drive controller.
- Following a change, if the safety analysis has shown that safety functions need to be validated and tested, the change itself must be tested, as must the course of the entire process. This must be taken into account for recommissioning.
- Please note the requirements for recommissioning after a change.



NOTICE

The check sums can be used to establish whether safety-related changes have been made and therefore whether safety functions need to be validated and tested. However, a comparison may only be used as an additional aid. Under no circumstances can it replace a prior safety analysis for the changes.

8.2 Maintenance

No maintenance work is necessary on a SE6 safety module. Please return any faulty drive controllers with integrated safety modules to Stöber.

8.3 Decommissioning

Note the mission time t_M stated in the safety-related characteristic data of the SE6 safety module.

Note the information about assembly/disassembly in the operating manual for the drive controller.

When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

9 Field bus communication

Information about field bus communication is available in the operating manual for drive controller DS6. The parameters for the safety module are in the "S-Group".

10 Technical details

General	
Approvals	CE
Application range	Failsafe
Absolute encoder input	
Number of counter inputs	1
Type of counter inputs	SSI encoder
Supply voltage for absolute encoder	5 ... 30 VDC
Output signal (clock)	Differential signal (RS-422/TTL)
Max. number of bits on the counter input	12 - 28 Bit
Transmission rate	300 kHz
Coding of the input signal	Binary, Gray
Signal at the data input	Differential signal (RS-422/TTL)
Incremental encoder input	
Number of inputs	1
Supply voltage for incremental encoders	5 ... 30 VDC
Signal level at "1"	$\geq 2,5 \text{ V}$
Signal level at "0"	$\leq 0,5 \text{ V}$
Phase position for the differential signals A, /A and B, /B	$90^\circ \pm 30^\circ$
Maximum cutoff frequency	0,5 MHz
Inputs	
Number	8
Signal level at "0"	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input current range	3,5 - 10,8 mA
Pulse suppression	1 - 10 ms
Semiconductor outputs	
Number of positive-switching single-pole semiconductor outputs	5
External supply voltage	24 V
Voltage tolerance	-15 %/+20 %
Typ. output current at "1" signal and rated voltage of semiconductor output	0,5 A
Residual current at "0" signal	0,02 mA
Monitoring threshold of semiconductor output	9 V
Max. duration of on time during self test	200 μs
Max. duration of off time during self test	200 μs
Repetition time of the on/off test	1,5 s
Galvanic isolation	yes
Short circuit-proof	yes
Semiconductor outputs, 2-pole	
Number of dual-pole semiconductor outputs	1
Max. current at ambient temperature $> 45^\circ\text{C}$	2,5 A

Semiconductor outputs, 2-pole	
Typ. output current at "1" signal and rated voltage of semiconductor output	3,6 A
Max. switching frequency	1 Hz
Residual current at "0" signal	0,5 mA
Short circuit-proof	yes
Brake output BD1/BD2	
Max. current	3 A
Mean time to failure (MTTF)	1098 Jahre
Times	
Cycle time, processor system	3 ms
Delay time, pulse disabler	10 ms
Environmental data	
Climatic suitability	EN 60068-2-1
Ambient temperature	
In accordance with the standard	EN 60721-3-3
Temperature range	0 - 55 °C
Storage temperature	
In accordance with the standard	DIN EN 60721-3-1
Temperature range	-25 - 55 °C
Max. change	20 K/h
Climatic suitability	
In accordance with the standard	EN 60721-3-3
Humidity	85 % r.h.
Condensation during operation	Not permitted
EMC	EN 61800-3
Vibration	
In accordance with the standard	EN 60721-3-3
Airgap creepage	
In accordance with the standard	EN 61800-5-1
Overvoltage category	III
Pollution degree	2
Protection type	
In accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54
Mechanical data	
Dimensions	
Height	15,6 mm
Width	65,6 mm
Depth	260 mm
Weight	95 g

Where standards are undated, the 2017-01 latest editions shall apply.

10.1 Safety characteristic data

The safety module SE6 carries out drive-related safety functions, as described in the EN 61800-5-2 standards, for example.

These safety functions generally only form part of an overall safety function that may consist of various subsystems.

The figure shows subsystems involved in the overall safety function as an example.

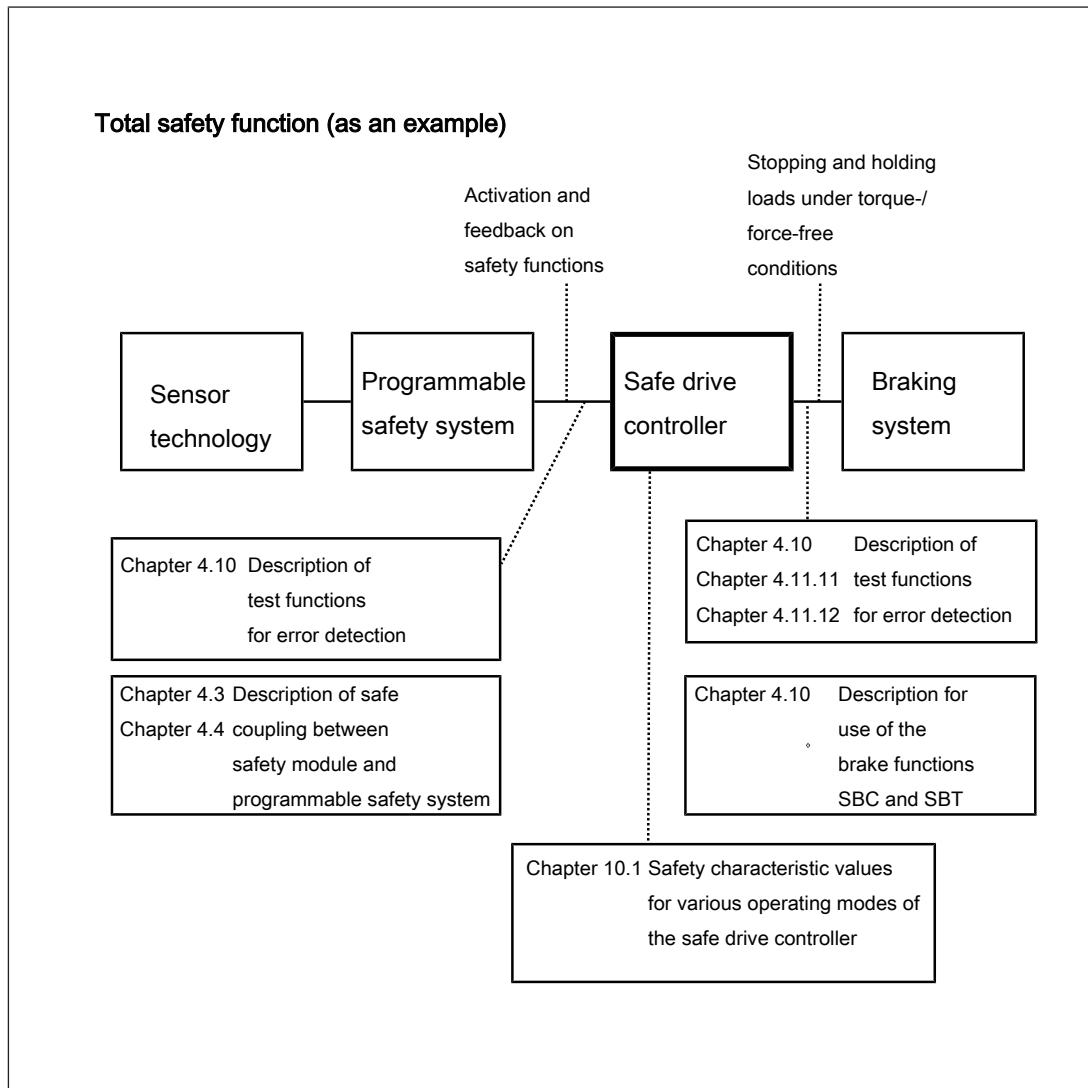


Fig.: Overall safety function and safety-related subsystems

A "safe drive controller" is a structural and functional unit consisting of

- ▶ an SD6 drive controller with integrated SE6 safety module

To determine the safety integrity of the overall safety function, this subsystem operating manual for the safe drive controller **subsystem**

- ▶ describes the safety functions.
- ▶ provides the safety characteristic data for various operating modes.
- ▶ describes the test functions for fault detection of other subsystems.

Operating modes

The operating modes are divided into various subsystem configurations for **safe drive controllers**.

They differ in

- ▶ the MTTF values of the sensor technology for safe position detection.

A set of safety-related characteristic data is assigned to a combination of a safety function and an operating mode.

The operating modes differ with regard to the MTTF values of the sensor technology used for position detection

Safe speed and position values are processed for the safe motion/monitoring functions of the safety module. Error detection takes place by cross-comparing 2 different sensors.

The following combinations of safe position detection sensors can be used:

- ▶ Motor encoder and internal system variables
- ▶ Motor encoder and external encoder

Also see chapter [Motor encoder fault detection](#)  43]

To simplify the calculation, sensor combinations with assumed failure rates are included in the safety-related characteristic data. The following differences in operating modes result:

- ▶ Operating mode **Encoder MTTF $\geq 10a$**
 - Motor encoder with MTTF ≥ 10 years and internal system variables
 - Motor encoder with MTTF ≥ 10 years and external encoder with MTTF ≥ 10 years
 - According to EN ISO 13849-1, an MTTF_D of ten years can be assumed for a component if no manufacturer data are available.
 - The service life of the motor encoder must be $T_M = 20$ years.
- ▶ Operating mode **Encoder MTTF $\geq 57a$**
 - Motor encoder with MTTF ≥ 57 years and internal system variables
 - Motor encoder with MTTF ≥ 57 years and external encoder with MTTF ≥ 57 years
 - The MTTF value of the encoder employed must be reviewed.
 - The service life of the motor encoder must be $T_M = 20$ years.

Assuming that all errors are dangerous, MTTF_D = MTTF can be set. The characteristic data MTTF is a property of the sensor, which can only be stated by the manufacturer.

Overview of operating modes and safety-related characteristic data

Operating mode	Description	Safety integrity Limitations
Encoder MTTF $\geq 10a$	<ul style="list-style-type: none"> ▶ Position sensors possible in this operating mode <ul style="list-style-type: none"> – Motor encoder with MTTF ≥ 10 years and internal system variables – Motor encoder and external encoder with MTTF ≥ 10 years ▶ Safety functions that can be used in this operating mode <ul style="list-style-type: none"> – Stop functions: STO, SS1, SS2 – Motion functions: SLS, SSR, SOS, SDI, SLI, SLP – Monitoring functions: SLS-M, SSR-M, SOS-M, SDI-M, SLI-M, SLP-M – Brake management: SBC, SBT – Other safety functions: SRL, SSO ▶ External interfaces that can be used in this safety function operating mode: <ul style="list-style-type: none"> – 2 x safe digital input, 1-pole – 2 x safe digital output, 1-pole – 1 x safe digital output, 2-pole 	<p>SIL 2, PL d (Cat. 3)</p> <p>Limitation imposed by the failure rate of the encoder system</p>
Encoder MTTF $\geq 57a$	<ul style="list-style-type: none"> ▶ Position sensors possible in this operating mode <ul style="list-style-type: none"> – Motor encoder with MTTF ≥ 57 years and internal system variables – Motor encoder and external encoder with MTTF ≥ 57 years ▶ Safety functions that can be used in this operating mode <ul style="list-style-type: none"> – Stop functions: STO, SS1, SS2 – Motion functions: SLS, SSR, SOS, SDI, SLI, SLP – Monitoring functions: SLS-M, SSR-M, SOS-M, SDI-M, SLI-M, SLP-M – Brake management: SBC, SBT – Other safety functions: SRL, SSO ▶ External interfaces that can be used in this safety function operating mode: <ul style="list-style-type: none"> – 2 x safe digital input, 1-pole – 2 x safe digital output, 1-pole – 1 x safe digital output, 2-pole 	<p>SIL 3, PL e (Cat. 4)</p>



NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN 62061 SIL CL	EN 62061 PFH _D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
–	PL d	Cat. 3	SIL CL 2	1,12E-09	SIL 2	9,40E-05	20
–	PL e	Cat. 4	SIL CL 3	5,13E-10	SIL 3	4,45E-05	20

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

10.2 Classification according to ZVEI, CB24I

The following tables describe the classes and specific values of the product interface and the classes of interfaces compatible with it. The classification is described in the ZVEI position paper "Classification of Binary 24 V Interfaces - Functional Safety aspects covered by dynamic testing".

Inputs

Source			Drain			
Safety control system	C0		Safety module	C0		

Drain parameters	Min.	Typ.	Max.
Test impulse duration	-	-	10 ms
Test impulse interval	40 ms	-	
Input resistance	2,2 kOhm	-	
Capacitive load	-	-	68 nF

Safe 1-pole HL outputs

Source			Drain			
Safety module	C2		Safety control system	C2		

Source parameters	Min.	Typ.	Max.
Test impulse duration	-	-	200 µs
Rated current	-	-	0,5 A
Capacitive load	-	-	0,5 µF

Safe 2-pole HL outputs

Source			Drain			
Safety module	D2		Brake	D2		

Source parameters	Min.	Typ.	Max.
Test impulse duration	150 µs	-	350 µs
Test impulse interval	600 ms	-	
Leakage current in OFF-state	-	-	0,5 mA
Nominal current in ON-state	-	-	3,6 A
Capacitive load	-	-	0,5 µF

Source parameters	Min.	Typ.	Max.
Inductive load	-	-	800 mH

11 **EC declaration of conformity**

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Authorised representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

Safe Brake Control (SBC)

Safety function in accordance with EN 61800-5-2: "The SBC function supplies a safe output signal or signals to drive an external mechanical brake or brakes."

Safe Brake Test (SBT)

Supplementary safety function: The safety function SBT tests the proper functioning of a closed-current brake.

Safe Direction (SDI)

Safety function in accordance with EN 61800-5-2: "The SDI function prevents the motor shaft from moving in an unintended direction."

Safe Operating Stop (SOS)

Safety function in accordance with EN 61800-5-2: "The SOS function prevents the motor from deviating from the stop position by more than a defined amount. The PDS(SR) (electrical power drive system) supplies power to the motor that enables it to withstand the engagement of external forces."

Safe Restart Lock (SRL)

This supplementary safety function prevents uncontrolled start-up following a fault / interruption.

Safe Speed Range (SSR)

Safety function in accordance with EN 61800-5-2: "The SSR function holds the motor speed within defined limit values."

Safe Status Output (SSO)

Supplementary safety function: This is used for diagnostic purposes and provides the safe outputs with status information.

Safe Stop 1 (SS1)

Safety function in accordance with EN 61800-5-2: "The PDS(SR) performs one of these functions: a) Either initiates and controls the length of the motor delay within defined limits and initiates the STO function (see 4.2.2.2) if the motor speed falls below a defined limit

value, or b) Initiates and monitors the length of the motor delay within defined limits and initiates the STO function if the motor speed drops below a defined limit value, or c) Initiates the motor delay and then initiates the STO function after an application-specific time delay."

Safe Stop 2 (SS2)

Safety function in accordance with EN 61800-5-2: "The PDS(SR) performs one of these functions: a) Either initiates and controls the length of the motor delay within defined limits and initiates the SOS function (see 4.2.3.1) if the motor speed falls below a defined limit value, or b) Initiates and monitors the length of the motor delay within defined limits and initiates the SOS function if the motor speed drops below a defined limit value, or c) Initiates the motor delay and then initiates the SOS function after an application-specific time delay."

Safe Torque Off (STO)

Stop function in accordance with EN 61800-5-2: "No power that can cause a rotation (or in the case of a linear motor, a movement) is supplied to the motor. The PDS(SR) (electrical power drive system) does not supply any power to the motor that can generate torque (or in the case of a linear motor, force)."

Safely Limited Increment (SLI)

Safety function in accordance with EN 61800-5-2: "The SLI function prevents the motor shaft from exceeding the specified limit of position increment."

Safely Limited Position (SLP)

Safety function in accordance with EN 61800-5-2: "The SLP function prevents the motor shaft from exceeding the specified position limit(s)."

Safely Limited Speed (SLS)

Safety function in accordance with EN 61800-5-2: "The SLS function prevents the motor from exceeding the specified speed limit."

Safely Monitored Direction (SDI-M)

Supplementary safety function: The monitoring function SDI-M is based on the normative safety function SDI. Exceeding the parameterised limit values is reported but does not trigger any error reaction function.

Safely Monitored Position (SLP-M)

Supplementary safety function: The monitoring function SLP-M is based on the normative safety function SLP. Exceeding the parameterised limit values is reported but does not trigger any error reaction function.

Safely Monitored Speed (SLS-M)

Supplementary safety function: The monitoring function SLS-M is based on the normative safety function SLS. Exceeding the parameterised limit values is reported but does not trigger any error reaction function.

Safely Monitored Speed Range (SSR-M)

Supplementary safety function: The monitoring function SSR-M is based on the normative safety function SSR. Exceeding the parameterised limit values is reported but does not trigger any error reaction function.

Right of technical changes reserved.

STÖBER ANTRIEBSTECHNIK GmbH + Co. KG

Kieselbronner Straße 12

75177 Pforzheim

Germany

Tel. +49 7231 582-0

mail@stoerber.de

www.stoerber.com

24 h Service Hotline +49 7231 582-3000